# ADSP-218x DSP Instruction Set Reference

Revision 2.0, November 2004

Part Number 82-002000-01

Analog Devices, Inc. One Technology Way Norwood, Mass. 02062-9106



## **Copyright Information**

©2004 Analog Devices, Inc., ALL RIGHTS RESERVED. This document may not be reproduced in any form without prior, express written consent from Analog Devices, Inc.

Printed in the USA.

## Disclaimer

Analog Devices, Inc. reserves the right to change this product without prior notice. Information furnished by Analog Devices is believed to be accurate and reliable. However, no responsibility is assumed by Analog Devices for its use; nor for any infringement of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under the patent rights of Analog Devices, Inc.

## **Trademark and Service Mark Notice**

The Analog Devices logo, EZ-ICE, and VisualDSP++ are registered trademarks of Analog Devices, Inc.

All other brand and product names are trademarks or service marks of their respective owners.

## **INTRODUCTION**

Audience	1-1
Contents Overview	1-2
Development Tools	1-4
Additional Product Information	1-7
For Technical or Customer Support	1-7
What's New in This Manual	1-8
Related Documents	1-8
Conventions	1-8

## **PROGRAMMING MODEL**

Overview 2	2-1
Data Address Generators 2	2-2
Always Initialize L Registers 2	2-4
Program Sequencer 2	2-4
Interrupts 2	2-5
Loop Counts 2	2-5
Status and Mode Bits 2	2-6
Stacks	2-6

Computational Units	
Bus Exchange	
Timer	
Serial Ports	
Memory Interface and SPORT Enables	
Program Example	2-10
Example Program: Setup Routine Discussion	2-13
Example Program: Interrupt Routine Discussion .	
Hardware Overlays and Software Issues	2-16
Libraries and Overlays	
Interrupts and Overlays	
Loop Hardware and Overlays	2-19

### SOFTWARE EXAMPLES

Overview	-1
System Development Process	-3
Single-Precision Fir Transversal Filter	-5
Cascaded Biquad IIR Filter 3-	-7
Sine Approximation	-9
Single-Precision Matrix Multiply 3-1	. 1
Radix-2 Decimation-in-Time FFT 3-1	.3
Main Module 3-1	.4
DIT FFT Subroutine 3-1	. 6
Bit-Reverse Subroutine 3-2	21
Block Floating-Point Scaling Subroutine	22

## **INSTRUCTION SET**

ALU Instructions	4-31
Add/Add With Carry	4-32
Subtract X-Y/Subtract X-Y With Borrow	4-35
Subtract Y-X/Subtract Y-X With Borrow	4-39
Bitwise Logic: AND, OR, XOR	4-42
Bit Manipulation: TSTBIT, SETBIT, CLRBIT, TGLBIT	4-45
Clear: PASS	4-48
Negate	4-52
NOT	4-54
Absolute Value: ABS	4-56
Increment	4-59
Decrement	<b>4-6</b> 1
Divide Primitives: DIVS and DIVQ	4-63
Generate ALU Status Only: NONE	4-71
MAC Instructions	4-73
Multiply	4-74
Multiply With Cumulative Add	4-78
Multiply With Cumulative Subtract	4-82
Squaring	4-86
MAC Clear	4-90
MAC Transfer MR	4-92
Conditional MR Saturation	4-94

Shifter Instructions
Arithmetic Shift 4-97
Logical Shift 4-100
Normalize
Derive Exponent 4-100
Block Exponent Adjust 4-110
Arithmetic Shift Immediate 4-112
Logical Shift Immediate 4-114
Move Instructions
Register Move 4-117
Load Register Immediate 4-119
Data Memory Read (Direct Address) 4-122
Data Memory Read (Indirect Address) 4-124
Program Memory Read (Indirect Address) 4-120
Data Memory Write (Direct Address) 4-128
Data Memory Write (Indirect Address) 4-130
Program Memory Write (Indirect Address) 4-133
IO Space Read/Write 4-135
Program Flow Instructions 4-137
JUMP 4-138
CALL
JUMP or CALL on Flag In Pin 4-142
Modify Flag Out Pin 4-144
RTS (Return from Subroutine) 4-140

	RTI (Return from Interrupt)	4-148
	Do Until	4-150
	Idle	4-153
MI	SC Instructions	4-155
	Stack Control	4-156
	TOPPCSTACK	4-159
	Mode Control	4-162
	Interrupt Enable and Disable	4-165
	Program Memory Overlay Register Update	4-166
	Data Memory Overlay Register Update	4-169
	Modify Address Register	4-172
	No Operation	4-174
Mu	ltifunction Instructions	4-175
	Computation With Memory Read	4-176
	Computation With Register-to-Register Move	4-182
	Computation With Memory Write	4-187
	Data and Program Memory Read	4-192
	ALU/MAC With Data and Program Memory Read	4-194

## **INSTRUCTION CODING**

Opcode Definitions A-2
Opcode Mnemonics A-9
AMF ALU / MAC Function Codes A-9
BO A-10
CC A-10
COND Status Condition Codes A-11
CP Counter Stack Pop Codes A-11
D Direction Codes A-12
DD Double Data Fetch Data Memory Destination Codes A-12
DREG Data Register Codes A-12
DV Divisor Codes for Slow Idle Instruction (IDLE (n)) A-14
FIC FI Condition Codes A-14
FO Control Codes for Flag Output Pins (FO, FL0, FL1, FL2) A-14
G Data Address Generator Codes A-15
I Index Register Codes A-15
LP Loop Stack Pop Codes A-15
M Modify Register Codes A-16
PD Dual Data Fetch Program Memory Destination Codes A-16
PP PC Stack Pop Codes A-16
REG Register Codes A-17
S Jump/Call Codes A-18

SF Shifter Function Codes	A-18
SPP Status Stack Push/Pop Codes	A-19
T Return Type Codes	A-19
TERM Termination Codes for DO UNTIL	A-20
X X Operand Codes	A-21
Y Y Operand Codes	A-21
YY	A-21
Z ALU/MAC Result Register Codes	A-22
YY, CC, BO ALU / MAC Constant Codes (Type 9)	A-22
INDEX	

# **1 INTRODUCTION**

The ADSP-218x DSP Instruction Set Reference provides assembly syntax information for the ADSP-218x Digital Signal Processor (DSP). The syntax descriptions for instructions that execute within the DSP's processor core include processing elements, program sequencer, and data address generators. For architecture and design information on the DSP, see the ADSP-218x DSP Hardware Reference.

# Audience

DSP system designers and programmers who are familiar with signal processing concepts are the primary audience for this manual. This manual assumes that the audience has a working knowledge of microcomputer technology and DSP-related mathematics.

DSP system designers and programmers who are unfamiliar with signal processing can use this manual, but should supplement this manual with other texts, describing DSP techniques.

All readers, particularly programmers, should refer to the DSP's development tools documentation for software development information. For additional suggested reading, see the section "Additional Product Information" on page 1-7.

# **Contents Overview**

The Instruction Set Reference is a four-chapter book that describes the instructions syntax for the ADSP-218x DSPs.

Chapter 1, "Introduction", provides introductory information including contacts at Analog Devices, an overview of the development tools, related documentation and conventions.

Chapter 2, "Programming Model", describes the computational units of the ADSP-218x DSPs and provides a programming example with discussion.

Chapter 3, "Software Examples", describes the process to create executable programs for the ADSP-218x DSPs. It provides several software examples that can be used to create programs.

Chapter 4, "Instruction Set", presents information organized by the type of instruction. Instruction types relate to the machine language opcode for the instruction. On this DSP, the opcodes categorize the instructions by the portions of the DSP architecture that execute the instructions.

Appendix A, "Instruction Coding", provides a summary of the complete instruction set of the ADSP-218x DSPs with opcode descriptions.

Each reference page for an instruction shows the syntax of the instruction, describes its function, gives one or two assembly-language examples, and identifies fields of its opcode. The instructions are also referred to by type, ranging from 1 to 31. These types correspond to the opcodes that ADSP-218x DSPs recognize, but are for reference only and have no bearing on programming.

Some instructions have more than one syntactical form; for example, instruction "Multiply" on page 4-73 has many distinct forms.

Many instructions can be conditional. These instructions are prefaced by IF cond; for example:

IF EQ MR = MXO  $\star$  MYO (SS);

In a conditional instruction, the execution of the entire instruction is based on the condition.

The following instructions groups are available for ADSP-218x DSPs:

- "Quick List Of Instructions" on page 4-2—This section provides a a quick reference to all instructions.
- "ALU Instructions" on page 4-31—These instruction specify operations that occur in the DSP's ALU.
- "MAC Instructions" on page 4-72—These instructions specify operations that occur in the DSP's Multiply–Accumulator.
- "Shifter Instructions" on page 4-94—These instructions specify operations that occur in the DSP's Shifter.
- "Move Instructions" on page 4-113—These instructions specify memory and register access operations.
- "Program Flow Instructions" on page 4-133—These instructions specify program sequencer operations.
- "MISC Instructions" on page 4-151—These instructions specify memory access operations.
- "Multifunction Instructions" on page 4-171—These instructions specify parallel, single-cycle operations.

Appendix A, "Instruction Coding", lists the instruction encoding fields by type number and defines opcode mnemonics as listed alphabetically.

# **Development Tools**

The ADSP-218x DSPs are supported by VisualDSP++®, an easy-to-use programming environment, comprised of a VisualDSP++ Integrated Development and Debugging Environment (IDDE). VisualDSP++ lets you manage projects from start to finish from within a single, integrated interface. Because the project development and debug environments are integrated, you can move easily between editing, building, and debugging activities.

Flexible Project Management. VisualDSP++ IDDE provides flexible project management for the development of DSP applications. VisualDSP++ includes access to all the activities necessary to create and debug DSP projects. You can create or modify source files or view listing or map files with the IDDE Editor. This powerful Editor is part of VisualDSP++ and includes multiple language syntax highlighting, OLE drag and drop, bookmarks, and standard editing operations such as undo/redo, find/replace, copy/paste/cut, and goto.

Also, VisualDSP++ includes access to the C Compiler, C Runtime Library, Assembler, Linker, Loader, Simulator, and Splitter tools You specify options for these tools through property dialog boxes. Tool dialog boxes are easy to use, and make configuring, changing, and managing your projects simple. These options control how the tools process inputs and generate outputs, and have a one-to-one correspondence to the tools' command line switches. You can define these options once, or modify them to meet changing development needs. You can also access the tools from the operating system command line if you choose.

**Greatly Reduced Debugging Time.** The Debugger has an easy-to-use, common interface for all processor simulators and emulators available through Analog Devices and third parties or custom developments. The Debugger has many features that greatly reduce debugging time. You can view C source interspersed with the resulting Assembly code. You can profile execution of a range of instructions in a program; set simulated watch

points on hardware and software registers, program and data memory; and trace instruction execution and memory accesses. These features enable you to correct coding errors, identify bottlenecks, and examine DSP performance. You can use the custom register option to select any combination of registers to view in a single window. The Debugger can also generate inputs, outputs, and interrupts so you can simulate real world application conditions.

**Software Development Tools.** The Software Development Tools, which support the ADSP-218x DSPs, allow you to develop applications that take full advantage of the DSP architecture, including shared memory and memory overlays. Software Development tools include C Compiler, C Runtime Library, DSP and Math Libraries, Assembler, Linker, Loader, Simulator, and Splitter.

C Compiler and Assembler. The C Compiler generates efficient code that is optimized for both code density and execution time. The C Compiler allows you to include Assembly language statements inline. Because of this, you can program in C and still use Assembly for time-critical loops. You can also use pretested Math, DSP, and C Runtime Library routines to help shorten your time to market. The ADSP-218x Assembly language is based on an algebraic syntax that is easy to learn, program, and debug. The add instruction, for example, is written in the same manner as the actual equation using registers for variables (for example, AR = AX0 + AY0;).

Linker and Loader. The Linker provides flexible system definition through Linker Description Files (.LDF). In a single .LDF file, you can define different types of executables for a single or multiprocessor system. The Linker resolves symbols over multiple executables, maximizes memory use, and easily shares common code among multiple processors. The Loader supports creation of a 16-bit host port and 8-bit PROM boot images. Along with the Linker, the Loader allows a variety of system configurations with smaller code and faster boot time. **Simulator.** The Simulator is a cycle-accurate, instruction-level simulator that allows you to simulate your application in real time.

**Emulator.** The EZ-ICE<sup>®</sup> serial emulator system provides state-of-the-art emulation for the ADSP-218x DSPs using a controlled environment for observing, debugging, and testing activities in a target system. The key features of the ADSP-218x EZ-ICE include a shielded enclosure with the reset switch, a high speed RS-232 serial port interface, and support for 2.5, 3.3 and 5.0V DSPs. The EZ-ICE connects directly to the target processor via the emulation interface port. It's ease of use, full speed emulation, and shield board ensures that your design process runs smoothly.

**3rd Party Extensible.** The VisualDSP++ environment enables third party companies to add value using Analog Devices' published set of Application Programming Interfaces (API). Third party products including runtime operating systems, emulators, high-level language compilers, multiprocessor hardware can interface seamlessly with VisualDSP++ thereby simplifying the tools integration task. VisualDSP++ follows the COM API format. Two API tools, Target Wizard and API Tester, are also available for use with the API set. These tools help speed the time-to-market for vendor products. Target Wizard builds the programming shell based on API features the vendor requires. The API tester exercises the individual features independently of VisualDSP++. Third parties can use a subset of these APIs that meets their application needs. The interfaces are fully supported and backward compatible.

Further details and ordering information are available in the VisualDSP++ Development Tools data sheet. This data sheet can be requested from any Analog Devices sales office or distributor.

# **Additional Product Information**

Analog Devices can be found on the internet at http://www.analog.com. Our Web pages provide information about the company and products, including access to technical information and documentation, product overviews, and product announcements.

You may obtain additional information about Analog Devices and its products in any of the following ways:

Visit our World Wide Web site at www.analog.com

- FAX questions or requests for information to 1(781)461-3010.
- Access the division's File Transfer Protocol (FTP) site at ftp ftp.analog.com or ftp 137.71.23.21 or ftp://ftp.analog.com.

# For Technical or Customer Support

You can reach our Customer Support group in the following ways:

- E-mail questions to: dsp.support@analog.com, dsptools.support@analog.com or dsp.europe@analog.com (European customer support)
- Contact your local ADI sales office or an authorized ADI distributor
- Send questions by mail to:

```
Analog Devices, Inc.
One Technology Way
P.O. Box 9106
Norwood, MA 02062-9106
USA
```

# What's New in This Manual

This edition of the *ADSP-218x DSP Instruction Set Reference* is formatted for easy reading and conversion to online help. Some technical information is also updated or corrected.

# **Related Documents**

For more information about Analog Devices DSPs and development products, see the following documents:

- ADSP-218x DSP Hardware Reference
- VisualDSP++ Getting Started Guide for ADSP-218x DSPs
- VisualDSP++ User's Guide for ADSP-218x DSPs
- VisualDSP++ C Compiler & Library Manual for ADSP-218x DSPs
- VisualDSP++ Assembler Manual for ADSP-218x DSPs
- VisualDSP++ Linker & Utilities Manual for ADSP-218x DSPs

All the manuals are included in the software distribution CD-ROM. To access these manuals, use the Help Topics command in the VisualDSP environment's Help menu and select the Online Manuals book. From this Help topic, you can open any of the manuals, which are in Adobe Acrobat PDF format.

# Conventions

Throughout this manual there are tables summarizing the syntax of the instruction groups. Table 1-1 identifies the notation conventions that apply to all chapters. Note that additional conventions, which apply only to specific chapters, may appear throughout this manual.

Notation	Meaning
UPPERCASE	Explicit syntax—assembler keyword. The assembler is case- insensitive.
;	A semicolon terminates an instruction line.
,	A comma separates multiple, parallel instructions in the same instruction line.
// single line comment /* multi line comment */	// or /* */ indicate comments or remarks that explain program code, but that the assembler ignores. For more details, see the <i>Visu-</i> <i>alDSP</i> ++ <i>Assembler Manual for ADSP-218x DSPs</i> .
operands	Some instruction operands are shown in lowercase letters. These operands may take different values in assembly code. For example, the operand yop may be one of several registers: AYO, AY1, or AF.
<exp></exp>	Denotes exponent (shift value) in Shift Immediate instructions; must be an 8-bit signed integer constant.
<data></data>	Denotes an immediate data value.
<addr></addr>	Denotes an immediate address value to be encoded in the instruc- tion. The <addr> may be either an immediate value (a constant) or a program label.</addr>
<reg></reg>	Refers to any accessible register; see Table 4-7 "Processor Registers: reg and dreg" on page 4-22.
[brackets]	Refers to optional instruction extensions
<dreg></dreg>	Refers to any data register; see Table 4-7 "Processor Registers: reg and dreg" on page 4-22.
0x	Denotes number in hexadecimal format (0xFFFF).
h#	Denotes number in hexadecimal format (h#FFFF).
b#	Denotes number in binary format (b#0001000100010001).

Table 1-1. Instruction Set Notation

Notation	Meaning
Û	A note, providing information of special interest or identifying a related topic. In the online version of this book, the word <b>Note</b> appears instead of this symbol.
$\otimes$	A caution, providing information about critical design or program- ming issues that influence operation of a product. In the online ver- sion of this book, the word <b>Caution</b> appears instead of this symbol.

Immediate values such as <exp>, <data>, or <addr> may be a constant in decimal, hexadecimal, octal or binary format. The default format is decimal.

# 2 PROGRAMMING MODEL

This chapter provides an overview of ADSP-218x registers and their operations used in processor programming.

This chapter contains:

- "Overview" on page 2-1
- "Program Example" on page 2-10
- "Hardware Overlays and Software Issues" on page 2-16

## Overview

From a programming standpoint, the ADSP-218x DSPs consist of three computational units (ALU, MAC and Shifter), two data address generators, and a program sequencer, plus on-chip peripherals and memory that vary with each processor. Almost all operations using these architectural components require one or more registers to store data, to keep track of values such as pointers, or to specify operating modes.

Internal registers hold data, addresses, control information or status information. For example, AXO stores an ALU operand (data); 14 stores a DAG2 pointer (address); ASTAT contains status flags from arithmetic operations; fields in the wait state register control the number of wait states for different zones of external memory. There are two types of accesses for registers. The first type of access is made to dedicated registers such as MXO and IMASK. These registers can be read and written explicitly in assembly language. For example,

```
MX0=1234;
IMASK=0xF;
```

The second type of access is made to memory-mapped registers such as the system control register, wait state control register, timer registers and SPORT registers. These registers are accessed by reading and writing the corresponding data memory locations.

For example, the following code clears the Wait State Control Register, which is mapped to data memory location 0x3FFE:

```
AX0=0;
DM(0x3FFE)=AX0;
```

In this example, AXO is used to hold the constant 0 because there is no instruction to write an immediate data value to memory using an immediate address.

The ADSP-218x registers are shown in Figure 2-1. The registers are grouped by function: data address generators (DAGs), program sequencer, computational units (ALU, MAC, and shifter), bus exchange (PX), memory interface, timer, SPORTs, host interface, and DMA interface.

## **Data Address Generators**

DAG1 and DAG2 each have twelve 14-bit registers: four index (I) registers for storing pointers, four modify (M) registers for updating pointers and four length (L) registers for implementing circular buffers. DAG1 addresses data memory only and has the capability of bit-reversing its outputs. DAG2 addresses both program and data memory and can provide addresses for indirect branching (jumps and calls) as well as for accessing data.



Figure 2-1. ADSP-218x DSP Registers

The following example is an indirect data memory read from the location pointed to by 10. Once the read is complete, 10 is updated by M0.

```
AX0=DM(I0,M0);
```

The following example is an indirect program memory data write to the address pointed to by 14 with a post modify by M5:

```
PM(I4,M5)=MR1;
```

The following example is an example of an indirect jump:

```
JUMP (I4);
```

### **Always Initialize L Registers**

The ADSP-218x processors allow two addressing modes for data memory accesses: direct and register indirect. Indirect addressing is accomplished by loading an address into an I (index) register and specifying one of the available M (modify) registers.

The  $\ \$  registers are provided to facilitate wraparound addressing of circular data buffers. A circular buffer is only implemented when an  $\ \$  register is set to a non-zero value.



For linear(that is, non-circular) indirect addressing, the  $\bot$  register corresponding to the  $\bot$  register used must be set to zero. Do not assume that the  $\bot$  registers are automatically initialized or may be ignored; the I, M, and  $\bot$  registers contain random values following processor reset. Your program must initialize the  $\bot$  registers corresponding to any I registers it uses.

## **Program Sequencer**

Registers associated with the program sequencer control subroutines, loops, and interrupts. They also indicate status and select modes of operation.

### Interrupts

The ICNTL register controls interrupt nesting and external interrupt sensitivity. The IFC register which is 16 bits wide lets you force and clear interrupts in software. The IMASK register which is 10 bits wide masks (disables) individual interrupts. ADSP-218x processors support twelve interrupts, two of which (reset, powerdown) are non-maskable.

The ADSP-2181 DSP supports a global interrupt enable instruction (ENA INTS) and interrupt disable instruction (DIS INTS). Executing the disable interrupt instruction causes all interrupts to be masked without changing the contents of the IMASK register. Disabling interrupts does not affect serial port autobuffering, which operate normally whether or not interrupts are enabled. The disable interrupt instruction masks all user interrupts including the powerdown interrupt. The interrupt enable instruction allows all unmasked interrupts to be serviced again.

### Loop Counts

The CNTR register stores the count value for the currently executing loop. The count stack allows the nesting of count-based loops to four levels. A write to CNTR pushes the current value onto the count stack before writing the new value. The following example pushes the current value of CNTR on the count stack and then loads CNTR with 10.

```
CNTR=10;
```

OWRENTR is a special syntax with which you can overwrite the count value for the current loop without pushing ENTR on the count stack.



OWRENTR cannot be read (for example, used as a source register), and must not be written in the last instruction of a DO UNTIL loop.

### Status and Mode Bits

The stack status (SSTAT) register contains full and empty flags for stacks. The arithmetic status (ASTAT) register contains status flags for the computational units. The mode status (MSTAT) register contains control bits for various options. MSTAT contains 4 bits that control alternate register selection for the computational units, bit-reverse mode for DAG1, and overflow latch and saturation modes for the ALU. MSTAT also has 3 bits to control the MAC result placement, timer enable, and Go mode enable.

Use the Mode Control instruction (ENA or DIS) to conveniently enable or disable processor modes.

### Stacks

The program sequencer contains four stacks that allow loop, subroutine and interrupt nesting.

The PC stack is 14 bits wide and 16 locations deep. It stores return addresses for subroutines and interrupt service routines, and top-of-loop addresses for loops. PC stack handling is automatic for subroutine calls and interrupt handling. In addition, the PC stack can be manually pushed or popped using the PC Stack Control instructions TOPPCSTACK=reg and reg=TOPPCSTACK.

The loop stack is 18 bits wide, 14 bits for the end-of-loop address and 4 bits for the termination condition code. The loop stack is four locations deep. It is automatically pushed during the execution of a DO UNTIL instruction. It is popped automatically during a loop exit if the loop was nested. The loop stack may be manually popped with the POP LOOP instruction.

The status stack, which is automatically pushed when the processor services an interrupt, accommodates the interrupt mask (IMASK), mode status (MSTAT) and arithmetic status (ASTAT) registers. The depth and width of the status stack varies with each processor, since each of the processors has

a different numbers of interrupts. The status stack is automatically popped when the return from interrupt (RTI) instruction is executed. The status stack can be pushed and popped manually with the PUSH STS and POP STS instructions.

The count stack is 14 bits wide and holds counter (CNTR) values for nested counter-based loops. This stack is pushed automatically with the current CNTR value when there is a write to CNTR. The counter stack may be manually popped with the POP CNTR instruction.

## **Computational Units**

The registers in the computational units store data. The ALU and MAC require two inputs for most operations. The AXO, AX1, MXO, and MX1 registers store X inputs, and the AYO, AY1, MYO, and MY1 registers store Y inputs.

The AR and AF registers store ALU results; AF can be fed back to the ALU Y input, whereas AR can provide the X input of any computational unit. Likewise, the MR0, MR1, MR2, and MF register store MAC results and can be fed back for other computations. The 16-bit MR0 and MR1 registers together with the 8-bit MR2 register can store a 40-bit multiply/accumulate result.

The shifter can receive input from the ALU or MAC, from its own result registers, or from a dedicated shifter input (SI) register. It can store a 32-bit result in the SR0 and SR1 registers. The SB register stores the block exponent for block floating-point operations. The SE register holds the shift value for normalize and denormalize operations.

Registers in the computational units have secondary registers, shown in Figure 2-1 on page 2-3 as second set of registers behind the first set. Secondary registers are useful for single-cycle context switches. The selection of these secondary registers is controlled by a bit in the MSTAT register; the bit is set and cleared by these instructions:

```
ENA SEC_REG; /*select secondary registers*/
DIS SEC_REG; /*select primary registers*/
```

## **Bus Exchange**

The PX register is an 8-bit register that allows data transfers between the 16-bit DMD bus and the 24-bit PMD bus. In a transfer between program memory and a 16-bit register, PX provides or receives the lower eight bits implicitly.

## Timer

The TPERIOD, TCOUNT, and TSCALE hold the timer period, count, and scale factor values, respectively. These registers are memory-mapped at locations 0x3FFD, 0x3FFC, and 0x3FFB respectively.

## **Serial Ports**

SPORT0 and SPORT1 each have receive (RX), transmit (TX) and control registers. The control registers are memory-mapped registers at locations  $0\times3FEF$  through  $0\times3FFA$  in data memory. SPORT0 also has registers for controlling its multichannel functions. Each SPORT control register contains bits that control frame synchronization, companding, word length and, in SPORT0, multichannel options. The SCLKDIV register for each SPORT determines the frequency of the internally generated serial clock, and the RFSDIV register determines the frequency of the internally generated receive frame sync signal for each SPORT. The autobuffer registers control autobuffering in each SPORT.

Programming a SPORT consists of writing to its control register and, depending on the modes selected, writing to its SCLKDIV and/or RFSDIV registers as well. The following example code may be used to program SPORT0 for 8-bit µ-law companding with normal framing and an internally generated serial clock. RFSDIV is set to 255 for 256 SCLK cycles between RFS assertions. SCLKDIV is set to 2, resulting in an SCLK frequency that is 1/6 of the CLKIN frequency.

```
SI=0xB27;
DM(0X3FF6)=SI; /*SPORT0 control register*/
SI=2;
DM(0x3FF5)=SI; /*SCLKDIV = 2*/
SI=255;
DM(0x3FF4)=SI: /*RFSDIV = 255*/
```

### **Memory Interface and SPORT Enables**

The system control register, memory-mapped at DM( $0\times3fff$ ), contains SPORT0 and SPORT1 enable bits (bits 12 and 11 respectively) as well as the SPORT1 configuration selection bit (bit 10). On all ADSP-218x processors, the system control register also contains fields for external program memory wait states. For the following processors, the system control register contains the disable  $\overline{BMS}$  bit, which allows the external signal  $\overline{BMS}$  to be disabled during byte memory accesses.

This feature can be used, for example, to allow the DSP to boot from an EPROM and then access a Flash memory, or other byte-wide device, at runtime via the  $\overline{CMS}$  signal.

ADSP-2184	ADSP-2184L	ADSP-2185M	ADSP-2184N
ADSP-2186	ADSP-2185L	ADSP-2186M	ADSP-2185N
	ADSP-2186L	ADSP-2188M	ADSP-2186N
	ADSP-2187L	ADSP-2189 M	ADSP-2187N
			ADSP-2188N
			ADSP-2189 N

The wait state control register, memory-mapped at  $DM(0\times3ffe)$ , contains fields that specify the number of wait states for external data memory, and four banks of external I/O memory space.

On the following processors, bit 15 of the register, the wait state mode select bit, determines whether the assigned wait state value operates in a "1x" or "2x+1" mode:

ADSP-2185M	ADSP-2185N
ADSP-2186M	ADSP-2186N
ADSP-2188M	ADSP-2187N
ADSP-2189M	ADSP-2188N
	ADSP-2189N

Other memory-mapped registers control the IDMA port and byte memory DMA (BDMA) port for booting and runtime operations. These registers can be used in many ways that includes selecting the byte memory page, operating in data packing mode, or forcing the boot from software.

# **Program Example**

Listing 2-1 presents an example of an FIR filter program written for the ADSP-2181 DSP followed by a discussion of each part of the program. The program can also be executed on any other ADSP-218x processor, with minor modifications. This FIR filter program demonstrates much of the conceptual power of the ADSP-218x architecture and instruction set.

Listing 2-1. Include File, Constants Initialization

```
/*ADSP-2181 FIR Filter Routine
  -serial port 0 used for I/0
  -internally generated serial clock
  -40.000 MHz processor clock rate is divided to generate a
  1.5385 MHz serial clock
  -serial clock divided to 8 kHz frame sampling rate*/
```

```
#include <def2181.h>
                         See Notes: Section A
 #define taps 15
 #define taps less one 14
                            See Notes: Section B
 .section/dmdm_data;
                                          /* dm data buffer */
 .var/circdata buffer[taps];
 .section/pmpm_data;
 .var/circ/init24coefficient[taps] = "coeff.dat";
 .section/pm Interrupts; See Notes: Section C
 start:
   jump main; rti; rti; rti;
                                 /* 0x0000: ~Reset vector */
                                         /* 0x0004: ~IR02 */
   rti; rti; rti; rti;
                                         /* 0x0008: ~IRQL1 */
   rti: rti: rti: rti:
                                          /* 0x000c: ~IR010 */
   rti: rti: rti: rti:
                               /* 0x0010: SPORTO Transmit */
   rti; rti; rti; rti;
   jump fir_start; rti; rti; /* 0x0014: SPORTO Receive */
                                           /* 0x0018: ~IRQE */
   rti: rti: rti: rti:
   rti: rti: rti: rti:
                                           /* 0x001c: BDMA */
   rti; rti; rti; rti; /* 0x0020: SPORT1 Transmit or ~IRQ1 */
   rti; rti; rti; /* 0x0024: SPORT1 Receive or ~IRQ0 */
   rti; rti; rti; /* 0x0028: Timer */
   rti; rti; rti; /* 0x002c: Power Down (non-maskable */
                                  See Notes: Section D
 .section/pm
                 pm_code;
main:
    10 = length (data buffer);
                        /* setup circular buffer length */
    14 = length (coefficient); /*setup circular buffer */
                                /* modify =1 for increment */
    m0 = 1:
                                         /* through buffers */
    m4 = 1:
```

#### **Program Example**

```
i0 = data buffer;
                                 /* point to start of buffer */
    i4 = coefficient;
                                 /* point to start of buffer */
    a x 0 = 0;
    cntr = length(data_buffer);
                                   /* initialize loop counter */
    do clear until ce:
                                        /* clear data buffer */
clear: dm(i0.m0) = ax0:
                          /* setup divide value for 8KHz RFS */
                              See Notes: Section E
    a x 0 = 0 x 0 0 c 0;
    dm(SportO_Rfsdiv) = ax0;
                          /* 1.5385 MHz internal serial clock */
    a x 0 = 0 x 0 0 0 c:
    dm(Sport0_Sclkdiv) = ax0;
    /* multichannel disabled, internally generated sclk,
    receive frame sync required, receive width = 0, transmit
    frame sync required, transmit width = 0,
    external transmit frame sync, internal receive frame
    sync,u-law companding, 8-bit words */
    ax0 = 0x69b7;
    dm(Sport0_Ctrl_Reg) = ax0;
                                             /* enable sport0 */
    a x 0 = 0 x 1000;
    dm(Sys_Ctrl_Reg) = ax0;
    icntl = 0x00;
                                 /* disable interrupt nesting */
    imask = 0x0060:
                   /* enable sport0 rx and tx interrupts only */
```

### **Example Program: Setup Routine Discussion**

The setup and main loop routine performs initialization and then loops on the IDLE instruction to wait until the receive interrupt from SPORT0 occurs. The filter is interrupt-driven. When the interrupt occurs, control shifts to the interrupt service routine shown in Listing 2-2.

#### NOTES:

Section A of the program declares two constants and includes a header file of definitions named def2181.h.

Section B of the program includes the assembler directives defining two circular buffers in on-chip memory: one in data memory RAM that is used to hold a delay line of samples and one in program memory RAM that is used to store coefficients for the filter. The coefficients are actually loaded from an external file by the linker. These values can be changed without reassembling; only another linking is required.

Section C shows the setup of interrupts. The first instruction is placed at the reset vector: address PM  $(0 \times 0000)$ . The first location is the reset vector instruction, which jumps to main. Interrupt vectors that are not used are filled with a return from interrupt instruction. This is a preferred programming practice rather than a necessity. The SPORTO receive interrupt vector jumps to the interrupt service routine.

Section D, main, sets up the index (I), length (L), and modify (M) registers used to address the two circular buffers. A non-zero value for length activates the processor's modulus logic. Each time the interrupt occurs, the I register pointers advance one position through the buffers. The clear loop sets all values in the data memory buffer to zero.

### **Program Example**

Section E sets up the processor's memory-mapped control registers used in this system. See *Appendix B* in the *ADSP-218x Hardware Reference Manual* for control register initialization information.

SPORT0 is set up to generate the serial clock internally at 1.5385 MHz, based on a processor clock rate of 40 MHz. The receive and transmit signals are both required. The receive signal is generated internally at 8 KHz, while the transmit signal comes from the external device communicating with the processor.

Finally, SPORT0 is enabled and the interrupts are enabled. Now the IDLE instruction causes the processor to wait for interrupts. After the return from interrupt instruction, execution resumes at the instruction following the IDLE instruction. Once these setup instructions have been executed, all further activity takes place in the interrupt service routine shown in Listing 2-2.

#### Listing 2-2. Interrupt Routine

```
fir start:
   si = rx0;
                                         /* read from sport0 */
                                 /* transfer data to buffer */
   dm(i0,m0) = si;
  mr = 0, my0 = pm(i4, m4), mx0 = dm(i0, m0);
                                /* setup multiplier for loop */
                               /* perform loop taps-1 times */
   cntr = taps_less_one;
   do convolution until ce:
convolution:
  mr = mr + mx0 * my0 (ss), my0 = pm(i4, m4), mx0 = dm(i0, m0);
                       /* perform MAC and fetch next values */
  mr = mr + mx0 * my0 (rnd);
                /* Nth pass of loop with rounding of result */
   if mv sat mr:
   tx0 = mr1:
                                /* write result to sport0 tx */
                                    /* return from interrupt */
   rti;
```

## Example Program: Interrupt Routine Discussion

This subroutine transfers the received data to the next location in the circular buffer overwriting the oldest sample. All samples and coefficients are then multiplied and the products are accumulated to produce the next output value. The subroutine checks for overflow and saturates the output value to the appropriate full scale. It then writes the result to the transmit section of SPORT0 and returns.

The subroutine begins by reading a new sample from SPORTO's receive data register, RXO, into the SI register. The choice of SI is of no particular significance. Then, the data is written into the data buffer. Because of the automatic circular buffer addressing, the new data overwrites the oldest sample. The N-most recent samples are always in the buffer.

The third instruction of the routine, MR=0, MY0=PM(I4,M4), MX0=DM(I0,M0), clears the multiplier result register (MR) and fetches the first two operands. This instruction accesses both program and data memory but still executes in a single cycle because of the processor's architecture. The counter register (CNTR) directs the loop to be performed taps-1 times.

The convolution label identifies the loop itself, consisting of only two instructions, one instruction setting up the loop (D0 UNTIL) and one instruction nested in the loop. The MAC instruction multiplies and accumulates the previous set of operands while fetching the next ones from each memory. This instruction also accesses both memories.

The final result is written back to the SPORT0 transmit data register TX0 to be sent to the communicating device.

# Hardware Overlays and Software Issues

Hardware overlay pages can be used for both program execution and data storage. Switching between hardware overlay memory pages can be done in a single processor cycle with no effect latencies. The following examples show the assembly instructions for managing different program memory hardware overlay regions:

```
pmovlay = ax0;
pmovlay = 5;
```

Since the program memory hardware overlay regions reside in address locations PM  $0\times2000$  through  $0\times3fff$ , programs are restricted to execute the pmovlay= instruction from within the fixed program memory region, located at addresses PM  $0\times0000$  through  $0\times1FFF$ .

If a pmovlay = instruction were to be executed from a program memory hardware overlay page, the next instruction would be fetched and executed from the subsequent address of the new hardware overlay page. In this scenario, there is no possibility to specify a well-defined address of the target program memory overlay region. Therefore, the portion of your program that controls the management of the program memory overlay pages **must** reside within the fixed/non-overlay program memory region.

If the program flow requires execution from a module that resides in an overlay region, it is good programming practice to have the calling function access the overlay module using a CALL instruction versus a JUMP instruction. Executing a call instruction pushes the address of the subsequent address after the call instruction onto the program counter stack, which is the return address after the overlay module is completed. Upon return from the overlay subroutine via the rts instruction, program execution resumse with the instruction following the subroutine call.
The example below shows one application of switching between program memory overlay regions at runtime:

```
main:
...
pmovlay = 4;  /* switch to PM overlay #4 */
call Ovl4Function;  /* call overlay function */
pmovlay = 5;  /* return from overlay #4 & goto overlay #5 */
call Ovl5Function;  /* call overlay function */
...
```

### Libraries and Overlays

Because the program sequencer works independently from the program memory overlay register (PMOVLAY), program modules that run within an overlay page have no direct access to any program modules resident in other overlay pages. This means that all the required libraries and sub-functions must be placed either in the same page as the calling function or in the fixed memory/non-overlay area. Place libraries that are used by multiple modules located in different pages in the fixed program memory region as well. Unfortunately, for some applications there is a limited amount of fixed program memory. In this case, the linker places parts of the library in different overlay pages to help balance the memory usage in the system.

### Interrupts and Overlays

The interrupt vector table occupies program memory addresses 0x0000 through 0x002f. When an unmasked interrupt is raised, ASTAT, MSTAT and IMASK are pushed onto the status stack in this specific order. The current value of the program counter which contains the address of the next instruction is placed onto the PC stack. This allows the program execution to continue with the next instruction of the main program after the interrupt is serviced. The ADSP-218x interrupt controller has no knowledge of the PMOVLAY and DMOVLAY registers. Therefore, the values of these registers must be saved or restored by the programmer in the interrupt service routine.

Whenever the interrupt service routine is located within the fixed program memory region, no special context saving of the overlay registers is required. However, if you would like to place the ISR within an overlay page, some additional instructions are needed to facilitate the saving or restoring of the PMOVLAY and DMOVLAY registers. The interrupt vector table features only four instruction locations per interrupt. Listing 2-3 is an example of a four instruction implementation that restores the PMOVLAY register after an interrupt.

Listing 2-3. PMOVLAY Register Restoration

```
Interrupt Vector:
   ax0 = PMOVLAY;
                         /* save PMOVLAY value into axO
                                                                */
                        /* push PMOVLAY value onto PC stack */
  Toppcstack = ax0;
   Jump My_ISR;
                          /* jump to interrupt subroutine
                                                                */
   Rti; /* placeholder in vector table (4 locations total
                                                               */
  My ISR:
                           /* ISR code goes here */
   jump I_Handler; /* use instead of rti to restore PMOVLAY
reg */
                  /* this subroutine should reside in fixed PM */
   I_Handler:
                              /* pop PMOVLAY value into ax0
  ax0 = Toppcstack;
                                                                */
                              /* one cycle effect latency
                                                                */
  nop:
   rti:
                              /* return from interrupt
                                                                */
```

If the interrupt service routine also accesses alternate data memory overlay pages, the DMOVLAY register must be saved and restored like the PMOVLAY register. Listing 2-4 is an example of a DMOVLAY register restoration.

#### Listing 2-4. DMOVLAY Register Restoration

```
Interrupt Vector:
                              /* jump to interrupt handler */
   jump I_Handler;
                               /* unreachable instructions
   rti:
                                                            */
                               /* used as placeholders to
   rti;
                                                             */
   rti:
                    /* occupy all 4 locations of the vector */
               /* this subroutine should reside in fixed PM */
I Handler:
                             /* save PMOVLAY value into ax0 */
   a x 0 = PMOVLAY:
   dm(save PMOVLY) = ax0:/* save PMOVLAY value to DM variable*/
                        /* save DMOVLAY value into ax0
   a x 0 = DMOVLAY;
                                                             */
   dm(save_DMOVLY) = ax0;/*save DMOVLAY value to DM variable */
                        /* isr is in PM page 5
   PMOVLAY = 5;
                                                             */
   DMOVLAY = 4;
                        /* isr accesses DM page 4
                                                             */
   call My_ISR;
   ax0 = dm(save DMOVLY);
                     /* return from isr and restore DMOVLAY */
                                    /* restore DMOVLAY value */
   DMOVLAY = ax0:
   ax0 = dm(save PMOVLY);
                     /* restore "saved" PMOVLAY from memory */
   PMOVLAY = ax0:
                    /* restore PMOVLAY value
                                                             */
                                                             */
                     /* return from interrupt
   rti:
My_ISR:
                     /* isr code goes here
                                                             */
                     /* return to I Handler instead of rti */
   rts:
```

### Loop Hardware and Overlays

The loop hardware of the ADSP-218x DSPs operates independent of the PMOVLAY register. Once a DO UNTIL instruction has been executed, the loop comparator compares the next address generated by the program sequencer to the address of the last instruction of the loop. The loop com-

pares the address value only. This comparison is performed independently from the value of the PMOVLAY register. Whenever the PMOVLAY register is updated to point to another overlay page while a loop in another overlay page is still active, the loop comparator may detect an end-of-loop address and force the PC to branch to an undesired memory location. In a real system design, this scenario may happen when a loop within an overlay page is exited temporarily by an interrupt service routine that runs in a different overlay page.



The fixed memory region for program memory occupies addresses 0x0000 through 0x1fff; the program memory overlay region occupies addresses 0x2000 through 0x3fff.

To avoid the improper execution of a loop:

- Place hardware loops either in the fixed program memory or in overlay pages. Do not place loops whose loop bodies cross the boundary between program memory and an overlay page.
- Always place interrupt service routines in fixed program memory or in non-overlay program memory.
- Avoid end-of-loop addresses in ISRs.

# **3 SOFTWARE EXAMPLES**

This chapter provides a brief summary of the development process that you use to create executable programs for the ADSP-218x DSPs. The overview is followed by software examples that you can use as a guide when writing your own applications.

The chapter contains:

- "Overview" on page 3-1
- "System Development Process" on page 3-3
- "Single-Precision Fir Transversal Filter" on page 3-5
- "Cascaded Biquad IIR Filter" on page 3-7
- "Sine Approximation" on page 3-9
- "Single-Precision Matrix Multiply" on page 3-11
- "Radix-2 Decimation-in-Time FFT" on page 3-13

Refer to the *VisualDSP++ 3.5 Compiler and Library Manual for ADSP-218x DSPs* for information on appropriate library functions.

### Overview

The software examples presented in this chapter are used for a variety of DSP operations. The FIR filter and cascaded biquad IIR filter are general filter algorithms that can be tailored to many applications. Matrix multiplication is used in image processing and other areas requiring vector

#### Overview

operations. The sine function is required for many scientific calculations. The FFT (fast Fourier transform) has wide application in signal analysis. Each of these examples is described in greater detail in *Digital Signal Processing Applications Using The ADSP-2100 Family, Volume1*, available from our website at www.analog.com. They are presented here to show some aspects of typical programs.

The FFT example is a complete program, including a subroutine that performs the FFT, a main calling program that initializes registers and calls the FFT subroutine, and an auxiliary routine.

Each of the other examples is shown as a subroutine in its own module. The module starts with a .SECTION assignment for data or code, using the section name defined in the .LDF file. The subroutine can be called from a program in another module that declares the starting label of the subroutine as an external symbol .EXTERN. This is the same label that is declared with the .GLOBAL directive in the subroutine module. This makes the subroutine callable from routines defined in other .ASM files. The last instruction in each subroutine is the RTS instruction, which returns control to the calling program.

Each module is prefaced by a comment block that provides the information shown in Table 3-1.

Module	Comment Information
Calling Parameters	Register values that the calling program must set before calling the subroutine
Return Values	Registers that hold the results of the subroutine
Altered Registers	Register used by the subroutine. The calling program must save them before calling the subroutine and restore them afterward in order to preserve their values
Computation Time	The number of instruction cycles needed to perform the subroutine

Table 3-1. Subroutine Modules and Comment Information

# System Development Process

The ADSP-218x DSPs are supported by a complete set of development tools. Programming aids and processor simulators facilitate software design and debug. In-circuit emulators and demonstration boards help in hardware prototyping.

Figure 3-1 shows a flow chart of the system development process.



Figure 3-1. ADSP-218x DSP System Development Process

Software development tools include a C Compiler, C Runtime Library, DSP and Math Libraries, Assembler, Linker, Loader, Simulator, and Splitter. These tools are described in detail in the following documents:

- VisualDSP++ Assembler and Preprocessor Manual for ADSP-218x DSPs
- VisualDSP++ C Compiler & Library Manual for ADSP-218x DSPs

- Product Bulletin for VisualDSP++ and ADSP-218x DSPs
- VisualDSP++ User's Manual for ADSP-218x DSPs
- VisualDSP++ Linker & Utilities Manual for ADSP-218 DSPs

These documents are included in the software distribution CD-ROM and can be downloaded from our website at www.analog.com.

The development process begins with the task of describing the system and generating source code. You describe the system in the Linker Description File (.LDF) and you generate source code in C and/or assembly language.

Describing the system in the .LDF file includes providing information about the hardware environment and memory layout. Refer to the *VisualDSP++ Linker & Utilities Manual for ADSP-218x DSPs* for details.

Generating source code requires creating code modules, which can be written in either assembly language or C language. These modules include a main program, subroutines, or data variable declarations. The C modules are compiled by the C compiler cc218x.exe. Each code module is assembled separately by the assembler, which produces an object file (.DOJ).

The .DOJ file is input to the Linker linker.exe, along with the .LDF file. The linker links several object modules together to form an executable program .DXE. The linker reads the target hardware information from the .LDF file to determine appropriate addresses for code and data. You specify the segment your code or data belongs to in the assembly file. You specify the location of the segment in the .LDF file.

The linker places non-relocatable code or data modules at the specified memory addresses, provided the memory area has the correct attributes. The linker selects addresses for relocatable object. The linker generates a memory image file .DXE containing a single executable program, which may be loaded into a VisualDSP debugger session (simulator or emulator) for testing.

The simulator provides windows that display different portions of the hardware environment. To replicate the target hardware, the simulator configures memory according to the memory specification in the .LDF file. The resulting simulation allows you to debug the system and analyze performance before committing to a hardware prototype.

After fully simulating your system and software, you can use an EZ-ICE in-circuit emulator in the prototype hardware to test circuitry, timing, and real-time software execution.

The PROM splitter software tool elfpsl2l.exe translates the .DXE file into an industry-standard file format for a PROM programmer. Once you program the code in PROM devices and install an ADSP-218x processor into your prototype, it is ready to run.

# Single-Precision Fir Transversal Filter

An FIR transversal filter structure can be obtained directly from the equation for discrete-time convolution:

$$y(n) \equiv \sum_{k=0}^{N-1} h_k(n) x(n-k)$$

In this equation, x(n) and y(n) represent the input to and output from the filter at time n. The output y(n) is formed as a weighted linear combination of the current and past input values of x, x(n-k). The weights,  $h_k(n)$ , are the transversal filter coefficients at time n. In the equation, x(n-k) represents the past value of the input signal "contained" in the  $(k+1)^{th}$  tap of the transversal filter. For example, x(n), the present value of the input signal, would correspond to the first tap, while x(n-42) would correspond to the forty-third filter tap.

The subroutine that realizes the sum-of-products operation used in computing the transversal filter is shown in Listing 3-1.

Listing 3-1. Single-Precision FIR Transversal Filter

```
.SECTION/CODE program;
/*
*
       FIR Transversal Filter Subroutine
*
       Calling Parameters
       IO -> Oldest input data value in delay line
*
*
       L0 = Filter length (N)
*
       I4 -> Beginning of filter coefficient table
*
       L4 = Filter length (N)
*
       M1.M5 = 1
*
       CNTR = Filter length - 1 (N-1)
*
    Return Values
*
       MR1 = Sum of products (rounded and saturated)
       IO -> Oldest input data value in delay line
*
*
       I4 -> Beginning of filter coefficient table
*
*
    Altered Registers
*
       MXO, MYO, MR
*
*
    Computation Time
       N - 1 + 5 + 2 cycles
*
*
*
     All coefficients and data values are assumed to be
*
     in 1.15 format.
*
*/
```

```
.GLOBAL fir;

fir: MR=0, MX0=DM(I0,M1), MY0=PM(I4,M5);

D0 sop UNTIL CE;

sop: MR=MR+MX0*MY0(SS), MX0=DM(I0,M1), MY0=PM(I4,M5);

MR=MR+MX0*MY0(RND);

IF MV SAT MR;

RTS:
```

# **Cascaded Biquad IIR Filter**

A second-order biquad IIR filter section is represented by the transfer function (in the z-domain):

```
H(z) = Y(z)/X(z) = (B_0 + B_1 z^{-1} + B_2 z^{-2})/(1 + A_1 z^{-1} + A_2 z^{-2})
```

where  $A_1$ ,  $A_2$ ,  $B_0$ ,  $B_1$  and  $B_2$  are coefficients that determine the desired impulse response of the system H(z). The corresponding difference equation for a biquad section is:

 $Y(n) = B_0 X(n) + B_1 X(n-1) + B_2 X(n-2) - A_1 Y(n-1) - A_2 Y(n-2)$ 

Higher-order filters can be obtained by cascading several biquad sections with appropriate coefficients. The biquad sections can be scaled separately and then cascaded in order to minimize the coefficient quantization and the recursive accumulation errors.

A subroutine that implements a high-order filter is shown in Listing 3-2. A circular buffer in program memory contains the scaled biquad coefficients. These coefficients are stored in the order:  $B_2$ ,  $B_1$ .  $B_0$ ,  $A_2$  and  $A_1$  for each biquad. The individual biquad coefficient groups must be stored in the order that the biquads are cascaded.

#### **Cascaded Biquad IIR Filter**

#### Listing 3-2. Cascaded Biquad IIR Filter

```
.SECTION/DATA data1:
.var number_of_biguads;
.SECTION/CODE program;
/*
     Nth order cascaded biguad filter subroutine
*
*
     Calling Parameters:
*
*
        SR1=input X(n)
*
        IO -> delay line buffer for X(n-2), X(n-1),
 *
           Y(n-2), Y(n-1)
        L0 = 0
 *
 *
        I1 -> scaling factors for each biquad section
*
        L1 = 0 (in the case of a single biquad)
 *
        L1 = number of biquad sections
 *
             for multiple biguads)
*
        I4 -> scaled biguad coefficients
 *
        L4 = 5 \times [number of biguads]
*
     MO, M4 = 1
*
    M1 = -3
*
    M2 = 1 (in the case of multiple biguads)
*
    M2 = 0 (in the case of a single biquad)
*
    M3 = (1 - \text{length of delay line buffer})
*
* Return Value:
*
     SR1 = output sample Y(n)
*
* Altered Registers:
*
     SE, MXO, MX1, MYO, MR, SR
*
* Computation Time (with N even):
*
    ADSP-218X: (8 x N/2) + 5 cycles
*
     ADSP-218X: (8 x N/2) + 5 + 5 cycles
* All coefficients and data values are assumed to
* be in 1.15 format
* /
```

```
.GLOBAL
         biquad;
biguad:
          CNTR = number of biguads:
          DO sections UNTIL CE; /* Loop once for each biguad */
               SE=DM(I1,M2); /* Scale factor for biguad
                                                                */
               MXO=DM(IO,MO), MYO=PM(I4,M4);
               MR=MX0*MY0(SS), MX1=DM(I0,M0), MY0=PM(I4,M4);
               MR=MR+MX1*MYO(SS), MYO=PM(I4,M4);
               MR=MR+SR1*MYO(SS), MXO=DM(IO,MO), MYO=PM(I4,M4);
               MR=MR+MXO*MYO(SS), MXO=DM(IO,M1), MYO=PM(I4,M4);
               DM(IO,MO)=MX1, MR=MR+MXO*MYO(RND);
sections: DM(I0.M0)=SR1, SR=ASHIFT MR1 (HI);
          DM(IO,MO) = MXO:
          DM(I0,M3)=SR1:
          RTS:
```

# **Sine Approximation**

The following formula approximates the sine of the input variable x (in radians):

```
y(x) = \sin(x)
= 3.140625(x/\pi) + 0.02026367(x/\pi)^2 - 5.325196(x/\pi)^3
+ 0.5446778(x/\pi)^4 + 1.800293(x/\pi)^5
```

where:

 $0 \ \underline{<} \ X \ \underline{<} \ (\pi/2)$ 

The approximation is a 5<sup>th</sup> order polynomial fit, accurate for any value of x from 0° to 90° (the first quadrant). However, because sin(-x) = -sin(x) and sin(x) = sin(180° - x), you can infer the sine of any angle from the sine of an angle in the first quadrant.

The routine that implements this sine approximation, accurate to within two LSBs, is shown in Listing 3-3. This routine accepts input values in 1.15 format. The coefficients, which are initialized in data memory in 4.12 format, have been adjusted to reflect an input value scaled to the maximum range allowed by this format. On this scale, 180° ( $\pi$  radians) equals the maximum positive value, 0x7FFF, while –180° ( $\pi$  radians) equals the maximum negative value, 0x8000.

The routine shown in Listing 3-3 first adjusts the input angle to its equivalent in the first quadrant. The sine of the modified angle is calculated by multiplying increasing powers of the angle by the appropriate coefficients. The result is adjusted if necessary to compensate for the modifications made to the original input value.

Listing 3-3. Sine Approximation

```
/*
*
     Sine Approximation
*
          Y = Sin(x)
*
*
     Calling Parameters
 *
           AXO = x in scaled 1.15 format
 *
           M3 = 1
 *
           L3 = 0
 *
*
     Return Values
*
           AR = y in 1.15 format
 *
*
     Altered Registers
 *
           AYO, AF, AR, MY1, MX1, MF, MR, SR, I3
 *
 *
     Computation Time
*
           25 cycles
*/
.SECTION/DATA data1:
.VAR sin_coeff[5] = 0x3240, 0x0053, 0xAACC, 0x08B7, 0x1CCE;
```

```
.SECTION/CODE program;
.GLOBAL sin:
sin:
          I3=sin_coeff;
                                 /* Pointer to coeff. buffer */
          AY0=0x4000:
                                 /* Copy x */
          AR = AX0;
                                 /* Check 2nd or 4th Quad
          AF=AXO AND AYO;
                                                               */
                                 /* If yes, negate
                                                               */
          IF NE AR = -AXO;
          AYO = 0 \times 7 FFF;
                                 /* Remove sign bit
                                                               */
          AR=AR AND AYO:
                                 /* Copy x */
          MY1 = AR:
          MF=AR*MY1 (RND); MX1=DM(I3,M3);
                                  /* MF = x^2. Get 1st coeff
                                                               */
          MR=MX1*MY1 (SS); MX1=DM(I3,M3);
                      /* MR = x * 1st coeff. Get 2nd coeff
                                                               */
          CNTR=3:
          DO approx UNTIL CE;
             MR=MR+MX1*MF (SS);
             MF=AR*MF (RND); /* MF = x^3, x^4, x^5
                                                              */
                               /* Get coeff. C.D.F
                                                               */
             MX1=DM(I3,M3);
approx:
          MR=MR+MX1*MF (SS):
                                                               */
          SR=ASHIFT MR1 BY 3 (HI); /* Convert to 1.15 fmt
          SR=SR OR LSHIFT MRO BY 3 (LO):
          AR=PASS SR1:
          IF LT AR=PASS AYO;
                                /* Saturate if needed
                                                               */
          AF=PASS AX0;
          IF LT AR=-AR;
                                 /* Negate output if needed
                                                               */
          RTS:
```

# **Single-Precision Matrix Multiply**

The routine presented in this section multiplies two input matrices: X and Y. X is an  $R \times S$  (R rows, S columns) matrix stored in data memory. Y is an  $S \times T$  (S rows, T columns) matrix stored in program memory. The output, Z, is an  $R \times T$  (R rows, T columns) matrix written to data memory.

#### **Single-Precision Matrix Multiply**

The matrix multiply routine is shown in Listing 3-4. It requires that you initialize a number of registers as listed in the Calling Parameters section of the initial comment. SE must contain the value necessary to shift the result of each multiplication into the desired format. For example, SE would be set to zero to obtain a matrix of 1.31 values from the multiplication of two matrices of 1.15 values.

Listing 3-4. Single-Precision Matrix Multiply

```
/*
    Single-Precision Matrix Multiplication
*
              S
    Z(i,j) = \sum [X(i,k) \times Y(k,j)] i=0 to R; j=0 to T
*
 *
              k=0
 *
    X is an RxS matrix, Y is an SxT matrix, Z is an RxT matrix
*
*
* Calling Parameters
*
    I1 -> Z buffer in data memory
                                                       L1 = 0
    I2 -> X. stored by rows in data memory
                                                      L2 = 0
*
*
    I6 -> Y, stored by rows in program memory
                                                      L6 = 0
*
    MO = 1M1 = S
 *
   M4 = 1M5 = T
* L0,L4,L5 = 0
*
    SE = Appropriate scale value
*
    CNTR = R
*
* Return Values
*
    Z Buffer filled by rows
*
* Altered Registers
*
    IO.I1.I2.I4.I5.MR.MXO.MYO.SR
*
```

```
* Computation Time
   ((S + 8) × T + 4) × R + 2 + 2 cycles
*/
.SECTION/CODE program;
.GLOBALspmm;
        DO row_loop UNTIL CE;
spmm:
           I5=I6;/* I5 = start of Y */
           CNTR=M5:
           DO column_loop UNTIL CE;
                                   /* Set IO to current X row */
               I 0 = I 2;
               I4 = I5;
                                    /* Set I4 to current Y col */
               CNTR=M1:
               MR=0, MXO=DM(IO,MO), MYO=PM(I4,M5)
                                                /* Get 1st data */
               DO element_loop UNTIL CE;
element loop:
                  MR=MR+MXO*MYO (SS), MXO=DM(IO,MO),
                  MYO = PM(I4.M5):
               SR=ASHIFT MR1 (HI), MYO=DM(I5,M4); /* Update I5 */
               SR=SR OR LSHIFT MRO (LO); /* Finish Shift */
column loop:
               DM(I1,M0)=SR1;
                                               /* Save Output */
row_loop:
               MODIFY(I2,M1); /* Update I2 to next X row */
       RTS:
```

# Radix-2 Decimation-in-Time FFT

The FFT program includes three subroutines. The first subroutine scrambles the input data placing the data in bit-reversed address order, so that the FFT output is in the normal, sequential order. The next subroutine computes the FFT. The third subroutine scales the output data to maintain the block floating-point data format. The program is contained in four modules. The main module declares and initializes data buffers and calls subroutines. The other three modules contain the FFT, bit reversal, and block floating-point scaling subroutines. The main module calls the FFT and bit reversal subroutines. The FFT module calls the data scaling subroutine.

The FFT is performed in place; that is, the outputs are written to the same buffer that the inputs are read from.

### Main Module

The dit\_fft\_main module is shown in Listing 3-5. N is the number of points in the FFT (in this example, N=1024) and N\_div\_2 is used for specifying the lengths of buffers. To change the number of points in the FFT, you change the value of these constants and the twiddle factors.

The data buffers twid\_real and twid\_imag in program memory hold the twiddle factor cosine and sine values. The inplacereal, inplaceimag, inputreal and inputimag buffers in data memory store real and imaginary data values. Sequentially ordered input data is stored in inputreal and inputimag. This data is scrambled and written to inplacereal and inplaceimag. A four-location buffer called "padding" is placed at the end of inplaceimag to allow data accesses to exceed the buffer length. This buffer assists in debugging but is not necessary in a real system. Variables (one-location buffers) named groups, bflys\_per\_group, node\_space and blk\_exponent are declared last.

The real parts (cosine values) of the twiddle factors are stored in the buffer twid\_real. This buffer is initialized from the file twid\_real.dat. Likewise, twid\_imag.dat values initialize the twid\_imag buffer that stores the sine values of the twiddle factors. In an actual system, the hardware would be set up to initialize these memory locations. The variable called groups is initialized to N\_div\_2. The variables bflys\_per\_group and node\_space are each initialized to 2 because there are two butterflies per group in the second stage of the FFT. The blk\_exponent variable is initialized to zero. This exponent value is updated when the output data is scaled.

After the initializations are complete, two subroutines are called. The first subroutine places the input sequence in bit-reversed order. The second performs the FFT and calls the block floating-point scaling routine.

Listing 3-5. Main Module, Radix-2 DIT FFT

.SECTION/CODE ∦define N ∦define N_div_2	program; 1024 512	/* For 2048 points */
.SECTION/DATA	data1;	
.VAR	padding [4]=0,0,0,0;	
.VAR .VAR .GLOBAL	<pre>inputreal [N] = "inputreal.dat"; inputimag [N] = "inputimag.dat"; inputreal, inputimag;</pre>	
.VAR .VAR .GLOBAL	<pre>inplacereal[N]; inplaceimag[N] = "inputimag.dat"; inplacereal, inplaceimag;</pre>	
.VAR .VAR .VAR .VAR .GLOBAL	groups = N_div_2; bflys_per_group = 2; node_space = 2; blk_exponent = 0; groups, bflys_per_group	p, node_space, blk_exponent;
.SECTION/DATA	data2;	
.VAR .VAR	twid_real [N_div_2] twid_imag [N_div_2]	= "twid_real.dat"; = "twid_imag.dat";

.GLOBAL	<pre>twid_real, twid_imag;</pre>	
.SECTION/CODE	program;	
.EXTERN	scramble, fft_strt; CALL scramble; CALL fft_strt;	/* subroutine calls */
	IDLE;	/* halt program    */

### **DIT FFT Subroutine**

The radix-2 DIT FFT routine is shown in Listing 3-6. The constants N and log2N are the number of points and the number of stages in the FFT, respectively. To change the number of points in the FFT, you modify these constants.

The first and last stages of the FFT are performed outside of the loop that executes all the other stages. Treating the first and last stages individually allows them to execute faster. In the first stage, there is only one butterfly per group, so the butterfly loop is unnecessary. The twiddle factors are all either 1 or 0 making multiplications unnecessary. In the last stage, there is only one group. Therefore, the group loop is unnecessary and the setup operations for the next stage.

Listing 3-6. Radix-2 DIT FFT Routine, Conditional Block Floating-Point

```
/* 1024 point DIT radix 2 FFT
* Block Floating Point Scaling */
.SECTION/CODE
                 program;
/*
     Calling Parameters
*
          inplacereal=real input data in scrambled order
*
          inplaceimag=all zeroes (real input assumed)
*
          twid_real=twiddle factor cosine values
          twid_imag=twiddle factor sine values
*
*
          groups=N/2
```

```
*
          bflys_per_group=1
*
          node_space=1
*
*
    Return Values
*
          inplacereal=real FFT results, sequential order
*
          inplaceimag=imag. FFT results, sequential order
*
*
    Altered Registers
*
          IO, I1, I2, I3, I4, I5, L0, L1, L2, L3, L4, L5
*
          M0,M1,M2,M3,M4,M5
*
          AX0,AX1,AY0,AY1,AR,AF
*
          MXO, MX1, MYO, MY1, MR, SB, SE, SR, SI
*
*
    Altered Memory
*
          inplacereal, inplaceimag, groups, node_space,
*
          bflys_per_group, blk_exponent
*/
#define
              log2N
                         10
#define
                         1024
              Ν
#define
              nover2
                         512
#define
                         256
              nover4
.EXTERN
              twid_real, twid_imag;
              inplacereal, inplaceimag;
.EXTERN
              groups, bflys_per_group, node_space;
.EXTERN
.EXTERN
              bfp_adj;
.GLOBAL
              fft_strt;
              CNTR=log2N - 2;
fft_strt:
                                    /* Initialize stage counter */
              M0 = 0;
              M1=1;
              L1=0;
              L2=0;
              L3=0:
              L4=LENGTH(twid real):
              L5=LENGTH(twid_imag);
              L6=0;
              SB = -2;
```

```
/* ---- STAGE 1 ---- */
            IO=inplacereal;
            I1=inplacereal + 1:
            I2=inplaceimag:
            I3=inplaceimag + 1;
            M2=2;
            CNTR=nover2;
            AXO=DM(I0,MO);
            AY0=DM(I1,M0);
            AY1=DM(I3,M0);
            DO group_lp UNTIL CE;
               AR=AXO+AYO, AX1=DM(I2,MO);
               SB=EXPADJ AR, DM(IO,M2)=AR;
               AR = AXO - AYO;
                SB=EXPADJ AR;
               DM(I1,M2)=AR, AR=AX1+AY1;
               SB=EXPADJ AR, DM(I2,M2)=AR;
               AR=AX1-AY1, AXO=DM(IO,MO);
               SB=EXPADJ AR, DM(I3,M2)=AR;
               AY0=DM(I1,M0);
group_lp:
               AY1=DM(I3,M0);
            CALL bfp_adj;
/* ----- STAGES 2 TO N-1----- */
    DO stage_loop UNTIL CE; /* Compute all stages in FFT */
                              /* IO ->xO in 1st grp of stage */
        IO=inplacereal;
                            /* I2 ->y0 in 1st grp of stage */
        I2=inplaceimag;
        SI=DM(groups);
        SR=ASHIFT SI BY -1(LO);
                                         /* groups / 2
                                                              */
                                          /* groups=groups / 2 */
        DM(groups)=SR0;
        CNTR=SRO:
                                        /* CNTR=group counter */
                               /* M4=twiddle factor modifier */
        M4 = SR0:
        M2=DM(node_space); /* M2=node space modifier
                                                            */
        I1=I0:
        MODIFY(I1.M2): /* I1 ->y0 of 1st grp in stage */
```

/\* I3 ->y1 of 1st grp in stage \*/ MODIFY(I3,M2); DO group\_loop UNTIL CE; I4=twid\_real; /\* I4 -> C of W0 \*/ /\* I5 -> (-S) of WO \*/ I5=twid imag: CNTR=DM(bflys\_per\_group); /\* CNTR=bfly count \*/ MY0=PM(I4,M4),MX0=DM(I1,M0); /\* MY0=C,MX0=x1 \*/ MY1=PM(I5,M4),MX1=DM(I3,M0); /\* MY1=-S,MX1=y1 \*/ DO bfly loop UNTIL CE: MR=MXO\*MY1(SS), AXO=DM(IO, MO);/\* MR=x1(-S).AX0=x0 \*/ MR=MR+MX1\*MYO(RND),AX1=DM(I2,MO);/\* MR=(y1(C)+x1(-S)),AX1=y0 \*/ AY1=MR1.MR=MX0\*MY0(SS): /\* AY1=y1(C)+x1(-S).MR=x1(C) \*/ MR=MR-MX1\*MY1(RND);/\* MR=x1(C)-y1(-S) \*/ AYO=MR1, AR=AX1-AY1: /\* AYO=x1(C)-y1(-S), \*/ /\* AR=y0-[y1(C)+x1(-S)] \*/ SB=EXPADJ AR, DM(I3, M1)=AR; /\* Check for bit growth, \*/ /\* y1=y0-[y1(C)+x1(-S)] \*/ AR=AX0-AY0, MX1=DM(I3, M0), MY1=PM(I5, M4); /\* AR=x0-[x1(C)-y1(-S)]. \*/ /\* MX1=next y1.MY1=next (-S) \*/ SB=EXPADJ AR, DM(I1, M1)=AR: /\* Check for bit growth, \*/ /\* x1=x0-[x1(C)-y1(-S)] \*/ AR=AXO+AYO, MXO=DM(I1, MO), MYO=PM(I4, M4);/\* AR=x0+[x1(C)-y1(-S)], \*/ /\* MXO=next x1.MYO=next C \*/ SB=EXPADJ AR,DM(I0,M1)=AR; /\* Check for bit growth. \*/ /\* x0=x0+[x1(C)-y1(-S)] \*/ AR=AX1+AY1; /\* AR=y0+[y1(C)+x1(-S)] \*/ bfly\_loop: SB=EXPADJ AR,DM(I2,M1)=AR; /\* Check for bit growth, \*/ /\* y0=y0+[y1(C)+x1(-S)] \*/ /\* IO ->1st xO in next group \*/ MODIFY(I0,M2); MODIFY(I1,M2); /\* I1 ->1st x1 in next group \*/ MODIFY(I2,M2); /\* I2 ->1st y0 in next group \*/

```
group_loop: MODIFY(I3,M2);
                                /* I3 ->1st y1 in next group */
        CALL bfp_adj;
                                 /* Compensate for bit growth */
        SI=DM(bflys_per_group);
        SR=ASHIFT SI BY 1(LO):
        DM(node_space)=SR0;
                                /* node space=node space / 2 */
stage_loop: DM(bflys_per_group)=SR0;
                       /* bflys_per_group=bflys_per_group / 2 */
/* ---- LAST STAGE ---- */
        IO=inplacereal;
        I1=inplacereal+nover2;
        I2=inplaceimag:
        I3=inplaceimag+nover2;
        CNTR=nover2:
        M2=DM(node_space);
        M4=1:
        I4=twid_real;
        I5=twid_imag;
        MY0=PM(I4,M4),MX0=DM(I1,M0); /* MY0=C,MX0=x1 */
        MY1=PM(I5,M4),MX1=DM(I3,M0);
                                            /* MY1=-S.MX1=y1 */
        DO bfly_lp UNTIL CE;
           MR=MXO*MY1(SS), AXO=DM(IO, MO);
                                          /* MR=x1(-S).AX0=x0 */
           MR=MR+MX1*MYO(RND), AX1=DM(I2,MO);
                                  /* MR=(y1(C)+x1(-S)),AX1=y0 */
           AY1=MR1, MR=MX0*MY0(SS);
                                 /* AY1=y1(C)+x1(-S),MR=x1(C) */
           MR=MR-MX1*MY1(RND);
                                          /* MR=x1(C)-y1(-S) */
           AYO=MR1, AR=AX1-AY1;
                                         /* AYO=x1(C)-y1(-S), */
                                      /* AR=y0-[y1(C)+x1(-S)] */
           SB=EXPADJ AR, DM(I3, M1)=AR:
                                      /* Check for bit growth, */
                                      /* y1=y0-[y1(C)+x1(-S)] */
           AR=AX0-AY0, MX1=DM(I3, M0), MY1=PM(I5, M4);
                                  /* AR=x0-[x1(C)-y1(-S)], */
```

```
/* MX1=next y1.MY1=next (-S) */
            SB=EXPADJ AR, DM(I1, M1)=AR;
                                        /* Check for bit growth, */
                                        /* x1=x0-[x1(C)-y1(-S)] */
            AR=AXO+AYO,MXO=DM(I1,MO),MYO=PM(I4,M4);
                                       /* AR=x0+[x1(C)-y1(-S)], */
                                       /* MXO=next x1.MYO=next C */
            SB=EXPADJ AR, DM(IO, M1)=AR;
                                       /* Check for bit growth, */
                                       /* x0=x0+[x1(C)-y1(-S)]
                                                                 */
                                       /* AR=y0+[y1(C)+x1(-S)]
            AR = AX1 + AY1:
                                                                */
bfly_lp:
            SB=EXPADJ AR, DM(I2, M1)=AR;
                                       /* Check for bit growth */
          CALL bfp_adj;
          RTS:
```

### **Bit-Reverse Subroutine**

The bit-reversal routine, called scramble, puts the input data in bit-reversed order so that the results are in sequential order. This routine (Listing 3-7) uses the bit-reverse capability of the ADSP-218x processors.

Listing 3-7. Bit-Reverse Routine (Scramble)

```
.SECTION/CODE program;
/* Calling Parameters
* Sequentially ordered input data in inputreal
*
* Return Values
* Scrambled input data in inplacereal
*
* Altered Registers
* I0,I4,M0,M4,AY1
*
```

#### Radix-2 Decimation-in-Time FFT

```
* Altered Memory
 *
       inplacereal
 */
#define
             Ν
                     1024
#define
        mod value 0x0010;
                                     /* Initialize constants */
.EXTERN inputreal, inplacereal;
.GLOBAL scramble:
scramble: I4=inputreal; /* I4->sequentially ordered data */
          IO=inplacereal; /* IO->scrambled data
                                                              */
          M4=1:
          MO=mod_value; /* MO=modifier for reversing N Bits */
          L4=0;
          L0=0;
          CNTR = N;
          ENA BIT_REV; /* Enable bit-reversed outputs on DAG1 */
          DO brev UNTIL CE:
             AY1=DM(I4,M4); /* Read sequentially ordered data */
brev:
          DM(IO,MO) = AY1;
                        /* Write data in bit-reversed location */
          DIS BIT_REV;
                                        /* Disable bit-reverse */
                                  /* Return to calling program */
          RTS:
```

### **Block Floating-Point Scaling Subroutine**

The bfp\_adj routine checks the FFT output data for bit growth and scales the entire set of data if necessary. This check prevents data overflow for each stage in the FFT. The routine, shown in Listing 3-8, uses the exponent detection capability of the shifter.

#### Listing 3-8. Radix-2 Block Floating-Point Scaling Routine

```
.SECTION/CODE program;
/* Calling Parameters
 * Radix-2 DIT FFT stage results in inplacereal and inplaceimag
 *
 * Return Parameters
 * inplacereal and inplaceimag adjusted for bit growth
 *
 * Altered Registers
 * IO, I1, AXO, AYO, AR, MXO, MYO, MR, CNTR
 *
 * Altered Memory
 * inplacereal, inplaceimag, blk_exponent
 */
#define
             Ntimes
                           2048
             inplacereal, blk_exponent;
.EXTERN
/* Begin declaration */
.GLOBAL
              bfp_adj;
                                       /* Check for last stage */
bfp_adj:
              AYO = CNTR;
              AR=AY0-1;
                                      /* If last stage, return */
              IF EQ RTS:
              AY0 = -2;
              AXO = SB;
                                          /* Check for SB=-2
              AR = AXO - AYO;
                                                                */
                                          /* IF SB=-2, no bit
              IF EQ RTS;
                                                               */
                                          /* growth, return
                                                               */
              IO=inplacereal;
                                         /* IO=read pointer
                                                               */
                                          /* Il=write pointer
              I1=inplacereal;
                                                                */
              AY0 = -1;
              MY0=0x4000:
                                          /* Set MYO to shift 1 */
                                              /* bit right
                                                               */
              AR=AXO-AYO,MXO=DM(IO,M1);
                                              /* Check if SB=-1 */
```

```
/* Get 1st sample */
              IF EQ JUMP strt_shift;
                                    /* If SB=-1, shift block */
                                    /* data 1 bit
                                                              */
              A X 0 = -2;
                                    /* Set AXO for block
                                                              */
                                   /* exponent update
                                                              */
                                   /* Set MYO to shift 2
              MY0=0x2000:
                                                             */
                                   /* bits right
                                                              */
strt shift:
             CNTR=Ntimes2 - 1; /* initialize loop counter */
              DO shift_loop UNTIL CE; /* Shift block of data*/
                 MR=MX0*MY0(RND),MX0=DM(I0,M1);
                                         /* MR=shifted data */
                                         /* MXO=next value */
shift_loop:
             DM(I1,M1)=MR1;
                                         /* Unshifted data */
                                         /* shifted data */
                                    /* Shift last data word */
              MR=MXO*MYO(RND);
              AYO=DM(blk_exponent); /* Update block exponent */
                               /*and store last shifted sample */
              DM(I1,M1) = MR1, AR = AY0 - AX0;
              DM(blk_exponent)=AR;
              RTS;
```

# **4** INSTRUCTION SET

This chapter is a complete reference for the instruction set of the ADSP-218x DSPs.

The chapter contains:

- "Quick List Of Instructions" on page 4-2
- "Instruction Set Overview" on page 4-5
- "Multifunction Instructions" on page 4-7
- "ALU, MAC and Shifter Instructions" on page 4-14
- "MOVE: Read and Write Instructions" on page 4-20
- "Program Flow Control" on page 4-22
- "Miscellaneous Instructions" on page 4-25
- "Extra Cycle Conditions" on page 4-27
- "Instruction Set Syntax" on page 4-28
- "ALU Instructions" on page 4-31
- "MAC Instructions" on page 4-72
- "Shifter Instructions" on page 4-94
- "Move Instructions" on page 4-113
- "Program Flow Instructions" on page 4-133
- "MISC Instructions" on page 4-151
- "Multifunction Instructions" on page 4-171

# **Quick List Of Instructions**

The instruction set is organized by instruction group and, within each group, by individual instruction. The list below shows all of the instructions and the reference page for each instruction.

#### ALU Instructions

- "Add/Add With Carry" on page 4-32
- "Subtract X-Y/Subtract X-Y With Borrow" on page 4-35
- "Subtract Y-X/Subtract Y-X With Borrow" on page 4-39
- "Bitwise Logic: AND, OR, XOR" on page 4-42
- "Bit Manipulation: TSTBIT, SETBIT, CLRBIT, TGLBIT" on page 4-45
- "Clear: PASS" on page 4-48
- "Syntax" on page 4-32
- "NOT" on page 4-54
- "Absolute Value: ABS" on page 4-56
- "Increment" on page 4-58
- "Decrement" on page 4-60
- "Divide Primitives: DIVS and DIVQ" on page 4-62
- "Generate ALU Status Only: NONE" on page 4-70

#### **MAC Instructions**

- "Multiply" on page 4-73
- "Multiply With Cumulative Add" on page 4-77
- "Multiply With Cumulative Subtract" on page 4-81

- "Squaring" on page 4-85
- "MAC Clear" on page 4-88
- "MAC Transfer MR" on page 4-90
- "Conditional MR Saturation" on page 4-92

#### Shifter Instructions

- "Arithmetic Shift" on page 4-95
- "Logical Shift" on page 4-98
- "Normalize" on page 4-101
- "Derive Exponent" on page 4-104
- "Block Exponent Adjust" on page 4-107
- "Arithmetic Shift Immediate" on page 4-109
- "Logical Shift Immediate" on page 4-111

#### Move Instructions

- "Register Move" on page 4-114
- "Load Register Immediate" on page 4-116
- "Data Memory Read (Direct Address)" on page 4-118
- "Data Memory Read (Indirect Address)" on page 4-120
- "Program Memory Read (Indirect Address)" on page 4-122
- "Data Memory Write (Direct Address)" on page 4-124
- "Data Memory Read (Indirect Address)" on page 4-120
- "Program Memory Write (Indirect Address)" on page 4-129
- "IO Space Read/Write" on page 4-131

#### **Quick List Of Instructions**

#### **Program Flow Instructions**

- "JUMP" on page 4-134
- "CALL" on page 4-136
- "JUMP or CALL on Flag In Pin" on page 4-138
- "Modify Flag Out Pin" on page 4-140
- "RTS (Return from Subroutine)" on page 4-142
- "RTI (Return from Interrupt)" on page 4-144
- "Do Until" on page 4-146
- "Idle" on page 4-149

#### **MISC Instructions**

- "Stack Control" on page 4-152
- "Program Memory Overlay Register Update" on page 4-162
- "Data Memory Overlay Register Update" on page 4-165
- "Modify Address Register" on page 4-168
- "No Operation" on page 4-170

#### **Multifunction Instructions**

- "Computation With Memory Read" on page 4-172
- "Computation With Register-to-Register Move" on page 4-178
- "Computation With Memory Write" on page 4-183
- "Data and Program Memory Read" on page 4-188
- "ALU/MAC With Data and Program Memory Read" on page 4-190

### Instruction Set Overview

This chapter provides an overview and detailed reference for the instruction set of the ADSP-218x DSPs. The instruction set is grouped into the following categories:

- Computational: ALU, MAC, Shifter
- Move
- Program Flow
- Multifunction
- Miscellaneous

The instruction set is tailored to the computation-intensive algorithms common in DSP applications. For example, sustained single-cycle multiplication/accumulation operations are possible. The instruction set provides full control of the processors' three computational units: the ALU, MAC and Shifter. Arithmetic instructions can process single-precision 16-bit operands directly; provisions for multiprecision operations are available.

The high-level syntax of ADSP-218x source code is both readable and efficient. Unlike many assembly languages, the ADSP-218x instruction set uses an algebraic notation for arithmetic operations and for data moves, resulting in highly readable source code. There is no performance penalty for this; each program statement assembles into one 24-bit instruction which executes in a single cycle. There are no multicycle instructions in the instruction set. (If memory access times require, or contention for off-chip memory occurs, overhead cycles are required, but all instructions can otherwise execute in a single cycle.) In addition to JUMP and CALL, the instruction set's control instructions support conditional execution of most calculations and a D0 UNTIL looping instruction. Return from interrupt (RTI) and return from subroutine (RTS) are also provided.

The IDLE instruction is provided for idling the processor until an interrupt occurs. IDLE puts the processor into a low-power state while waiting for interrupts.

Two addressing modes are supported for memory fetches. Direct addressing uses immediate address values; indirect addressing uses the I registers of the two data address generators (DAGs).

The 24-bit instruction word allows a high degree of parallelism in performing operations. The instruction set allows for single-cycle execution of any of the following combinations:

- Any ALU, MAC or Shifter operation (conditional or non-conditional)
- Any register-to-register move
- Any data memory read or write
- A computation with any data register to data register move
- A computation with any memory read or write
- A computation with a read from two memories

The instruction set allows maximum flexibility. It provides moves from any register to any other register, and from most registers to/from memory. In addition, almost any ALU, MAC or Shifter operation may be combined with any register-to-register move or with a register move to or from internal or external memory. Because the multifunction instructions best illustrate the power of the processors' architecture, in the next section we begin with a discussion of this group of instructions.

# **Multifunction Instructions**

Multifunction operations take advantage of the inherent parallelism of the ADSP-218x architecture by providing combinations of data moves, memory reads/memory writes, and computation, all in a single cycle.

### ALU/MAC With Data and Program Memory Read

Perhaps the single most common operation in DSP algorithms is the sum of products, performed as follows:

- Fetch two operands (such as a coefficient and data point)
- Multiply the operands and sum the result with previous products

The ADSP-218x processors can execute both data fetches and the multiplication/accumulation in a single-cycle. Typically, a loop of multiply/accumulates can be expressed in ADSP-218x source code in just two program lines. Since the on-chip program memory of the ADSP-218x processors is fast enough to provide an operand and the next instruction in a single cycle, loops of this type can execute with sustained single-cycle throughput. An example of such an instruction is:

```
MR=MR+MX0*MY0(SS), MX0=DM(I0,M0), MY0=PM(I4,M5);
```

The first clause of this instruction (up to the first comma) says that MR, the MAC result register, gets the sum of its previous value plus the product of the (current) X and Y input registers of the MAC (MX0 and MY0) both treated as signed (SS).

In the second and third clauses of this multifunction instruction, two new operands are fetched. One is fetched from the data memory (DM) pointed to by index register zero (10, post modified by the value in M0) and the other is fetched from the program memory location (PM) pointed to by 14 (post-modified by M5 in this instance). Note that indirect memory addressing uses a syntax similar to array indexing, with DAG registers providing the index values. Any I register may be paired with any M register within the same DAG.

As discussed in the *ADSP-218x DSP Hardware Reference Manual*, Chapter 2, "*Computational Units*", registers are read at the beginning of the cycle and written at the end of the cycle. The operands present in the MX0 and MY0 registers at the beginning of the instruction cycle are multiplied and added to the MAC result register, MR. The new operands fetched at the end of this same instruction overwrite the old operands after the multiplication has taken place and are available for computation on the following cycle. You may, of course, load any data registers in conjunction with the computation, not just MAC registers with a MAC operation as in our example.

The computational part of this multifunction instruction may be any unconditional ALU instruction except division or any MAC instruction except saturation. Certain other restrictions apply: the next X operand must be loaded into MX0 from data memory and the new Y operand must be loaded into MY0 from program memory (internal and external memory are identical at the level of the instruction set). The result of the computation must go to the result register (MR or AR) not to the feedback register (MF or AF).
## Data and Program Memory Read

This variation of a multifunction instruction is a special case of the multifunction instruction described above in which the computation is omitted. It executes only the dual operand fetch, as shown below:

```
AXO=DM(I2,MO), AYO=PM(I4,M6);
```

In this example we have used the ALU input registers as the destination. As with the previous multifunction instruction, X operands must come from data memory and Y operands from program memory (internal or external memory in either case, for the processors with on-chip memory).

# **Computation With Memory Read**

If a single memory read is performed instead of the dual memory read of the previous two multifunction instructions, a wider range of computations can be executed. The legal computations include all ALU operations except division, all MAC operations and all Shifter operations except SHIFT IMMEDIATE. Computation must be unconditional. An example of this kind of multifunction instruction is:

AR=AXO+AYO, DM(IO,MO)=AXO;

Here, an addition is performed in the ALU while a single operand is fetched from data memory. The restrictions are similar to those for previous multifunction instructions. The value of AXO, used as a source for the computation, is the value at the beginning of the cycle. The data read operation loads a new value into AXO by the end of the cycle. For this same reason, the destination register (AR in the example above) cannot be the destination for the memory read.

## **Computation With Memory Write**

The computation with memory write instruction is similar in structure to the computation with memory read: the order of the clauses in the instruction line, however, is reversed. First the memory write is performed, then the computation, as shown below:

```
DM(IO,MO) = AR, AR = AXO + AYO;
```

Again the value of the source register for the memory write (AR in this example) is the value at the beginning of the instruction. The computation loads a new value into the same register; this is the value in AR at the end of this instruction. Reversing the order of the clauses would imply that the result of the computation is written to memory when, in fact, the previous value of the register is what is written. There is no requirement that the same register be used in this way although this usually is the case in order to pipeline operands to the computation.

The restrictions on computation operations are identical to those given above. All ALU operations except division, all MAC operations, and all Shifter operations except SHIFT IMMEDIATE are legal. Computations must be unconditional.

## **Computation With Data Register Move**

This final type of multifunction instruction performs a data register to data register move in parallel with a computation. Most of the restrictions applying to the previous two instructions also apply to this instruction.

```
AR=AXO+AYO, AXO=MR2;
```

Here, an ALU addition operation occurs while a new value is loaded into AX0 from MR2. As before, the value of AX0 at the beginning of the instruction is the value used in the computation. The move may be from or to all ALU, MAC and Shifter input and output registers except the feedback registers (AF and MF) and SB.

In the example, the data register move loads the AXO register with the new value at the end of the cycle. All ALU operations except division, all MAC operations and all Shifter operations except SHIFT IMMEDIATE are legal. Computation must be unconditional.

A complete list of data registers is given in "Processor Registers: reg and dreg" on page 4-22. A complete list of the permissible *xops* and *yops* for computational operations is given in the reference page for each instruction. Table 4-1 shows the legal combinations for multifunction instructions (described in Table 4-2). You may combine operations on the same row with each other.

Table 4-1. Summary of Valid Combinations for Multifunction Instructions

Unconditional Computations	Data Move (DM=DAG1)	Data Move (PM=DAG2)
None or any ALU (except Division) or MAC	DM read	PM read
Any MAC Any ALU except Division Any Shift except Immediate	DM read — DM write — Register-to-Register	— PM read — PM write

<alu>*†</alu>	,	AX0	=	DM (		ΙO	,	MO	),		AY0	=	РM	(	I4	,	M4	),
<mac>*†</mac>		AX1				I 1	,	M1			AY1				Ι5	,	M5	
		MX0				Ι2	,	M2			MY O				Ι6	,	M6	
		MX1				I3	,	М3			MY1				Ι7	,	M7	
AXO AX1 MXO MX1 <alu>* <mac>*</mac></alu>	= [	DM ( , dre	I0 I1 I2 I3 g =	, , , DM	M0 M1 M2 M3 (	) I0 I1	,	AYO AY1 MYO MY1 ,	M0 M1	₽M )	1 ( ) ]	I 4 I 5 I 6 I 7	, , ,	M4 M5 M6 M7	)	;		
<shift>*</shift>	ť					I 2 I 3		, ,	M2 M3									
						I4 I5 I6 I7		, , ,	M4 M5 M6 M7									
				ΡM	(	I4 I5 I6 I7		, , ,	M4 M5 M6 M7	)								

Table 4-2. Multifunction Instructions

\* May not be conditional instruction

;

DM (	I0 I1 I2 I3	, , ,	M0 M1 M2 M3	)	=	dreg,	<alu>* <mac>* <shift>*</shift></mac></alu>
	I4 I5 I6 I7	, , ,	M4 M5 M6 M7				
PM (	I4 I5 I6 I7	, , ,	M4 M5 M6 M7	)			
<alu> <mac> <shift< td=""><td>* * &gt;*</td><td>, dr</td><td>eg =</td><td>dreg</td><td>;</td><td></td><td></td></shift<></mac></alu>	* * >*	, dr	eg =	dreg	;		

<alu></alu>	Any ALU instructions (except DIVS, DIVQ)
<mac></mac>	Any multiply/accumulate instruction
<shift></shift>	Any shifter instruction (except Shift Immediate)

\* May not be conditional instruction

† AR, MR result registers must be used-- not AF, MF feedback registers or NONE.

#### SEE ALSO:

• "ALU/MAC With Data and Program Memory Read" on page 4-190

# ALU, MAC and Shifter Instructions

This group of instructions performs computations. All of these instructions can be executed conditionally except the ALU division instructions and the Shifter SHIFT IMMEDIATE instructions.

# **ALU Group**

The following is an example of one ALU instruction, Add/Add with Carry:

IF AC AR=AX0+AY0+C;

The (optional) conditional expression, IF AC, tests the ALU Carry bit (AC); if there is a carry from the previous instruction, this instruction executes, otherwise a NOP occurs and execution continues with the next instruction. The algebraic expression AR=AXO+AYO+C means that the ALU result register (AR) gets the value of the ALU X input and Y input registers plus the value of the carry-in bit.

Table 4-3 gives a summary list of all ALU instructions. In this list, *condition* stands for all the possible conditions that can be tested and *xop* and *yop* stand for the registers that can be specified as input for the ALU. The conditional clause is optional and is enclosed in square brackets to show this. A complete list of the permissible *xops* and *yops* is given in the reference page for each instruction.

A complete list of conditions is given in Table 4-9 on page 4-24.

### Table 4-3. ALU Instructions

```
AR = xop
AF
                                         + yop
+ C
+ yop + C
    [IF cond]
                                                                 ;
                                           + constant
                                         + constant + C
    [IF cond] AR = xop - yop

AF - yop + C - 1

+ C - 1

- constant

-1 constant + C - 1
                                                                 ;
                                        constant + C - 1
    [IF cond] AR = - xop ;
AF yop
                AR = NOT xop ;
AF yop
    [IF cond]
   [IF cond]
                 AR = ABS xop;
AF
    [IF cond] AR = yop + 1;
AF
    [IF cond] AR = yop - 1;
AF
DIVS yop, xop ;
DIVQ xop ;
NONE = \langle ALU \rangle;
```

$$\begin{bmatrix} IF \ cond \end{bmatrix} \quad \begin{vmatrix} AR \\ AF \end{vmatrix} = \begin{vmatrix} yop \\ -xop + C - 1 \\ -xop + C - 1 \\ -xop + constant \\ -xop + constant + C -1 \end{vmatrix} ;$$

$$\begin{bmatrix} IF \ cond \end{bmatrix} \quad \begin{vmatrix} AR \\ AF \end{vmatrix} = xop \qquad \begin{vmatrix} AND \\ OR \\ XOR \end{vmatrix} \qquad yop \qquad ;$$

$$\begin{bmatrix} IF \ cond \end{bmatrix} \quad \begin{vmatrix} AR \\ AF \end{vmatrix} = \begin{vmatrix} TSTBIT \ n \ OF \ xop \\ CLRBIT \ n \ OF \ xop \\ TGLBIT \ n \ OF \ xop \end{vmatrix} ;$$

$$\begin{bmatrix} IF \ cond \end{bmatrix} \quad \begin{vmatrix} AR \\ AF \end{vmatrix} = \begin{vmatrix} TSTBIT \ n \ OF \ xop \\ TGLBIT \ n \ OF \ xop \\ TGLBIT \ n \ OF \ xop \end{vmatrix} ;$$

$$\begin{bmatrix} IF \ cond \end{bmatrix} \quad \begin{vmatrix} AR \\ AF \end{vmatrix} = PASS \qquad xop \\ yop \\ constant \end{vmatrix} ;$$

# MAC Group

Here is an example of one of the MAC instructions, Multiply/Accumulate:

IF NOT MV MR=MR+MX0\*MY0(UU);

The conditional expression, IF NOT MV, tests the MAC overflow bit. If the condition is not true, a NOP is executed. The expression MR=MR+MX0\*MY0 is the multiply/accumulate operation: the multiplier result register (MR) gets the value of itself plus the product of the X and Y input registers selected. The modifier in parentheses (UU) treats the operands as unsigned. There

can be only one such modifier selected from the available set. The modifier (SS) means both are signed, while (US) and (SU) mean that either the first or second operand is signed; (RND) means to round the (implicitly signed) result.

Table 4-4 gives a summary list of all MAC instructions. In this list, *condition* stands for all the possible conditions that can be tested and *xop* and *yop* stand for the registers that can be specified as input for the MAC. A complete list of the permissible *xops* and *yops* is given in the reference page for each instructions.

Table 4-4. MAC Instructions



#### ALU, MAC and Shifter Instructions

Table 4-4. MAC Instructions (Cont'd)

```
[IF cond] MR = 0;
MF
[IF cond] MR = MR [(RND)];
MF
```

IF MV SAT MR ;

## Shifter Group

Here is an example of one of the Shifter instruction, Normalize:

IF NOT CE SR= SR OR NORM SI (HI);

The conditional expression, IF NOT CE, tests the "not counter expired" condition. If the condition is false, a NOP is executed. The destination of all shifting operations is the Shifter Result register, SR. The destination of exponent detection instructions is SE or SB, as shown in Table 4-5. In this example, SI, the Shifter Input register, is the operand. The amount and direction of the shift is controlled by the signed value in the SE register in all shift operations except an immediate shift. Positive values cause left shifts; negative values cause right shifts.

The optional SR OR modifier logically ORs the result with the current contents of the SR register; this allows you to construct a 32-bit value in SR from two 16-bit pieces. NORM is the operator and HI is the modifier that determines whether the shift is relative to the HI or LO (16-bit) half of SR. If SR OR is omitted, the result is passed directly into SR.

Table 4-5 gives a summary list of all Shifter instructions. In this list, *condition* stands for all the possible conditions that can be tested.

## Table 4-5. Shifter Instructions

[IF cond]	SR	=	[SR OR] ASHIFT xop	(	HI LO	);
[IF cond]	SR	=	[SR OR] LSHIFT xop	(	HI LO	);
[IF cond]	SR	=	[SR OR] NORM xop	(	HI LO	);
[IF cond]	SE	=	EXP xop	(	HI LO HIX	);
[IF cond]	SB	=	EXPADJ X	op;		
SR =	[SR OR]	ASHIFT xoq	o BY ≺exp>	(	HI LO	);
SR =	[SR OR]	LSHIFT xoj	o BY ≺exp>	(	HI LO	);

# **MOVE: Read and Write Instructions**

Move instructions, shown in Table 4-6, move data to and from data registers and external memory. Registers are divided into two groups, referred to as reg which includes almost all registers and dreg, or data registers, which is a subset. Only the program counter (PC) and the ALU and MAC feedback registers (AF and MF) are not accessible.

Table 4-6. Move Instructions

```
reg = reg ;

reg = DM (<address>) ;

dreg = DM ( ( 10 . M0 ));

I1 . M1
I2 . M2
I3 . M3

I4 . M4
I5 . M5
I6 . M6
I7 . M7

DM ( 10 . M0 ) = dreg ;

I1 . M1
I2 . M2
I3 . M3
```

#### Table 4-6. Move Instructions (Cont'd)

Ι4	,	M4
Ι5	,	Μ5
Ι6	,	Μ6
Ι7	,	Μ7

DM (<address>) = reg ;

reg = <data> ;

Table 4-7 shows how registers are grouped. These registers are read and written via their register names.

reg (registers)	dreg (Data Registers)
SB	
РХ	
I0 – 17, M0 – M7, L0 – L7	AX0, AX1, AY0, AY1, AR
CNTR	MX0, MX1, MY0, MY1, MR0, MR1, MR2
ASTAT, MSTAT, SSTAT	SI, SE, SR0, SR1
IMASK, ICNTL, IFC	
TX0, TX1, RX0, RX1	

Table 4-7. Processor Registers: reg and dreg

# **Program Flow Control**

Program flow control on the ADSP-218x processors is simple but powerful. Here is an example of one instruction:

```
IF EQ JUMP my_label;
```

JUMP, of course, is a familiar construct from many other languages. My\_label is any identifier you wish to use as a label for the destination jumped to. Instead of the label, an index register in DAG2 may be explicitly used. The default scope for any label is the source code module in which it is declared. The assembler directive .ENTRY makes a label visible as an entry point for routines outside the module. Conversely, the .EXTERNAL directive makes it possible to use a label declared in another module.

If the counter condition (DO UNTIL CE, IF NOT CE) is to be used, an assignment to CNTR must be executed to initialize the counter value. JUMP and CALL permit the additional conditionals FLAG\_IN and NOT FLAG\_IN to be used for branching on the state of the FI pin, but only with direct addressing, not with DAG2 as the address source.

RTS and RTI provide for conditional return from CALL or interrupt vectors respectively.

The IDLE instruction provides a way to wait for interrupts. IDLE causes the processor to wait in a low-power state until an interrupt occurs. When an interrupt is serviced, control returns to the instruction following the IDLE statement. IDLE uses less power than loops created with NOPs.

Table 4-8 gives a summary of all program flow control instructions. The *condition* codes are described in Table 4-9.

Table 4-8. Program Flow Control Instructions



#### **Program Flow Control**

#### Table 4-8. Program Flow Control Instructions (Cont'd)

[IF cond] RTI;

DO <address> [UNTIL termination];

IDLE [(n)];

Syntax	Status Condition	True If:
EQ	Equal Zero	AZ = 1
NE	Not Equal Zero	AZ = 0
LT	Less Than Zero	AN .XOR. AV = 1
GE	Greater Than or Equal Zero	AN .XOR. AV = 0
LE	Less Than or Equal Zero	(AN .XOR. AV) .OR. AZ = 1
GT	Greater Than Zero	(AN .XOR. AV) .OR. AZ = 0
AC	ALU Carry	AC = 1
NOT AC	Not ALU Carry	AC = 0
AV	ALU Overflow	AV = 1
NOT AV	Not ALU Overflow	AV = 0
MV	MAC Overflow	MV = 1
NOT MV	Not MAC Overflow	MV = 0
NEG X	Input Sign Negative	AS = 1
POS	X Input Sign Positive	AS = 0
NOT CE	Not Counter Expired	
FLAG_IN <sup>1</sup>	FI pin	Last sample of FI pin = 1
NOT FLAG_IN1	Not FI pin	Last sample of FI pin = 0

#### Table 4-9. IF Status Condition Codes

1 Only available on JUMP and CALL instructions

# **Miscellaneous Instructions**

There are several miscellaneous instructions. NOP is a no operation instruction. The PUSH/POP instructions allow you to explicitly control the status, counter, PC and loop stacks; interrupt servicing automatically pushes and pops these stacks.

The Mode Control instruction enables and disables processor modes of operation: bit-reversal on DAG1, latching ALU overflow, saturating the ALU result register, choosing the primary or secondary register set, G0 mode for continued operation during bus grant, multiplier shift mode for fractional or integer arithmetic, and timer enabling.

A single ENA or DIS can be followed by any number of mode identifiers, separated by commas; ENA and DIS can also be repeated. All seven modes can be enabled, disabled, or changed in a single instruction.

The MODIFY instruction modifies the address pointer in the I register selected with the value in the selected M register, without performing any actual memory access. As always, the I and M registers must be from the same DAG; any of 10-13 may be used only with one from M0-M3 and the same for 14-17 and M4-M7. If circular buffering is in use, modulus logic applies. See the *ADSP-218x DSP Hardware Reference Manual*, Chapter 4, "*Data Address Generators*" for more information.

The F0 (Flag Out), FL0, FL1, and FL2 pins can each be set, cleared, or toggled. This instruction provides a control structure for multiprocessor communication.

## **Miscellaneous Instructions**

### Table 4-10. Miscellaneous Instructions

NOP;

E PUSH ST POP	S] [,	, POP	CNTR]	[, POP	PC]	[,POP	L00P];	
ENA DIS	B I A V A SE G M	TRE _LATC R_SAT CRE _MODE _MODE	V H G	[,]	;			
MODIFY (	I 0 I 1 I 2 I 3	, , ,	M0 M1 M2 M3	);				
	I4 I5 I6 I7	, , ,	M4 M5 M6 M7					
[IF cond]	]	f T	SET RESET OGGLE		FLA	AG_OUT FLO FL1 FL2		[,]
ENA INTS;								

;

DIS

# **Extra Cycle Conditions**

All instructions execute in a single cycle except under certain conditions, as explained below.

# **Multiple Off-Chip Memory Accesses**

The data and address buses of the ADSP-218x processors are multiplexed off-chip. Because of this occurrence, the processors can perform only one off-chip access per instruction in a single cycle. If two off-chip accesses are required such as the instruction fetch and one data fetch, or data fetches from both program and data memory, then one overhead cycle occurs. In this case the program memory access occurs first, followed by the data memory access. If three off-chip accesses are required—the instruction fetch as well as data fetches from both program and data memory—then two overhead cycles occur.

A multifunction instruction requires three items to be fetched from memory: the instruction itself and two data words. No extra cycle is needed to execute the instruction as long as only one of the fetches is from external memory. This excludes external wait states or bus request holdoffs. Two fetches must be from on-chip memory, either PM or DM.

# Wait States

All family processors allow the programming of wait states for external memory chips. Up to 15 extra wait state cycles for the ADSP-2185M, ADSP-2186M, ADSP-2188M, ADSP-2189M, ADSP-2188N, ADSP-2185N, ADSP-2186N, ADSP-2187N and ADSP-2189N DSPs and up to seven extra wait state cycles for all other ADSP-218x models may be added to the processor's access time for external memory. Extra cycles inserted due to wait states are in addition to any cycles caused by multiple off-chip accesses. Wait state programming is described in the *ADSP-218x DSP Hardware Reference*, Chapter 8, "*Memory Interface*".

Wait states and multiple off-chip memory accesses are the two cases when an extra cycle is generated during instruction execution. The following case, SPORT autobuffering and DMA, causes the insertion of extra cycles *between* instructions.

## **SPORT Autobuffering and DMA**

If serial port autobuffering or DMA is being used to transfer data words to or from internal memory, then one memory access is "stolen" for each transfer. The stolen memory access occurs only between complete instructions. If extra cycles are required to execute any instruction (for one of the two reasons above), the processor waits until it is completed before "stealing" the access cycle.

# Instruction Set Syntax

The following sections describe instruction set syntax and other notation conventions used in the reference page of each instruction.

## **Punctuation and Multifunction Instructions**

All instructions terminate with a semicolon. A comma separates the clauses of a multifunction instruction but does not terminate it. For example, the statements below in Example A comprise one multifunction instruction (which can execute in a single cycle). Example B shows two separate instructions, requiring two instruction cycles.

#### Example A: One multifunction instruction

```
/* a comma is used in multifunction instructions */
AX0 = DM(I0, M0), or AX0 = DM(I0, M0),AY0 = PM(I4, M4);
AY0 = PM(I4, M4);
```

### Example B: Two separate instructions

/\* a semicolon terminates an instruction \*/
AXO = DM(IO, MO);
AYO = PM(I4, M4);

# Syntax Notation Example

Here is an example of one instruction, the ALU Add/Add with Carry instruction:

[ IF cond ] AR = xop + yop ; AF C yop + C

The permissible *conds*, *xops*, and *yops* are given in a list. The conditional IF clause is enclosed in square brackets, indicating that it is optional.

The destination register for the add operation must be either AR or AF. These are listed within parallel bars, indicating that one of the two must be chosen.

Similarly, the *yop* term may consist of a Y operand, the carry bit, or the sum of both. One of these three terms must be used.

# **Status Register Notation**

The following notation is used in the discussion of the effect each instruction has on the processors' status registers:

Notation	Meaning					
*	An asterisk indicates a bit in the status word that is changed by the execution of the instruction.					
-	A dash indicates that a bit is not affected by the instruction.					
0 or 1	Indicates that a bit is unconditionally cleared or set.					
For example, the status word ASTAT is shown below:						

Table 4-11. Status Register Notation

ASTAT:	7	6	5	4	3	2	1	0
	SS	MV	AQ	AS	AC	AV	AN	ΑZ
	_	*	_	_	_	0	_	_

Here the MV bit is updated and the AV bit is cleared.

# **ALU Instructions**

ALU instructions are:

- "Add/Add With Carry" on page 4-32
- "Subtract X-Y/Subtract X-Y With Borrow" on page 4-35
- "Subtract Y-X/Subtract Y-X With Borrow" on page 4-39
- "Bitwise Logic: AND, OR, XOR" on page 4-42
- "Bit Manipulation: TSTBIT, SETBIT, CLRBIT, TGLBIT" on page 4-45
- "Clear: PASS" on page 4-48
- "Syntax" on page 4-32
- "NOT" on page 4-54
- "Absolute Value: ABS" on page 4-56
- "Increment" on page 4-58
- "Decrement" on page 4-60
- "Divide Primitives: DIVS and DIVQ" on page 4-62
- "Generate ALU Status Only: NONE" on page 4-70

## Add/Add With Carry

Syntax

Permissible xops		Permissible yops	Permissible conds					
AX0	MR2	AY0	EQ	LE	AC			
AX1	MR1	AY1	NE	NEG	NOT AC			
AR	MR0	AF	GT	POS	MV			
	SR1		GE	AV	NOT MV			
	SR0		LT	NOT AV	NOT CE			

#### Permissible constants

1, 2, 4, 8, 16, 32, 64, 128, 256, 512, 1024, 2048, 4096, 8192, 16384, 32767, -2, -3, -5, -9, -17, -33, -65, -129, -257, -513, -1025, -2049, -4097, -8193, -16385, -32768

#### Example

```
/* Conditional ADD with carry */
IF EQ AR = AXO + AYO + C:
/* Unconditional ADD */
AR = AR + 512;
/* ADD a negative constant */
AR = AX0 - 129;
                                      /* AR = AXO + (-129) */
/* 32 Bit Addition: AX1:AX0 = AX1:AX0 + AY1:AY0 */
DIS AR_SAT;
                                 /* If not already disabled */
AR = AXO + AYO:
                                           /* Add low words */
AR = AX1 + AY1 + C, AX0 = AR;
                                /* Add high words + carry */
                                 /* Copy result if required */
AX1 = AR;
```

## Description

Test the optional condition and, if true, perform the specified addition. If false then perform a no-operation. Omitting the condition performs the addition unconditionally. The addition operation adds the first source operand to the second source operand along with the ALU carry bit, AC, (if designated by the +C notation), using binary addition. The result is stored in the destination register. The operands are contained in the data registers or constant specified in the instruction.

### Status Generated

(See Table 4-11 on page 4-30 for register notation)

ASTAT:	7	6	5	4	3	2	1	0
	SS	MV	AQ	AS	AC	AV	AN	AZ
	_	-	-	*	*	*	*	*

ΑZ	Set if the result equals zero. Cleared otherwise.
AN	Set if the result is negative. Cleared otherwise.
AV	Set if an arithmetic overflow occurs. Cleared otherwise.
AC	Set if a carry is generated. Cleared otherwise.

#### Instruction Format

Conditional ALU/MAC operation, Instruction Type 9:

23	22	21	20	19	18	17 16	15	14	13	12	11	10 9	8	7	6	5	4	3	2	1	0
0	0	1	0	0	Ζ	AMF				Yop	)	Хор		0	0	0	0	CC	DNE	)	

AMF specifies the ALU or MAC operation, in this case:

AMF = 10010 for + yop + C AMF = 10011 for xop + yop

Note that xop + C is a special case of xop + yop + C with yop=0.

Z: Destination register Yop: Y operand

### **ALU Instructions**

#### Xop: X operand COND: Condition

(xop + constant) Conditional ALU/MAC operation, Instruction Type 9:

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	1	0	0	Ζ	AM	1F				YY		Xoj	р		CC	2	BC	)	CC	)NC	)	

AMF specifies the ALU or MAC operation, in this case:

AMF = 10010 for xop + constant + C AMF = 10011 for xop + constant

Z: Destination register COND: Condition

Xop: X operand

BO, CC, and YY specify the constant.

See Also

- IF Condition Codes Table 4-9 on page 4-24
- "Status Condition Codes" on page A-11
- BO, CC, and YY "ALU/MAC Constant Codes" on page A-22
- "AMF Function Codes" on page A-9
- "ALU/MAC Result Register Codes" on page A-22
- "Y Operand Codes" on page A-21

## Subtract X-Y/Subtract X-Y With Borrow

Syntax

[ IF cond ] AR = xop - yop ; AF - yop + C-1 + C-1 - [constant] - [constant] + C-1

Permis	sible xops	Permissible yops	Permissi	ble status cond	itions
AX0	MR2	AY0	EQ	LE	AC
AX1	MR1	AY1	NE	NEG	NOT AC
AR	MR0	AF	GT	POS	MV
	SR1		GE	AV	NOT MV
	SR0		LT	NOT AV	NOT CE

#### Permissible constants

0, 1, 2, 4, 8, 16, 32, 64, 128, 256, 512, 1024, 2048, 4096, 8192, 16384, 32767, -2, -3, -5, -9, -17, -33, -65, -129, -257, -513, -1025, -2049, -4097, -8193, -16385, -32768

#### Example

```
/* Conditional subtraction */
IF GE AR = AXO - AYO:
/* Subtraction of the negative value -17 */
AR = AX0 + 17;
                                           /* AR = AX0 - (-17) */
/* 32 Bit Subtraction: AX1:AX0 = AX1:AX0 - AY1:AY0 */
DIS AR SAT:
                                   /* If not already disabled */
AR = AXO - AYO;
                                        /* Subtract low words */
AR = AX1 - AY1 + C -1, AX0 = AR; /* Sub high words - borrow */
AX1 = AR;
                                   /* Copy result if required */
/* Negate MR Register MR = -MR */
DIS AR SAT:
                                   /* If not already disabled */
```

```
AR = -MR0;/* Negate low word */
AR = -MR1 + C -1, MR0 = AR; /* Negate middle word - borrow */
AR = -MR2 + C -1, MR1 = AR; /* Negate high word minus borrow */
MR2 = AR;
```

#### Description

Test the optional condition and, if true, then perform the specified subtraction. If the condition is not true then perform a no-operation. Omitting the condition performs the subtraction unconditionally. The subtraction operation subtracts the second source operand from the first source operand, and optionally adds the ALU Carry bit (AC) minus 1 ( $0\times0001$ ), and stores the result in the destination register. The (C-1) quantity effectively implements a borrow capability for multiprecision subtractions. The operands are contained in the data registers or constant specified in the instruction.

#### Status Generated

(See Table 4-11 on page 4-30 for register notation)

SS	MV	AQ	AS	AC	AV	AN	AZ
_	_	_	*	*	*	*	*

ΑZ	Set if the result equals zero. Cleared otherwise.
AN	Set if the result is negative. Cleared otherwise.
AV	Set if an arithmetic overflow occurs. Cleared otherwise.
AC	Set if a carry is generated. Cleared otherwise.

#### Instruction Format

#### Conditional ALU/MAC operation, Instruction Type 9:

23	22	21	20	19	18	17 16	15	14	13	12 1	11	10 9	8	7	6	5	4	3	2	1	0
0	0	1	0	0	Ζ	AMF				Yop		Хор		0	0	0	0	CC	ONE	)	

AMF specifies the ALU or MAC operation, in this case:

AMF = 10110 for xop - yop + C - 1 operation AMF = 10111 for xop - yop operation

Note that xop + C - 1 is a special case of xop - yop + C - 1 with yop=0.

Z: Destination register Yop: Y operand

Xop: X operand COND: Condition

(xop + constant) Conditional ALU/MAC operation, Instruction Type 9:

23	22	21	20	19	18	17 16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	1	0	0	Ζ	AMF				YY		Xop	2		CC	2	BC	)	CC	ONE	)	

AMF specifies the ALU or MAC operation, in this case:

AMF = 10010 for xop - constant + C-1 AMF = 10011 for xop - constant

Z: Destination register COND: Condition

Xop: X operand

BO, CC, and YY specify the constant.

See Also

- IF Condition Codes Table 4-9 on page 4-24
- "Status Condition Codes" on page A-11
- BO, CC, and YY "ALU/MAC Constant Codes" on page A-22
- "ALU/MAC Result Register Codes" on page A-22
- "AMF Function Codes" on page A-9

## **ALU Instructions**

- "X Operand Codes" on page A-21
- "Y Operand Codes" on page A-21

## Subtract Y-X/Subtract Y-X With Borrow

Syntax

 $\begin{bmatrix} IF cond \end{bmatrix} AR = yop - xop ;$ AF - xop + C - 1 - xop + C - 1 - xop + constant - xop + constant + C - 1 - xop + constant + cons

Permissi	ble xops	Permissible yops	Permissible	status condit	tions
AX0	MR2	AY0	EQ	LE	AC
AX1	MR1	AY1	NE	NEG	NOT AC
AR	MR0	AF	GT	POS	MV
	SR1		GE	AV	NOT MV
	SR0		LT	NOT AV	NOT CE

#### Permissible constants

0, 1, 2, 4, 8, 16, 32, 64, 128, 256, 512, 1024, 2048, 4096, 8192, 16384, 32767, -2, -3, -5, -9, -17, -33, -65, -129, -257, -513, -1025, -2049, -4097, -8193, -16385, -32768

#### Example

IF GT AR = AYO - AXO + C + 1;

#### Description

Test the optional condition and, if true, then perform the specified subtraction. If the condition is not true then perform a no-operation. Omitting the condition performs the subtraction unconditionally. The subtraction operation subtracts the second source operand from the first source operand, and optionally adds the ALU Carry bit (AC) minus 1 ( $0 \times 0001$ ), and stores the result in the destination register. The (C-1) quantity effectively implements a borrow capability for multiprecision subtractions. The operands are contained in the data registers or constant specified in the instruction.

Status Generated

#### **ALU Instructions**

(0	T 11 / 1		1 20	C		• \
(See	lable 4-1	l on	page 4-50	tor	register	notation)
(000	1 4010 1 1	1 011	puge 1 00	101	regioter	motation

ASTAT:	7	6	5	4	3	2	1	0
	SS	MV	AQ	AS	AC	AV	AN	AZ
	-	-	-	-	*	*	*	*

ΑZ	Set if the result equals zero. Cleared otherwise.
AN	Set if the result is negative. Cleared otherwise.
AV	Set if an arithmetic overflow occurs. Cleared otherwise
AC	Set if a carry is generated. Cleared otherwise.

#### Instruction Format

#### Conditional ALU/MAC operation, Instruction Type 9:

23	22	21	20	19	18	17 16	15	14	13	12	11	10 9	8	7	6	5	4	3	2	1	0
0	0	1	0	0	Ζ	AMF				Yop	)	Хор		0	0	0	0	CC	ONE	)	

AMF specifies the ALU or MAC operation, in this case:

AMF = 11010 for yop - xop + C - 1 AMF = 11001 for yop - xop

Note that -xop + C - 1 is a special case of yop - xop + C - 1 with yop=0.

Ζ:	Destination register	Yop:	Y operand
Xop:	X operand	COND:	Condition

(-xop + constant) Conditional ALU/MAC operation, Instruction Type 9:

23	22	21	20	19	18	17 16 15 14 13	12 11	10 9 8	76	5 4	3 2	1 0	
0	0	1	0	0	Ζ	AMF	YY	Хор	CC	BO	COND		

AMF specifies the ALU or MAC operation, in this case:

AMF = 11010 for constant - xop + C-1 AMF = 11001 for constant - xop

## **Instruction Set**

Z: Destination register COND: Condition

Xop: X operand

BO, CC, and YY specify the constant.

See Also

- IF Condition Codes Table 4-9 on page 4-24
- "Status Condition Codes" on page A-11
- BO, CC, and YY "ALU/MAC Constant Codes" on page A-22
- "ALU/MAC Result Register Codes" on page A-22
- "AMF Function Codes" on page A-9
- "X Operand Codes" on page A-21
- "Y Operand Codes" on page A-21

### **ALU Instructions**

### Bitwise Logic: AND, OR, XOR

Syntax

[IF cond] AR = xop AND yop ; AF OR constant XOR

Г АС
ГMV
Г СЕ

#### Permissible constants

0, 1, 2, 4, 8, 16, 32, 64, 128, 256, 512, 1024, 2048, 4096, 8192, 16384, 32767, -2, -3, -5, -9, -17, -33, -65, -129, -257, -513, -1025, -2049, -4097, -8193, -16385, -32768

#### Example

AR = AXO XOR AYO; IF FLAG\_IN AR = MRO AND 8192;

#### Description

Test the optional condition and if true, then perform the specified bitwise logical operation (logical AND, inclusive OR, or exclusive OR). If the condition is not true then perform a no-operation. Omitting the condition performs the logical operation unconditionally. The operands are contained in the data registers or constant specified in the instruction.

Status Generated

ASTAT:	7	6	5	4	3	2	1	0
	SS	MV	AQ	AS	AC	AV	AN	AZ
	_	_	-	-	0	0	*	*
ΑZ	Set if the	he result eq	uals zero.	Cleared ot	herwise.			
AN	Set if the	he result is	negative. (	Cleared oth	nerwise.			
AV	Always	cleared.						
AC	Always	cleared.						

#### (See Table 4-11 on page 4-30 for register notation)

#### Instruction Format

Ζ:

Conditional ALU/MAC operation, Instruction Type 9:

23	22	21	20	19	18	17 16 15	14 13	12 11	10 9 8	7	6	5	4	3	2	1	0
0	0	1	0	0	Ζ	AMF		Yop	Хор	0	0	0	0	CC	NE	)	

AMF specifies the ALU or MAC operation, in this case:

AMF = 11100 for AND operation AMF = 11101 for OR operation AMF = 11110 for XOR operation Destination register Y operand Yop: X operand Condition COND: Xop:

(xop AND/OR/XOR constant) Conditional ALU/MAC operation, Instruction Type 9:

23	22	21	20	19	18	17 16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	1	0	0	Ζ	AMF				YY		Xop	)		CC	2	BC	)	CC	DND	)	

AMF specifies the ALU or MAC operation, in this case:

AMF = 11100 for AND operation

## **ALU Instructions**

AMF = 11101 for OR operation

AMF = 11110 for XOR operation

Z: Destination register COND: Condition

Xop: X operand

BO, CC, and YY specify the constant.

See Also

- IF Condition Codes Table 4-9 on page 4-24
- "Status Condition Codes" on page A-11
- BO, CC, and YY "ALU/MAC Constant Codes" on page A-22
- "ALU/MAC Result Register Codes" on page A-22
- "AMF Function Codes" on page A-9
- "X Operand Codes" on page A-21
- "Y Operand Codes" on page A-21
### Bit Manipulation: TSTBIT, SETBIT, CLRBIT, TGLBIT

Syntax

[ IF cond ] AR = TSTBIT n OF xop ; AF SETBIT n OF xop CLRBIT n OF xop TGLBIT n OF xop

cops	Permissi	ble conds	
MR2	EQ	LE	AC
MR1	NE	NEG	NOT AC
MR0	GT	POS	MV
	GE	AV	NOT MV
	LT	NOT AV	NOT CE
	KOPS MR2 MR1 MR0	cops Permissi MR2 EQ MR1 NE MR0 GT GE LT	copsPermissible condsMR2EQLEMR1NENEGMR0GTPOSGEAVLT

#### Permissible n values (0=LSB)

0, 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15

### Example

```
AF = TSTBIT 5 OF AR;
AR = TGLBIT 13 OF AXO;
/* The instruction displays in the debugger as AR = AXO XOR
8192; which is the equivalent of the instruction AR = TGLBIT13
OF AXO. */
```

### Description

Test the optional condition and if true, then perform the specified bit operation. If the condition is not true then perform a no-operation. Omitting the condition performs the operation unconditionally. These operations cannot be used in multifunction instructions.

These operations are defined as follows:

- TSTBIT is an AND operation with a 1 in the selected bit
- SETBIT is an OR operation with a 1 in the selected bit

- CLRBIT is an AND operation with a 0 in the selected bit
- TGLBIT is an XOR operation with a 1 in the selected bit

The ASTAT status bits are affected by these instructions. The following instructions could be used, for example, to test a bit and branch accordingly:

AF=TSTBIT 5 OF AR; IF NE JUMP set; /\*Jump to set if bit 5 of AR is set\*/

#### Status Generated

(See Table 4-11 on page 4-30 for register notation)

ASTAT:	7	6	5	4	3	2	1	0
	SS	MV	AQ	AS	AC	AV	AN	AZ
	-	-	_	-	0	0	*	*

- AZ Set if the result equals zero. Cleared otherwise.
- AN Set if the result is negative. Cleared otherwise.
- AV Always cleared.
- AC Always cleared.

#### Instruction Format

(*xop AND/OR/XOR constant*) Conditional ALU/MAC operation, Instruction Type 9:

23	22	21	20	19	18	17 16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	1	0	0	Ζ	AMF				YY		Xoj	р		СС	2	BC	)	CC	ONE	)	

AMF specifies the ALU or MAC operation, in this case:

AMF = 11100 for AND operation

AMF = 11101 for OR operation

AMF = 11110 for XOR operation

- Z: Destination register COND: Condition
- Xop: X operand
- BO, CC, and YY specify the constant.

- IF Condition Codes Table 4-9 on page 4-24
- "Status Condition Codes" on page A-11
- BO, CC, and YY "ALU/MAC Constant Codes" on page A-22
- "ALU/MAC Result Register Codes" on page A-22
- "X Operand Codes" on page A-21

### **Clear: PASS**

Syntax

[ IF cond ]	AR	=	PASS	хор	;
	ΑF			уор	
				constant	

Permissil	ble xops	Permissible yops	Permiss	ible conds	
AX0	MR2	AY0	EQ	LE	AC
AX1	MR1	AY1	NE	NEG	NOT AC
AR	MR0	AF	GT	POS	MV
	SR1		GE	AV	NOT MV
	SR0		LT	NOT AV	NOT CE

#### Permissible constants

0, 1, 2, 3, 4, 5, 7, 8, 9, 15, 16, 17, 31, 32, 33, 63, 64, 65, 127, 128, 129, 255, 256, 257, 511, 512, 513, 1023, 1024, 1025, 2047, 2048, 2049, 4095, 4096, 4097, 8191, 8192, 8193, 16383, 16384, 16385, 32766, 32767 -1, -2, -3, -4, -5, -6, -8, -9, -10, -16, -17, -18, -32, -33, -34, -64, -65, -66, -128, -129, -130, -256, -257, -258, -512, -513, -514, -1024, -1025, -1026, -2048, -2049, -2050, -4096, -4097, -4098, -8192, -8193, -8194, -16384, -16385, -16386, -32767, -32768

#### Example

```
/* Conditional pass*/
IF GE AR = PASS AYO;
/* Unconditional pass*/
AR = PASS 0;
AR = PASS 8191;
/* Single-cycle register swap */
AR = PASS AXO, AXO = AR;
/* Clip AXO by AYO */
/* AR = SIGN(AXO) * MIN(AXO,AYO);*/
DIS AR_SAT; /* Disable */
```

```
      AF = AYO - AXO, AR = AXO;
      /* Check if X > Y */

      IF GT AR = PASS AYO;
      /* If yes saturate X By Y */

      IF LT AF = AXO + AYO;
      /* Y - (-X) = X + Y */

      IF LT AR = -AYO;
      /* If X < -Y saturate X By - Y */</td>
```

#### Description

Test the optional condition and if true, pass the source operand unmodified through the ALU block and store in the destination register. If the condition is not true perform a no-operation. Omitting the condition performs the PASS unconditionally. The source operand is contained in the data register or constant specified in the instruction.

PASS 0 is one method of clearing AR. The PASS 0 instruction can also be combined with memory reads and writes in a multifunction instruction to clear AR.

The PASS instruction performs the transfer to the AR or AF register and affects the ASTAT status flags (for xop, yop, -1, 0, 1 only). This instruction is different from a register move operation which does not affect any status flags. The PASS constant operation (using any constant other than -1, 0, or 1) causes the ASTAT status flags to be undefined.

The PASS constant operation (using any constant other than -1, 0, or 1) may not be used in multifunction instructions.

#### Status Generated

(See Table 4-11 on page 4-30 for register notation)

ASTAT:	7	6	5	4	3	2	1	0
	SS	MV	AQ	AS	AC	AV	AN	AZ
	_	-	-	_	0	0	*	*

- AZ Set if the result equals zero. Cleared otherwise.
- AN Set if the result is negative. Cleared otherwise.
- AV Always cleared.
- AC Always cleared.

#### Instruction Format

#### Conditional ALU/MAC operation, Instruction Type 9:

23	22	21	20	19	18	17 16 15 14 13	12 11 10	8	7	6	5	4	3	2	1	0
0	0	1	0	0	Ζ	AMF	Үор Хор		0	0	0	0	CC	DND	)	

AMF specifies the ALU or MAC operation, in this case:

AMF = 10000 for PASS yop AMF = 10011 for PASS xop AMF = 10001 for PASS 1 AMF = 11000 for PASS -1 Note the following:

```
PASS xop is a special case of xop + yop with yop = 0
```

```
PASS 1 is a special case of xop + 1, with yop = 0
```

```
PASS yop - 1 is a special case of yop - 1, with yop = 0
```

- Z: Destination register Yop: Y operand
- Xop: X operand COND: Condition

Conditional ALU/MAC operation, Instruction Type 9: (PASS *constant; constant*  $\neq$  0, 1, -1)

23	22	21	20	19	18	17 16 15 14 1	12 11	10 9 8	7 6	5 4	3 2 1	0
0	0	1	0	0	Ζ	AMF	YY	Хор	CC	BO	COND	

AMF specifies the ALU or MAC operation, in this case:

```
AMF = 10000 for PASS yop
AMF = 10001 for PASS yop + 1
AMF = 11000 for PASS yop - 1
```

- Z: Destination register COND: Condition
- Xop: X operand
- BO, CC, and YY specify the constant.

- IF Condition Codes Table 4-9 on page 4-24
- "Status Condition Codes" on page A-11
- BO, CC, and YY "ALU/MAC Constant Codes" on page A-22
- "ALU/MAC Result Register Codes" on page A-22
- "AMF Function Codes" on page A-9
- "X Operand Codes" on page A-21
- "Y Operand Codes" on page A-21

### Negate

Syntax

[ IF cond ] AR = - xop ; AF yop

Permi	ssible xops	Permissible yops	Permissible	conds	
AX0	MR2	AY0	EQ	LE	AC
AX1	MR1	AY1	NE	NEG	NOT AC
AR	MR0	AF	GT	POS	MV
	SR1		GE	AV	NOT MV
	SR0		LT	NOT AV	NOT CE

#### Example

IF LT AR = - AYO;

#### Description

Test the optional condition and if true, then NEGATE the source operand and store in the destination location. If the condition is not true then perform a no-operation. Omitting the condition performs the NEGATE operation unconditionally. The source operand is contained in the data register specified in the instruction.

#### Status Generated

#### (See Table 4-11 on page 4-30 for register notation)

ASTAT:	7	6	5	4	3	2	1	0
	SS	MV	AQ	AS	AC	AV	AN	ΑZ
	_	_	_	_	*	*	*	*

- AZ Set if the result equals zero. Cleared otherwise.
- AN Set if the result is negative. Cleared otherwise.
- AV Set if operand = 0×8000. Cleared otherwise.
- AC Set if operand equals zero. Cleared otherwise.

Instruction Format

Conditional ALU/MAC operation, Instruction Type 9:

23	22	21	20	19	18	17 16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	1	0	0	Ζ	AMF				Yop		Xop	)		0	0	0	0	CC	OND	)	

AMF specifies the ALU or MAC operation, in this case:

AMF = 10101 for - yop operation

AMF = 11001 for - xop operation

Note that - xop is a special case of yop - xop, with yop specified to be 0.

Ζ:	Destination register	Yop:	Y operand
Xop:	X operand	COND:	Condition

- IF Condition Codes Table 4-9 on page 4-24
- "Status Condition Codes" on page A-11
- "ALU/MAC Result Register Codes" on page A-22
- "AMF Function Codes" on page A-9
- "X Operand Codes" on page A-21
- "Y Operand Codes" on page A-21

## NOT

Syntax

 [ IF cond ]
 AR
 = NOT
 xop
 ;

 AF
 yop
 ;

Permiss	ible xops	Permissible yops	Permissible	conas	
AX0	MR2	AY0	EQ	LE	AC
AX1	MR1	AY1	NE	NEG	NOT AC
AR	MR0	AF	GT	POS	MV
	SR1	0	GE	AV	NOT MV
	SR0		LT	NOT AV	NOT CE

Example

IF NE AF = NOT AXO;

### Description

Test the optional condition and if true, then perform the logical complement (ones complement) of the source operand and store in the destination location. If the condition is not true then perform a no-operation. Omitting the condition performs the complement operation unconditionally. The source operand is contained in the data register specified in the instruction.

### Status Generated

(See Table 4-11 on page 4-30 for register notation)

ASTAT:	7	6	5	4	3	2	1	0
	SS	MV	AQ	AS	AC	AV	AN	AZ
	-	-	-	-	0	0	*	*
ΑZ	Set if the	result equal	s zero. Clea	ared otherw	vise.			
AN	Set if the	result is neg	gative. Clea	red otherw	ise.			
AV	Always cle	eared.						
AC	Always cle	eared.						

Instruction Format

Conditional ALU/MAC operation, Instruction Type 9:

23	22	21	20	19	18	17 16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	1	0	0	Ζ	AMF				Yop		Xop	)		0	0	0	0	CC	ONE	)	

AMF specifies the ALU or MAC operation, in this case:

AMF = 10100 for NOT yop operation

AMF = 11011 for NOT xop operation

Ζ:	Destination register	Yop:	Y operand
----	----------------------	------	-----------

Xop: X operand COND: Condition

- IF Condition Codes Table 4-9 on page 4-24
- "Status Condition Codes" on page A-11
- "ALU/MAC Result Register Codes" on page A-22
- "AMF Function Codes" on page A-9
- "X Operand Codes" on page A-21
- "Y Operand Codes" on page A-21

### Absolute Value: ABS

Syntax

[ IF cond ] AR = ABS xop ; AF

Permissi	ble xops	Permiss	Permissible conds								
AX0	MR2	EQ	LE	AC							
AX1	MR1	NE	NEG	NOT AC							
AR	MR0	GT	POS	MV							
	SR1	GE	AV	NOT MV							
	SR0	LT	NOT AV	NOT CE							

Example

```
/* Conditional instruction */
IF NEG AF = ABS AX0:
/* Clip AXO by AYO */
/* AR = sign(AX0) * min(AX0,AY0); */
                             /* Enable
                                                       */
ENA AR_SAT;
AR = ABS AX0;
                             /* Modify AS flag
                                                       */
                           /* Check if ABS(X) > Y
AF = AYO - AR;
                                                       */
IF LT AR = PASS AYO; /* If yes saturate X by Y */
                             /* If X < 0
                                                       */
IF NEG AR = -AR;
```

### Description

Test the optional condition and, if true, then take the absolute value of the source operand and store in the destination location. If the condition is not true then perform a no-operation. Omitting the condition performs the absolute value operation unconditionally. The source operand is contained in the data register specified in the instruction.

Status Generated

ASTAT:	7	6	5	4	3	2	1	0
	SS	MV	AQ	AS	AC	AV	AN	AZ
	_	-	_	*	0	*	*	*
ΑZ	Set if the	he result eq	uals zero. (	Cleared oth	erwise.			
AN	Set if x	op is 0x800	0. Cleared	otherwise.				
AV	Set if x	op is 0x800	0. Cleared	otherwise.				

#### (See Table 4-11 on page 4-30 for register notation)

AV	Set if xop is 0x8000. Cl
AC	Always cleared.

AS Set if the source operand is negative. Cleared otherwise.

#### Instruction Format

### Conditional ALU/MAC operation, Instruction Type 9:

23	22	21	20	19	18	17 16	15	14	13	12	11	10 9	8	7	6	5	4	3	2	1	0
0	0	1	0	0	Ζ	AMF				0	0	Хор		0	0	0	0	CC	OND	)	

AMF specifies the ALU or MAC operation. In this case:

AMF = 11111 for ABS xop operation

Z: Destination register

Xop: X operand COND: Condition

- IF Condition Codes Table 4-9 on page 4-24
- "Status Condition Codes" on page A-11
- "ALU/MAC Result Register Codes" on page A-22
- "AMF Function Codes" on page A-9
- "X Operand Codes" on page A-21
- "Y Operand Codes" on page A-21

### Increment

Syntax

[ IF cond ] AR = yop + 1 ; AF

Permiss	sible yops	Permiss	Permissible conds									
AY0	AX0	EQ	LE	AC								
AY1	AX1	NE	NEG	NOT AC								
AF	MR0	GT	POS	MV								
AR	MR1	GE	AV	NOT MV								
SR0	MR2	LT	NOT AV	NOT CE								
SR1												

### Example

IF GT AF = AF + 1;

#### Description

Test the optional condition and if true, then increment the source operand by  $0 \times 0001$  and store in the destination location. If the condition is not true then perform a no-operation. Omitting the condition performs the increment operation unconditionally. The source operand is contained in the data register specified in the instruction.

### Status Generated

(See Table 4-11 on page 4-30 for register notation)

	_	_	_	_	*	*	*	*
	SS	MV	AQ	AS	AC	AV	AN	ΑZ
ASTAT:	7	6	5	4	3	2	1	0

ΑZ	Set if the	result equals	zero. Cleared	otherwise.
		1		

AN Set if the result is negative. Cleared otherwise.

AV Set if an overflow is generated. Cleared otherwise.

AC Set if a carry is generated. Cleared otherwise.

Instruction Format

Conditional ALU/MAC operation, Instruction Type 9:

23	22	21	20	19	18	17 16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	1	0	0	Ζ	AMF				Yop		Xop	)		0	0	0	0	CC	ONE	)	

AMF specifies the ALU or MAC operation, in this case:

AMF = 10001 for yop + 1 operation

Note that the xop field is ignored for the increment operation.

Ζ:	Destination register	Yop:	Y operand
Xop:	X operand	COND:	Condition

- IF Condition Codes Table 4-9 on page 4-24
- "Status Condition Codes" on page A-11
- "ALU/MAC Result Register Codes" on page A-22
- "AMF Function Codes" on page A-9
- "X Operand Codes" on page A-21
- "Y Operand Codes" on page A-21

### Decrement

Syntax

[ IF cond ] AR = yop - 1 ; AF

Permissib	le yops	Permissi	ible conds	
AY0	AX0	EQ	LE	AC
AY1	AX1	NE	NEG	NOT AC
AF	MR0	GT	POS	MV
AR	MR1	GE	AV	NOT MV
SR0	MR2	LT	NOT AV	NOT CE
SR1				

#### Example

IF EQ AR = AY1 - 1;

#### Description

Test the optional condition and if true, then decrement the source operand by  $0 \times 0001$  and store in the destination location. If the condition is not true then perform a no-operation. Omitting the condition performs the decrement operation unconditionally. The source operand is contained in the data register specified in the instruction.

#### Status Generated

(See Table 4-11 on page 4-30 for register notation)

ASTAT:	7	6	5	4	3	2	1	0
	SS	MV	AQ	AS	AC	AV	AN	ΑZ
	_	_	_	_	*	*	*	*

AZ Set if the result equals zero. Cleared otherw
--

AN Set if the result is negative. Cleared otherwise.

AV Set if an overflow is generated. Cleared otherwise.

AC Set if a carry is generated. Cleared otherwise.

Instruction Format

Conditional ALU/MAC operation, Instruction Type 9:

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	1	0	0	Ζ	AM	ſF				Yop	)	Xop	2		0	0	0	0	CC	DND	)	

AMF specifies the ALU or MAC operation, in this case:

AMF = 11000 for yop - 1 operation

Note that the xop field is ignored for the decrement operation.

Ζ:	Destination register	Yop:	Y operand
Xop:	X operand	COND:	Condition

- IF Condition Codes Table 4-9 on page 4-24
- "Status Condition Codes" on page A-11
- "ALU/MAC Result Register Codes" on page A-22
- "AMF Function Codes" on page A-9
- "X Operand Codes" on page A-21
- "Y Operand Codes" on page A-21

## Divide Primitives: DIVS and DIVQ

#### Syntax

DIVS	yop,	хор	;
DIVQ	хор		;

Permiss	sible xops	Permissible yops
AX0	MR2	AY1
AX1	MR1	AF
AR	MR0	
	SR1	
	SR0	

### Description

These instructions implement yop÷xop. There are two divide primitives, DIVS and DIV0. A single precision divide, with a 32-bit numerator and a 16-bit denominator, yielding a 16-bit quotient, executes in 16 cycles. Higher precision divides are also possible.

The division can be either signed or unsigned, but both the numerator and denominator must be the same; both signed or unsigned. The programmer sets up the divide by sorting the upper half of the numerator in any permissible yop (AY1 or AF), the lower half of the numerator in AY0, and the denominator in any permissible *xop*. The divide operation is then executed with the divide primitives, DIVS and DIV0. Repeated execution of DIV0 implements a non-restoring conditional add-subtract division algorithm. At the conclusion of the divide operation, the quotient is in AY0.

To implement a signed divide, first execute the DIVS instruction once, which computes the sign of the quotient. Then execute the DIVQ instruction for as many times as there are bits remaining in the quotient (for example, for a signed, single-precision divide, execute DIVS once and DIVQ 15 times). To implement an unsigned divide, first place the upper half of the numerator in AF, then set the AQ bit to zero by manually clearing it in the Arithmetic Status Register, ASTAT. This indicates that the sign of the quotient is positive. Then execute the DIVQ instruction for as many times as there are bits in the quotient (for example, for an unsigned single-precision divide, execute DIVQ 16 times).

The quotient bit generated on each execution of DIVS and DIVQ is the AQ bit which is written to the ASTAT register at the end of each cycle. The final remainder produced by this algorithm (and left over in the AF register) is not valid and must be corrected if it is needed.

For more information, refer to "Division Theory" on page 4-64, "Division Exceptions" on page 4-67, and "Division Applications" on page 4-68.

#### Status Generated

#### (See Table 4-11 on page 4-30 for register notation)

ASTAT:	7	6	5	4	3	2	1	0
	SS	MV	AQ	AS	AC	AV	AN	AZ
	-	-	*	-	-	-	-	_

AQ Loaded with the bit value equal to the AQ bit computed on each cycle from execution of the DIVS or DIVQ instruction.

#### Instruction Format

DIVQ, Instruction Type 23:

23	22	21	20	19	18	17	16	15	14	13	12	11	10 9	8	7	6	5	4	3	2	1	0
0	0	0	0	0	1	1	1	0	0	0	1	0	Хор		0	0	0	0	0	0	0	0

### DIVQ, Instruction Type 24:

23	22	21	20	19	18	17	16	15	14	13	12 11	10 9	8	7	6	5	4	3	2	1	0
0	0	0	0	0	1	1	0	0	0	0	Yop	Хор		0	0	0	0	0	0	0	0

Xop: X operand Yop: Y operand

Division Theory

The ADSP-218x processors' instruction set contains two instructions for implementing a non-restoring divide algorithm. These instructions take as their operands twos-complement or unsigned numbers, and in sixteen cycles produce a truncated quotient of sixteen bits. For most numbers and applications, these primitives produce the correct results. However, there are certain situations where results produced are off by one LSB. This section documents these situations, and presents alternatives for producing the correct results.

Computing a 16-bit fixed-point quotient from two numbers is accomplished by 16 executions of the DIVQ instruction for unsigned numbers. Signed division uses the DIVS instruction first, followed by fifteen DIVQs. Regardless of which division you perform, both input operands must be of the same type (signed or unsigned) and produce a result of the same type.

These two instructions are used to implement a conditional add/subtract, non-restoring division algorithm. As its name implies, the algorithm functions by adding or subtracting the divisor to/from the dividend. The decision as to which operation is performed is based on the previously generated quotient bit. Each add/subtract operation produces a new partial remainder, which is used in the next step.

The phrase non-restoring refers to the fact that the final remainder is not correct. With a restoring algorithm, it is possible, at any step, to take the partial quotient, multiply it by the divisor, and add the partial remainder to recreate the dividend. With this non-restoring algorithm, it is necessary to add two times the divisor to the partial remainder if the previously determined quotient bit is zero. It is easier to compute the remainder using the multiplier than in the ALU.

### Signed Division

Signed division is accomplished by first storing the 16-bit divisor in an Xop register (AXO, AX1, AR, MR2, MR1, MR0, SR1, or SR0). The 32-bit dividend must be stored in two separate 16-bit registers. The lower 16-bits must be stored in AYO, while the upper 16-bits can be in either AY1 or AF.

The DIVS primitive is executed once, with the proper operands (for example, DIVS AY1, AX0) to compute the sign of the quotient. The sign bit of the quotient is determined by XORing (exclusive-or) the sign bits of each operand. The entire 32-bit dividend is shifted left one bit. The lower fifteen bits of the dividend with the recently determined sign bit appended are stored in AY0, while the lower fifteen bits of the upper word, with the MSB of the lower word appended is stored in AF.

To complete the division, 15 DIVQ instructions are executed. Operation of the DIVQ primitive is described below.

### Unsigned Division

Computing an unsigned division is done like signed division, except the first instruction is not a DIVS, but another DIVQ. The upper word of the dividend must be stored in AF, and the AQ bit of the ASTAT register must be set to zero before the divide begins.

The DIVQ instruction uses the AQ bit of the ASTAT register to determine if the dividend should be added to, or subtracted from the partial remainder stored in AF and AYO. If AQ is zero, a subtract occurs. A new value for AQ is determined by XORing the MSB of the divisor with the MSB of the dividend. The 32-bit dividend is shifted left one bit, and the inverted value of AQ is moved into the LSB.

### **Output Formats**

As in multiplication, the format of a division result is based on the format of the input operands. The division logic has been designed to work most efficiently with fully fractional numbers, those most commonly used in

fixed-point DSP applications. A signed, fully fractional number uses one bit before the binary point as the sign, with fifteen (or thirty-one in double precision) bits to the right, for magnitude.

If the dividend is in M.N format (M bits before the binary point, N bits after), and the divisor is O.P format, the quotient's format is (M-O+1).(N-P-1). As you can see, dividing a 1.31 number by a 1.15 number produces a quotient whose format is (1-1+1).(31-15-1) or 1.15.

Before dividing two numbers, you must ensure that the format of the quotient is valid. For example, if you attempted to divide a 32.0 number by a 1.15 number the result would attempt to be in (32-1+1).(0-15-1) or 32.-16 format. This cannot be represented in a 16-bit register!

In addition to proper output format, you must ensure that a divide overflow does not occur. Even if a division of two numbers produces a legal output format, it is possible that the number overflows, and is unable to fit within the constraints of the output. For example, if you wished to divide a 16.16 number by a 1.15 number, the output format would be (16-1+1).(16-15-1) or 16.0 which is legal. Now assume you happened to have 16384 (0x4000) as the dividend and .25 (0x2000) as the divisor, the quotient would be 65536, which does not fit in 16.0 format. This operation would overflow, producing an erroneous result.

Input operands can be checked before division to ensure that an overflow does not result. If the magnitude of the upper 16 bits of the dividend is larger than the magnitude of the divisor, an overflow results.

#### **Integer Division**

One special case of division that deserves special mention is integer division. There may be some cases where you wish to divide two integers, and produce an integer result. It can be seen that an integer-integer division produces an invalid output format of (32-16+1).(0-0-1), or 17.-1. To generate an integer quotient, you must shift the dividend to the left one bit, placing it in 31.1 format. The output format for this division is (31-16+1).(1-0-1), or 16.0. You must ensure that no significant bits are lost during the left shift, or an invalid result is generated.

**Division Exceptions** 

Although the divide primitives for the ADSP-218x processors work correctly in most instances, there are two cases where an invalid or inaccurate result can be generated. The first case involves signed division by a negative number. If you attempt to use a negative number as the divisor, the quotient generated may be one LSB less than the correct result. The other case concerns unsigned division by a divisor greater than  $0 \times 7FFF$ . If the divisor in an unsigned division exceeds  $0 \times 7FFF$ , an invalid quotient is generated.

### Negative Divisor Error

The quotient produced by a divide with a negative divisor is generally one LSB less than the correct result. The divide algorithm implemented on the ADSP-218x processors does not correctly compensate for the twos-complement format of a negative number, causing this inaccuracy.

There is one case where this discrepancy does not occur. If the result of the division operation should equal  $0 \times 8000$ , then it is correctly represented, and not be one LSB off.

There are several ways to correct for this error. Before changing any code, however, you should determine if a one-LSB error in your quotient is a significant problem. In some cases, the LSB is small enough to be insignificant. If you find it necessary to have exact results, two solutions are possible.

One is to avoid division by negative numbers. If your divisor is negative, take its absolute value and invert the sign of the quotient after division. This produces the correct result.

Another technique would be to check the result by multiplying the quotient by the divisor. Compare this value with the dividend, and if they are off by more than the value of the divisor, increase the quotient by one.

#### Unsigned Division Error

Unsigned divisions can produce erroneous results if the divisor is greater than 0x7FFF. You should not attempt to divide two unsigned numbers if the divisor has a one in the MSB. If it is necessary to perform a such a division, both operands should be shifted right one bit. This maintains the correct orientation of operands.

Shifting both operands may result in a one LSB error in the quotient. This can be solved by multiplying the quotient by the original (not shifted) divisor. Subtract this value from the original dividend to calculate the error. If the error is greater than the divisor, add one to the quotient, if it is negative, subtract one from the quotient.

#### **Division Applications**

Each of the problems mentioned in "Division Exceptions" on page 4-67 can be compensated for in software. Listing 4-1 shows the program section *divides*. This code can be used to divide two signed or unsigned numbers to produce the correct quotient, or an error condition.



Note that the DIVQ instruction must be placed 15 (or 16) times explicitly. A hardware loop that executes DIVQ 15 (or 16) times does not work correctly.

Listing 4-1. Division Routine Using DIVS and DIVQ

```
/*signed division algorithm with fix for negative division error
inputs:
    ay1 - 16 MSB of numerator
    ay0 - 16 LSB of numerator
    ar - denominator
```

```
outputs:
  ar - corrected quotient
intermediate (scratch) registers:
  mrO, af
*/
signed_div:
  mr0 = ar, ar = abs ar;
   /* save copy of denominator, make it positive */
  divs ay1, ar; divq ar;
  divg ar; divg ar;
  divg ar; divg ar;
  divq ar; divq ar;
  divg ar; divg ar;
  divq ar; divq ar;
  divg ar; divg ar;
  divq ar; divq ar;
  ar = ay0, af = pass mr0;
              /* place output in ar, get sign of denominator */
   if LT ar = -ay0;
               /* if neg, place inverted output in ar
                                                              */
  rts:
```

- "X Operand Codes" on page A-21
- "Y Operand Codes" on page A-21

### Generate ALU Status Only: NONE

#### Syntax

NONE = <ALU>; /\* Cannot be coupled with a data move instruction \*/

<ALU> may be any unconditional ALU operation except DIVS or DIVQ.

#### Example

NONE = AXO - AYO; NONE = PASS SRO;

#### Description

Perform the designated ALU operation, generate the ASTAT status flags, then discard the result value. This instruction allows the testing of register values without disturbing the contents of the AR or AF registers.

Note that the following ALU operations of the ADSP-218x processors are exceptions:

```
ADD (xop + constant)

SUBTRACT X-Y (xop + constant)

SUBTRACT Y-X (-xop + constant)

AND/OR/XOR (xop • constant)

PASS (constant \neq 0,1, -1)

TSTBIT, SETBIT, CLRBIT, TGLBIT
```

#### Status Generated

(See Table 4-11 on page 4-30 for register notation)

ASTAT:	7	6	5	4	3	2	1	0
	SS	MV	AQ	AS	AC	AV	AN	AZ
	_	_	_	_	*	*	*	*

AZ Set if the result equals zero. Cleared otherwise.

AN	Set if the result is negative. Cleared otherwise.
AV	Set if an arithmetic overflow occurs. Cleared otherwise.
AC	Set if carry is generated. Cleared otherwise.

#### Instruction Format

Conditional ALU/MAC operation, Instruction Type 9:

23	22	21	20	19	18	17 16	15 14	13	12 11	10 9	8	7	6	5	4	3	2	1	0
0	0	1	0	1	0	AMF*			Yop	Хор		1	0	1	0	1	0	1	0

\* ALU codes only.

AMF specifies the ALU or MAC operation (only ALU operations allowed).

Xop: X operand Yop: Y operand

- "AMF Function Codes" on page A-9
- "X Operand Codes" on page A-21
- "Y Operand Codes" on page A-21

# **MAC Instructions**

MAC instructions are:

- "Multiply" on page 4-73
- "Multiply With Cumulative Add" on page 4-77
- "Multiply With Cumulative Subtract" on page 4-81
- "Squaring" on page 4-85
- "MAC Clear" on page 4-88
- "MAC Transfer MR" on page 4-90
- "Conditional MR Saturation" on page 4-92

# **Multiply**

Syntax

Permissible xops		Permissible yops	Permissib	Permissible conds					
MX0	AR	MY0	EQ	LE	AC				
MX1	SR1	MY1	NE	NEG	NOT AC				
MR2	SR0	MF	GT	POS	MV				
MR1		0	GE	AV	NOT MV				
MR0			LT	NOT AV	NOT CE				

### Example

```
/* Conditional multiply xop * yop */
IF EQ MR = MXO * MF (UU);
/* Unconditional multiply xop * yop */
MF = SRO * SRO (SS);
/* 32-bit multiply: MR2:MR1:MR0:SR1:SR0 = MX1:MX0 * MY1:MY0 */
DIS M_MODE;
                                   /* Use fractional mode */
MR = MXO * MYO (UU);
                                   /* Multiply low words */
AR = PASS MRO, MRO = MR1;
                                   /* Right shift by 16
                                                         */
MR1 = MR2;
MR = MR + MX1 * MYO (SU), SRO = AR; /* Multiply middle words */
MR = MR + MXO * MY1 (US);
                             /* Right shift by 16 */
AR = PASS MRO, MRO = MR1;
MR1 = MR2;
MR = MR + MX1 * MY1 (SS), SR1 = AR; /* Multiply high word */
```

### Description

### **MAC Instructions**

Test the optional condition and, if true, then multiply the two source operands and store in the destination location. If the condition is not true perform a no-operation. Omitting the condition performs the multiplication unconditionally. The operands are contained in the data registers specified in the instruction. When MF is the destination operand, only bits 31-16 of the product are stored in MF.

The data format selection field following the two operands specifies whether each respective operand is in Signed (S) or Unsigned (U) format. The *xop* is specified first and *yop* is second. If the *xop* \* *xop* operation is used, the data format selection field must be (UU), (SS), or (RND) only. There is no default; one of the data formats must be specified.

If RND (Round) is specified, the MAC multiplies the two source operands, rounds the result to the most significant 24 bits (or rounds bits 31-16 to 16 bits if there is no overflow from the multiply), and stores the result in the destination register. The two multiplication operands *xop* and *yop* (or *xop* and *xop*) are considered to be in twos complement format. Rounding can be either biased or unbiased. For a discussion of biased vs. unbiased rounding, see the section "*Rounding Mode*" in the *ADSP-218x DSP Hardware Reference Manual*, Chapter 2, "Computational Units."

#### Status Generated

(See Table 4-11 on page 4-30 for register notation)

ASTAT:	7	6	5	4	3	2	1	0
	SS	MV	AQ	AS	AC	AV	AN	AZ
	-	*	-	-	-	-	-	-

MV Set on MAC overflow (if any of the upper 9 bits of MR are not all one or zero). Cleared otherwise.

Instruction Format

(xop \* yop) Conditional ALU/MAC operation, Instruction Type 9:

23	22	21	20	19	18	17 16	15 1	14 13	12 11	10 9	8	7	6	5	4	3	2	1	0
0	0	1	0	0	Ζ	AMF			Yop	Хор		0	0	0	0	CC	ONE	)	

AMF specifies the ALU or MAC operation, in this case:

AMF	FUNCTION	Data Format	X-Operand	Y-Operand
00100	xop * xop	(SS)	Signed	Signed
00101	xop * yop	(SU)	Signed	Unsigned
00110	xop * yop	(US)	Unsigned	Signed
00111	xop * yop	(UU)	Unsigned	Unsigned
0 0 0 0 1	xop * yop	(RND)	Signed	Signed

Ζ:	Destination register	Yop:	Y operand

Xop: X operand COND: Condition

(xop \* xop) Conditional ALU/MAC operation, Instruction Type 9:

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	1	0	0	Ζ	AN	ſF				0	0	Xoj	2		0	0	0	1	CC	ONE	)	

AMF specifies the ALU or MAC operation, in this case:

AMF	FUNCTION	Data Format	X-Operand
00100	xop * xop	(SS)	Signed
00111	xop * xop	(UU)	Unsigned
00001	xop * xop	(RND)	Signed

Z: Destination register COND: Condition

### **MAC Instructions**

Xop: X operand register

- IF Condition Codes Table 4-9 on page 4-24
- "Status Condition Codes" on page A-11
- "ALU/MAC Result Register Codes" on page A-22
- "AMF Function Codes" on page A-9
- "X Operand Codes" on page A-21
- "Y Operand Codes" on page A-21

### Multiply With Cumulative Add

Syntax

[ IF cond ] MR	= MR + xop *	уор	(SS)	;
MF		хор	(SU)	
			(US)	
			(UU)	
			(RND)	

Permissible xops		Permissible yops	Permiss	Permissible conds					
MX0	AR	MY0	EQ	LE	AC				
MX1	SR1	MY1	NE	NEG	NOT AC				
MR2	SR0	MF	GT	POS	MV				
MR1			GE	AV	NOT MV				
MR0			LT	NOT AV	NOT CE				

#### Examples

```
/* Conditional multiply with cumulative add, xop * yop */
IF GE MR = MR + MXO * MY1 (SS);
/* Unconditional multiply with cumulative add, xop * yop */
MF = SRO * SRO (SS);
/* 40-bit accumulation of 16-bit integer values */
ENA M_MODE; /* Use integer mode */
MR = 0, MXO = DM(I0,MO); /* Load first X */
MYO = 1
CNTR = N-1;
DO ADDLOOP UNTIL CE;
ADDLOOP: MR = MR + MXO * MYO (SS), MXO = DM(I0,MO);
MR = MR + MXO * MYO (SS);
```

### Description

Test the optional condition and, if true, then multiply the two source operands, add the product to the present contents of the MR register, and store the result in the destination location. If the condition is not true then perform a no-operation. Omitting the condition performs the multiply/accumulate unconditionally. The operands are contained in the data registers specified in the instruction. When MF is the destination operand, only bits 31-16 of the 40-bit result are stored in MF.

The ADSP-218x processors support the *xop* \* *xop* squaring operation. Both *xops* must be in the same register. This option allows single-cycle  $X^2$  and  $\Sigma X^2$  instructions.

The data format selection field to the right of the two operands specifies whether each respective operand is in signed (S) or unsigned (U) format. The *xop* is specified first and *yop* is second. If the *xop* \* *xop* operation is used, the data format selection field must be (UU), (SS), or (RND) only. There is no default; one of the data formats must be specified.

If RND (Round) is specified, the MAC multiplies the two source operands, adds the product to the current contents of the MR register, rounds the result to the most significant 24 bits (or rounds bits 31-16 to the nearest 16 bits if there is no overflow from the multiply/accumulate), and stores the result in the destination register. The two multiplication operands *xop* and *yop* (or *xop* and *xop*) are considered to be in twos complement format. All rounding is unbiased, except on the ADSP-217x, ADSP-218x, and ADSP-21msp58/59 processors, which offer a biased rounding mode. For a discussion of biased vs. unbiased rounding, see the section "*Rounding Mode*" in the *ADSP-218x DSP Hardware Reference Manual*, Chapter 2, "*Computational Units.*"

### Status Generated

(See Table 4-11 on page 4-30 for register notation)

ASTAT:	7	6	5	4	3	2	1	0
	SS	MV	AQ	AS	AC	AV	AN	AZ
	-	*	-	-	-	-	-	-

MV Set on MAC overflow (if any of the upper 9 bits of MR are not all one or zero). Cleared otherwise.

#### Instruction Format

(xop \* yop) Conditional ALU/MAC operation, Instruction Type 9:

23	22	21	20	19	18	17 16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	1	0	0	Ζ	AMF				Yop		Xop	)		0	0	0	0	CC	DND	)	

AMF specifies the ALU or MAC operation, in this case:

AMF	FUNCTION	Data Format	X-Operand	Y-Operand
01000	MR + xop * xop	(SS)	Signed	Signed
01001	MR + xop * yop	(SU)	Signed	Unsigned
01010	MR + xop * yop	(US)	Unsigned	Signed
01011	MR + xop * yop	(UU)	Unsigned	Unsigned
0 0 0 1 0	MR + xop * yop	(RND)	Signed	Signed

Z: Destination register Yop: Y operand register

Xop: X operand register COND: Condition

(xop \* xop) Conditional ALU/MAC operation, Instruction Type 9:

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	1	0	0	Ζ	AM	F				0	0	Хор	•		0	0	0	1	CC	DNE	)	

AMF specifies the ALU or MAC operation, in this case:

AMF	FUNCTION	Data Format	X-Operand
01000	MR + xop * xop	(SS)	Signed

AMF	FUNCTION	Data Format	X-Operand
01011	MR + xop * xop	(UU)	Unsigned
00010	MR + xop * xop	(RND)	Signed

Z: Destination register COND: Condition

Xop: X operand register

- IF Condition Codes Table 4-9 on page 4-24
- "Status Condition Codes" on page A-11
- "ALU/MAC Result Register Codes" on page A-22
- "AMF Function Codes" on page A-9
- "X Operand Codes" on page A-21
- "Y Operand Codes" on page A-21
# **Multiply With Cumulative Subtract**

Syntax

[ IF cond ]	MR	= MR - xop *	уор		(SS)	;
	MF		хор		(SU)	
	• •				(US)	
					(UU)	
					(RND)	
				1		

Permissible	xops	Permissible yops	Permissible	conds	
MX0	AR	MY0	EQ	LE	AC
MX1	SR1	MY1	NE	NEG	NOT AC
MR2	SR0	MF	GT	POS	MV
MR1			GE	AV	NOT MV
MR0			LT	NOT AV	NOT CE

### Example

ΙF	LΤ	MR	= M	R -	MX1	* MYO	(SU);	/*	хор	*	уор	*/
MR	=	MR -	- MX	0 *	MX0	(SS);		/*	хор	*	уор	*/

### Description

Test the optional condition and, if true, then multiply the two source operands, subtract the product from the present contents of the MR register, and store the result in the destination location. If the condition is not true perform a no-operation. Omitting the condition performs the multiply/subtract unconditionally. The operands are contained in the data registers specified in the instruction. When MF is the destination operand, only bits 16-31 of the 40-bit result are stored in MF.

The ADSP-218x DSPs support the *xop* \* *xop* squaring operation. Both *xops* must be in the same register. This option allows single-cycle  $X^2$  and  $\Sigma X^2$  instructions.

### **MAC Instructions**

The data format selection field to the right of the two operands specifies whether each respective operand is in signed (S) or unsigned (U) format. The *xop* is specified first and *yop* is second. If the *xop* \* *xop* operation is used, the data format selection field must be (UU), (SS), or (RND) only. There is no default; one of the data formats must be specified.

If RND (Round) is specified, the MAC multiplies the two source operands, subtracts the product from the current contents of the MR register, rounds the result to the most significant 24 bits (or rounds bits 31-16 to 16 bits if there is no overflow from the multiply/accumulate), and stores the result in the destination register. The two multiplication operands *xop* and *yop* (or *xop* and *xop*) are considered to be in twos complement format. The ADSP-218x processors support biased rounding mode, as well as, unbiased rounding. For a discussion of biased versus unbiased rounding, see the section "*Rounding Mode*" in the *ADSP-218x DSP Hardware Reference Manual*, Chapter 2, "*Computational Units.*"

### Status Generated

#### (See Table 4-11 on page 4-30 for register notation)

ASTAT:	7	6	5	4	3	2	1	0
	SS	MV	AQ	AS	AC	AV	AN	ΑZ
	-	*	-	-	-	-	-	-

MV Set on MAC overflow (if any of the upper 9 bits of MR are not all one or zero). Cleared otherwise.

#### Instruction Format

(xop \* yop) Conditional ALU/MAC operation, Instruction Type 9:

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	1	0	0	Ζ	AM	1F				Yop	)	Xoj	2		0	0	0	0	CC	)ND	)	

AMF	FUNCTION	Data Format	X-Operand	Y-Operand
0 1 1 0 0	MR – xop * xop	(SS)	Signed	Signed
01101	MR – xop * yop	(SU)	Signed	Unsigned
01110	MR – xop * yop	(US)	Unsigned	Signed
01111	MR – xop * yop	(UU)	Unsigned	Unsigned
00011	MR – xop * yop	(RND)	Signed	Signed

AMF specifies the ALU or MAC operation, in this case:

Z: Destination registerXop: X operand register

Yop: Y operand register COND: Condition

(xop \* xop) Conditional ALU/MAC operation, Instruction Type 9:

23	22	21	20	19	18	17 16	15	14	13	12	11	10 9	8	7	6	5	4	3	2	1	0
0	0	1	0	0	Ζ	AMF				0	0	Хор		0	0	0	1	CC	ONE	)	

AMF specifies the ALU or MAC operation, in this case:

AMF	FUNCTION	Data Format	X-Operand
01100	MR – xop * xop	(SS)	Signed
01111	MR – xop * xop	(UU)	Unsigned
00011	MR – xop * xop	(RND)	Signed

Z: Destination register COND: Condition

Xop: X operand register

- IF Condition Codes Table 4-9 on page 4-24
- "Status Condition Codes" on page A-11

### **MAC Instructions**

- "ALU/MAC Result Register Codes" on page A-22
- "AMF Function Codes" on page A-9
- "X Operand Codes" on page A-21
- "Y Operand Codes" on page A-21

# Squaring

Syntax

[IF cond]	MR	=	MR + xop * xop	(SS)	;
	MF			(UU)	
				(RND)	
[IF cond]	MR	=	MR – xop * xop	(SS)	;
	MF			(UU)	
				(RND)	
[IF cond]	MR	=	xop * xop	(SS)	;
	MF			(UU)	
ľ	I			(RND)	

#### Permissible xops

MX0	AR
MX1	SR1
MR2	SR0
MR1	
MR0	

### Examples

### Description

Test the optional condition and, if true, then square the *xop*, add the present contents of the MR register (or subtract the squared result from the MR register), and store the result in the destination location. If the condition is not true, then perform a no-operation. Omitting the condition performs the multiply/accumulate unconditionally. The *xop* is contained in the data register specified in the instruction. When MF is the destination operand, only bits 31-16 of the 40-bit result are stored in MF.

### Restrictions

The ADSP-218x DSPs support the *xop* \* *xop* squaring operation. However, both *xops* must be in the same register. This option allows single-cycle  $X^2$  and  $\Sigma X^2$  instructions. The data format selection field must be (UU), (SS), or (RND) only. There is no default for the data format selection field; one of the data formats must be specified. The squaring instruction cannot be used in a multifunction instruction.

### Status Generated

AS⊺A <b>T:</b>	7	6	5	4	3	2	1	0
	SS	MV	AQ	AS	AC	AV	AN	ΑZ
	-	*	-	-	-	-	-	-

ΜV

Set on MAC overflow (if any of upper 9 bits of MR are not all one or zero). Cleared otherwise.

### Instruction Format

### (xop \* xop) Conditional ALU/MAC operation, Instruction Type 9:

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	1	0	0	Ζ	AM	ſF				0	0	Xoj	þ		0	0	0	1	СС	DNE	)	

### AMF specifies the ALU or MAC operation. In this case:

AMF	Function	Data Format	X-Operand
01000	MR + xop * xop	(SS)	Signed
01011	MR + xop * xop	(UU)	Unsigned
00010	MR + xop * xop	(RND)	Signed

### Z: Destination register

Xop: X operand COND: Condition

- IF Condition Codes Table 4-9 on page 4-24
- "ALU/MAC Result Register Codes" on page A-22
- "AMF Function Codes" on page A-9
- "X Operand Codes" on page A-21

### MAC Clear

Syntax

[ IF cond ] MR = 0; MF

#### Permissible conds

EQ	NE	GT	GE	LT
LE	NEG	POS	AV	NOT AV
AC	NOT AC	MV	NOT MV	NOT CE

### Example

IF GT MR = 0;

#### Description

Test the optional condition and, if true, then set the specified register to zero. If the condition is not true perform a no-operation. Omitting the condition performs the clear unconditionally. The entire 40-bit MR or 16-bit MF register is cleared to zero.

Status Generated

(See Table 4-11 on page 4-30 for register notation)

4 ASTAT: 7 6 5 3 2 1 0 AQ AS AC SS MV AV ΑZ AN \_ 0 \_ \_ \_ \_ \_ \_

MV Always cleared.

### Instruction Format

### Conditional ALU/MAC operation, Instruction Type 9:

23	22	21	20	19	18	17 16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	1	0	0	Ζ	AMF				1	1	0	0	0	0	0	0	0	CC	ONE	)	

AMF specifies the ALU or MAC operation, in this case,

AMF = 00100 for Clear operation.

Note that this instruction is a special case of xop  $\,\star\,$  yop, with yop set to zero.

Z: Destination register COND: Condition

- IF Condition Codes Table 4-9 on page 4-24
- "Status Condition Codes" on page A-11
- "ALU/MAC Result Register Codes" on page A-22
- "AMF Function Codes" on page A-9

### **MAC Instructions**

### MAC Transfer MR

Syntax

[IF cond] MR = MR [(RND)] ; MF

#### Permissible conds

EQ	NE	GT	GE	LT
LE	NEG	POS	AV	NOT AV
AC	NOT AC	MV	NOT MV	NOT CE

### Example

IF EQ MF = MR (RND); /\* Conditional transfer MR \*/
MR0 = DM(MR0\_VAL); /\* Load MR register \*/
MR1 = DM(MR1\_VAL);
MR2 = DM(MR2\_VAL);
MR = MR; /\* Update the MV flag \*/
IF MV SAT MR;

### Description

Test the optional condition and, if true, then perform the MR transfer according to the description below. If the condition is not true then perform a no-operation. Omitting the condition performs the transfer unconditionally. Since RND is optional, the MR = MR instruction can be used to update the MV flag when the MR register is loaded by register moves.

This instruction actually performs a multiply/accumulate, specifying yop = 0 as a multiplicand and adding the zero product to the contents of MR. The MR register may be optionally rounded at the boundary between bits 15 and 16 of the result by specifying the RND option. If MF is specified as the destination, bits 31-16 of the result are stored in MF. If MR is the destination, the entire 40-bit result is stored in MR.

### Status Generated

(0	TT 11 / 1		/	20 0		• \
(See	lable 4-1	l on	page 4	-30 tor	register	notation)
(			P	• • • • •		

ASTAT:	7	6	5	4	3	2	1	0
	SS	MV	AQ	AS	AC	AV	AN	AZ
	_	*	_	_	-	-	-	-

MV Set on MAC overflow if any of upper 9 bits of MR are not one or zero. Cleared otherwise.

Instruction Format

Conditional ALU/MAC operation, Instruction Type 9:

23	22	21	20	19	18	17 16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	1	0	0	Ζ	AMF				1	1	0	0	0	0	0	0	0	CC	ONE	)	

AMF specifies the ALU or MAC operation, in this case,

AMF = 01000 for Transfer MR operation.

Note that this instruction is a special case of MR + xop  $\star$  yop, with yop set to zero.

Z: Destination register COND: Condition

- IF Condition Codes Table 4-9 on page 4-24
- "Status Condition Codes" on page A-11
- "ALU/MAC Result Register Codes" on page A-22
- "AMF Function Codes" on page A-9

# **Conditional MR Saturation**

Syntax

IF MV SAT MR;

Description

Test the MV (MAC Overflow) bit in the Arithmetic Status Register (ASTAT), and if set, then saturate the lower-order 32 bits of the 40-bit MR register; if the MV is not set then perform a no-operation.

Saturation of MR is executed with this instruction for one cycle only; MAC saturation is not a continuous mode that is enabled or disabled. The saturation instruction is intended to be used at the completion of a series of multiply/accumulate operations so that temporary overflows do not cause the accumulator to saturate.

The saturation result depends on the state of MV and on the sign of MR (the MSB of MR2). The possible results after execution of the saturation instruction are shown in the table below.

MV	MSB of MR2	MR Contents after Saturation
0	0	No change
0	1	No change
1	0	00000000 011111111111111111111111111111
1	1	11111111 10000000000000 000000000000000

Status Generated

No status bits affected.

Instruction Format

# Instruction Set

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	0	1	0	1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

### Saturate MR operation, Instruction Type 25:

### **Shifter Instructions**

# Shifter Instructions

Shifter instructions are:

- "Arithmetic Shift" on page 4-95
- "Logical Shift" on page 4-98
- "Normalize" on page 4-101
- "Derive Exponent" on page 4-104
- "Block Exponent Adjust" on page 4-107
- "Arithmetic Shift Immediate" on page 4-109
- "Logical Shift Immediate" on page 4-111

# Arithmetic Shift

Syntax

[ IF cond ] SR = [SR OR] ASHIFT xop (HI) ; (LO)

Permiss	ible xops	Permiss	ible conds	
SI	AR	EQ	LE	AC
SR1	MR2	NE	NEG	NOT AC
SR0	MR1	GT	POS	MV
	MR0	GE	AV	NOT MV
		LT	NOT AV	NOT CE

### Example

```
/ * Conditional arithmetic shift */
IF LT SR = SR OR ASHIFT SI (LO);
/* Shift the content of SR arithmetically right by SE */
SE = -2;
SR = ASHIFT SR1 (HI), SI = SR0;
SR = SR OR LSHIFT SI (LO);
```

### Description

Test the optional condition and, if true, then perform the designated arithmetic shift. If the condition is not true, then perform a no-operation. Omitting the condition performs the shift unconditionally. The operation arithmetically shifts the bits of the operand by the amount and direction specified in the shift code from the SE register. Positive shift codes cause a left shift (upshift) and negative codes cause a right shift (downshift).

The shift may be referenced to the upper half of the output field (HI option) or to the lower half (L0 option). The shift output may be logically ORed with the present contents of the SR register by selecting the SR OR option.

### Shifter Instructions

For ASHIFT with a positive shift code (that is, a positive value in SE), the operand is shifted left; with a negative shift code (for example, negative value in SE), the operand is shifted right. The number of positions shifted is the count in the shift code. The 32-bit output field is sign-extended to the left (the MSB of the input is replicated to the left), and the output is zero-filled from the right. Bits shifted out of the high order bit in the 32-bit destination field (SR<sub>31</sub>) are dropped. Bits shifted out of the low order bit in the destination field (SR<sub>0</sub>) are dropped.

To shift a double-precision number, the same shift code is used for both halves of the number. On the first cycle, the upper half of the number is shifted using an ASHIFT with the HI option; on the following cycle, the lower half of the number is shifted using an LSHIFT with the LO and OR options. This prevents sign bit extension of the lower word's MSB.

Status Generated

No status bits affected.

Instruction Format

Conditional Shift Operation, Instruction Type 16:

23	22	21	20	19	18	17	16	15	14	13	12	11	10 9	8	7	6	5	4	3	2	1	0
0	0	0	0	1	1	1	0	0	SF				Хор		0	0	0	0	CC	ONE	)	

SF	Shifter Function
0100	ASHIFT (HI)
0101	ASHIFT (HI, OR)
0110	ASHIFT (LO)
0111	ASHIFT (LO, OR)

Xop: Shifter operand COND: Condition

- IF Condition Codes Table 4-9 on page 4-24
- "Status Condition Codes" on page A-11
- "Shifter Function Codes" on page A-18
- "X Operand Codes" on page A-21

# Logical Shift

Syntax

[ IF cond ] SR = [SR OR] LSHIFT xop	(HI)	;
	(LO)	

Permiss	ible xops	Permissible	conds	
SI	AR	EQ	LE	AC
SR1	MR2	NE	NEG	NOT AC
SR0	MR1	GT	POS	MV
	MR0	GE	AV	NOT MV
		LT	NOT AV	NOT CE

Example

IF GE SR = SR LSHIFT SI (HI);

Description

Test the optional condition and, if true, then perform the designated logical shift. If the condition is not true, then perform a no-operation. Omitting the condition performs the shift unconditionally. The operation logically shifts the bits of the operand by the amount and direction specified in the shift code from the SE register. Positive shift codes cause a left shift (upshift) and negative codes cause a right shift (downshift).

The shift may be referenced to the upper half of the output field (HI option) or to the lower half (L0 option). The shift output may be logically ORed with the present contents of the SR register by selecting the SR OR option.

For LSHIFT with a positive shift code, the operand is shifted left; the numbers of positions shifted is the count in the shift code. The 32-bit output field is zero-filled from the right. Bits shifted out of the high order bit in the 32-bit destination field ( $SR_{31}$ ) are dropped.

For LSHIFT with a negative shift code, the operand is shifted right; the number of positions shifted is the count in the shift code. The 32-bit output field is zero-filled from the left. Bits shifted out of the low order bit in the destination field ( $SR_0$ ) are dropped.

To shift a double-precision number, the same shift code is used for both halves of the number. On the first cycle, the upper half of the number is shifted using the HI option; on the following cycle, the lower half of the number is shifted using the LO and OR options.

Status Generated

No status bits affected.

Instruction Format

Conditional Shift operation, Instruction Type 16:

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	1	1	1	0	0	SF				Xop	2		0	0	0	0	CC	ND	)	

SF	Shifter Function
0 0 0 0	LSHIFT (HI)
0001	LSHIFT (HI, OR)
0010	LSHIFT (LO)
0011	LSHIFT (LO, OR)

Xop: Shifter operand COND: Condition

- IF Condition Codes Table 4-9 on page 4-24
- "Status Condition Codes" on page A-11

# **Shifter Instructions**

- "Shifter Function Codes" on page A-18
- "X Operand Codes" on page A-21

# Normalize

Syntax

[ IF cond ] SR = [SR OR] NORM xop (HI) ; (LO)

Permiss	sible xops	Permissi	ible conds	
SI	AR	EQ	LE	AC
SR1	MR2	NE	NEG	NOT AC
SR0	MR1	GT	POS	MV
	MR0	GE	AV	NOT MV
		LT	NOT AV	NOT CE

### Examples

```
/* Normalize instruction without condition */
SR = NORM SI (HI);
```

### Description

Test the optional condition and, if true, then perform the designated normalization. If the condition is not true, then perform a no-operation. Omitting the condition performs the normalize unconditionally. The operation arithmetically shifts the input operand to eliminate all but one of the sign bits. NORM shifts the in the opposite direction of ASHIFT. The amount of the shift comes from the SE register. The SE register may be loaded with the proper shift code to eliminate the redundant sign bits by using the Derive Exponent instruction; the shift code loaded is the negative of the quantity: (the number of sign bits minus one).

### Shifter Instructions

The shift may be referenced to the upper half of the output field (HI option) or to the lower half (L0 option). The shift output may be logically ORed with the present contents of the SR register by selecting the SR OR option. When the L0 reference is selected, the 32-bit output field is zero-filled to the left. Bits shifted out of the high order bit in the 32-bit destination field (SR<sub>31</sub>) are dropped.

The 32-bit output field is zero-filled from the right. If the exponent of an overflowed ALU result was derived with the HIX modifier, the 32-bit output field is filled from left with the ALU Carry (AC) bit in the Arithmetic Status Register (ASTAT) during a NORM (HI) operation. In this case (SE=1 from the exponent detection on the overflowed ALU value) a downshift occurs.

To normalize a double-precision number, the same shift code is used for both halves of the number. On the first cycle, the upper half of the number is shifted using the HI option; on the following cycle, the lower half of the number is shifted using the LO and OR options.

Status Generated

No status bits affected.

Instruction Format

Conditional Shift operation, Instruction Type 16:

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	1	1	1	0	0	SF				Хор	1		0	0	0	0	CC	ND	)	

SF	Shifter Function
1000	NORM (HI)
1001	NORM (HI, OR)
1010	NORM (LO)
1011	NORM (LO, OR)

Xop: Shifter operand COND: Condition See Also

- IF Condition Codes Table 4-9 on page 4-24
- "Status Condition Codes" on page A-11
- "Shifter Function Codes" on page A-18
- "X Operand Codes" on page A-21

### **Shifter Instructions**

### **Derive Exponent**

Syntax

E	ΙF	cond	]	SE	-	ЕХР	хор	(HI)	;
								(LO)	
								(HIX)	

Permissi	ible xops	Permiss	ible conds	
SI	AR	EQ	LE	AC
SR1	MR2	NE	NEG	NOT AC
SR0	MR1	GT	POS	MV
	MR0	GE	AV	NOT MV
		LT	NOT AV	NOT CE

#### Examples

```
/* Conditional derive exponent */
IF GT SE = EXP MR1 (HI);
/* Normalize 32-bit data to one sign bit to get the
best precision during arithmetic calculations */
/* First determine the exponent of the 32-bit register SR */
SE = EXP SR1 (HI);
SE = EXP SR0 (L0);
/* Second, normalize to one sign bit */
SR = NORM SR1 (HI), SI = SR0;
SR = SR OR NORM SI (L0);
/* Do your calculations */
/* Last, shift data back to original weight */
SR = ASHIFT SR1 (HI), SI = SR0;
SR = SR OR LSHIFT SI (L0);
```

### Description

Test the optional condition and, if true, perform the designated exponent operation. If the condition is not true, then perform a no-operation. Omitting the condition performs the exponent operation unconditionally.

The EXP operation derives the effective exponent of the input operand to prepare for the normalization operation (NORM). The EXP operation supplies the source operand to the exponent detector, which generates a shift code from the number of leading sign bits in the input operand. The shift code, stored in SE at the completion of the EXP instruction, is the effective exponent of the input value. The shift code depends on which exponent detector mode is used (HI, HIX, LO).

In the HI mode, the input is interpreted as a single precision signed number, or as the upper half of a double-precision signed number. The exponent detector counts the number of leading sign bits in the source operand and stores the resulting shift code in SE. The shift code equals the negative of the number of redundant sign bits in the input.

In the HIX mode, the input is interpreted as the result of an add or subtract which may have overflowed. HIX is intended to handle shifting and normalization of results from ALU operations. The HIX mode examines the ALU Overflow bit (AV) in the Arithmetic Status Register: if AV is set, then the effective exponent of the input is +1 (indicating that an ALU overflow occurred before the EXP operation), and +1 is stored in SE. If AV is not set, then HIX performs exactly the same operations as the HI mode.

In the L0 mode, the input is interpreted as the lower half of a double precision number. In performing the EXP operation on a double precision number, the higher half of the number must first be processed with EXP in the HI or HIX mode, and then the lower half can be processed with EXP in the L0 mode. If the upper half contained a non-sign bit, then the correct shift code was generated in the HI or HIX operation and that is the code that is stored in SE. If, however, the upper half was all sign bits, then EXP in the L0 mode totals the number of leading sign bits in the double precision word and stores the resulting shift code in SE.

### Shifter Instructions

### Status Generated

### (See Table 4-11 on page 4-30 for register notation)

ASTAT:	7	6	5	4	3	2	1	0
	SS	MV	AQ	AS	AC	AV	AN	AZ
	*	-	-	-	-	-	-	_

SS Set by the MSB of the input for an EXP operation in the HI or HIX mode with AV = 0. Set by the MSB inverted in the HIX mode with AV = 1. Not affected by operations in the L0 mode.

#### Instruction Format

#### Conditional Shift operation, Instruction Type 16:

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	1	1	1	0	0	SF				Xop	)		0	0	0	0	CC	DNE	)	

SF	Shifter Function
1 1 0 0	EXP (HI)
1 1 0 1	EXP (HIX)
1 1 1 0	EXP (LO)

Xop: Shifter operand COND: Condition

- IF Condition Codes Table 4-9 on page 4-24
- "Status Condition Codes" on page A-11
- "Shifter Function Codes" on page A-18
- "X Operand Codes" on page A-21

# **Block Exponent Adjust**

Syntax

[ IF cond ] SB = EXPADJ xop;

Permiss	sible xops	Permiss	ible conds	
SI	AR	EQ	LE	AC
SR1	MR2	NE	NEG	NOT AC
SR0	MR1	GT	POS	MV
	MR0	GE	AV	NOT MV
		LT	NOT AV	NOT CE

### Example

IF GT SB = EXPADJ SI ;

### Description

Test the optional condition and, if true, perform the designated exponent operation. If the condition is not true, then perform a no-operation. Omitting the condition performs the exponent operation unconditionally. The Block Exponent Adjust operation, when performed on a series of numbers, derives the effective exponent of the number largest in magnitude. This exponent can then be associated with all of the numbers in a block floating-point representation.

The Block Exponent Adjust circuitry applies the input operand to the exponent detector to derive its effective exponent. The input must be a signed twos complement number. The exponent detector operates in HI mode (see the EXP instruction, above).

At the start of a block, the SB register should be initialized to -16 to set SB to its minimum value. On each execution of the EXPADJ instruction, the effective exponent of each operand is compared to the current contents of the SB register. If the new exponent is greater than the current SB value, it is written to the SB register, updating it. Therefore, at the end of the

block, the SB register contains the largest exponent found. The EXPADJ instruction is only an inspection operation; no actual shifting takes place since the true exponent is not known until all the numbers in the block have been checked. However, the numbers can be shifted at a later time after the true exponent has been derived.

Extended (overflowed) numbers and the lower halves of double precision numbers can not be processed with the Block Exponent Adjust instruction.

Status Generated

No status bits affected.

Instruction Format

Conditional Shift operation, Instruction Type 16:

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	1	1	1	0	0	SF				Xoj	þ		0	0	0	0	CC	OND	)	

SF = 1111

Xop: Shifter operand COND: Condition

- IF Condition Codes Table 4-9 on page 4-24
- "Status Condition Codes" on page A-11
- "Shifter Function Codes" on page A-18
- "X Operand Codes" on page A-21

# Arithmetic Shift Immediate

Syntax

SR = [SR OR] ASHIFT xop BY <exp> (HI) ; (LO)

Permissi	ble xops	<exp></exp>
SI	MR0	Any constant between –128 and 127*
SR1	MR1	
SR0	MR2	
	AR	

\*See the ADSP-218x DSP Hardware Reference Manual, Chapter 2, "Computational Units."

Example

SR = SR OR ASHIFT SRO BY 3 (LO); /\* Do not use +3 \*/

Description

Arithmetically shift the bits of the operand by the amount and direction specified by the constant in the exponent field. Positive constants cause a left shift (upshift) and negative constants cause a right shift (downshift). A positive constant must be entered without a + sign.

The shift may be referenced to the upper half of the output field (HI option) or to the lower half (L0 option). The shift output may be logically ORed with the present contents of the SR register by selecting the SR OR option.

For ASHIFT with a positive shift constant, the operand is shifted left; with a negative shift constant the operand is shifted right. The 32-bit output field is sign-extended to the left (the MSB of the input is replicated to the left), and the output is zero-filled from the right. Bits shifted out of the high order bit in the 32-bit destination field ( $SR_{31}$ ) are dropped. Bits shifted out of the low order bit in the destination field ( $SR_{0}$ ) are dropped.

To shift a double precision number, the same shift constant is used for both halves of the number. On the first cycle, the upper half of the number is shifted using an ASHIFT with the HI option; on the following cycle, the lower half is shifted using an LSHIFT with the L0 and OR options. This prevents sign bit extension of the lower word's MSB.

Status Generated

No status bits affected.

Instruction Format

Shift Immediate operation, Instruction Type 15:

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	1	1	1	1	0	SF				Xoj	р		<ex< td=""><td>xp&gt;</td><td></td><td></td><td></td><td></td><td></td><td></td></ex<>	xp>						

SF	Shifter Function
0100	ASHIFT (HI)
0101	ASHIFT (HI, OR)
1 1 1 0	ASHIFT (LO)
0111	ASHIFT (LO, OR)

Xop: Shifter operand <exp>: 8-bit signed shift value

- "Shifter Function Codes" on page A-18
- "X Operand Codes" on page A-21

# Logical Shift Immediate

Syntax

<exp></exp>
Any constant between -128 and 127*

\* See the *ADSP-218x DSP Hardware Reference Manual*, Chapter 2, "Computational Units."

### Example

```
/* Shift the MR register into SR by -5 arithmetically */
SR = LSHIFT MRO BY -5 (LO); /* Shift right */
SR = SR OR LSHIFT MR1 BY -5 (HI); /* Shift right */
SR = SR OR LSHIFT MR2 BY 16-5 (HI); /* Shift left */
```

### Description

Logically shifts the bits of the operand by the amount and direction specified by the constant in the exponent field. Positive constants cause a left shift (upshift); negative constants cause a right shift (downshift). A positive constant must be entered without a + sign.

The shift may be referenced to the upper half of the output field (HI option) or to the lower half (L0 option). The shift output may be logically ORed with the contents of the SR register by selecting the SR OR option.

For LSHIFT with a positive shift constant, the operand is shifted left. The 32-bit output field is zero-filled to the left and from the right. Bits shifted out of the high order bit in the 32-bit destination field ( $SR_{31}$ ) are dropped. For LSHIFT with a negative shift constant, the operand is shifted right. The 32-bit output field is zero-filled from the left and to the right. Bits shifted out of the low order bit are dropped.

To shift a double precision number, the same shift constant is used for both parts of the number. On the first cycle, the upper half of the number is shifted using the HI option; on the following cycle, the lower half is shifted using the LO and OR options.

Status Generated

No status bits affected.

Instruction Format

Shift Immediate Operation, Instruction Type 15:

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	1	1	1	1	0	SF				Xop	)		<ex< td=""><td>xp&gt;</td><td></td><td></td><td></td><td></td><td></td><td></td></ex<>	xp>						

SF	Shifter Function
0 0 0 0	LSHIFT (HI)
0001	LSHIFT (HI, OR)
0010	LSHIFT (LO)
0011	LSHIFT (LO, OR)

Xop: Shifter operand <exp>: 8-bit signed shift value

- "Shifter Function Codes" on page A-18
- "X Operand Codes" on page A-21

# **Move Instructions**

The Move instructions are:

- "Register Move" on page 4-114
- "Load Register Immediate" on page 4-116
- "Data Memory Read (Direct Address)" on page 4-118
- "Data Memory Read (Indirect Address)" on page 4-120
- "Program Memory Read (Indirect Address)" on page 4-122
- "Data Memory Write (Direct Address)" on page 4-124
- "Data Memory Write (Indirect Address)" on page 4-126
- "Program Memory Write (Indirect Address)" on page 4-129
- "IO Space Read/Write" on page 4-131

# **Register Move**

Syntax

reg = reg;

#### Permissible registers

AX0	MX0	SI	SB	CNTR
AX1	MX1	SE	PX	OWRCNTR (write only)
AY0	MY0	SR1	ASTAT	RX0
AY1	MY1	SR0	MSTAT	RX1
AR	MR2	I0-I7	SSTAT (read only)	TX0
	MR1	M0-M7	IMASK	TX1
	MR0	L0-L7	ICNTL	IFC (write only)

### Example

I7 = AR;

### Description

Move the contents of the source to the destination location. The contents of the source are always right-justified in the destination location after the move.

When transferring a smaller register to a larger register (for example, an 8-bit register to a 16-bit register), the value stored in the destination is either sign-extended to the left if the source is a signed value, or zero-filled to the left if the source is an unsigned value. The unsigned registers which (when used as the source) cause the value stored in the destination to be zero-filled to the left are: 10 through 17, L0 through L7, CNTR, PX, ASTAT, MSTAT, SSTAT, IMASK, and ICNTL. All other registers cause sign-extension to the left.

When transferring a larger register to a smaller register (for example,, a 16-bit register to a 14-bit register), the value stored in the destination is right-justified (bit 0 maps to bit 0) and the higher-order bits are dropped.

Note that whenever MR1 is loaded with data, it is sign-extended into MR2.

Status Generated

No status bits affected.

Instruction Format

Internal Data Move, Instruction Type 17:

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	1	1	0	1	0	0	0	0	DS' RG	T P	SR RG	C GP	DF RF	EST G			SC RE	UR G	CE	

To choose the source register group (SRC RGP) and the source register (SOURCE REG), refer to the table Table A-51 on page A-17.

To choose the destination register group (DST RGP) and the destination register (DEST REG), refer to the table Table A-51 on page A-17.

### **Move Instructions**

# Load Register Immediate

#### Syntax

```
reg = <data>;
dreg = <data>;
```

data: <constant>

#### Permissible registers

dregs (	Instruction	n Type 6)	dregs (Insti	ruction Type 7)
(16-bi	t load)		(maximum	14-bit load)
AX0	MX0	SI	SB	CNTR
AX1	MX1	SE	PX	OWRCNTR (write only)
AY0	MY0	SR1	ASTAT	RX0
AY1	MY1	SR0	MSTAT	RX1
AR	MR2		IMASK	TX0
	MR1		ICNTL	TX1
	MR0		I0-I7	IFC (write only)
			M0-M7	-
			L0-L7	

### Example

IO = data\_buffer; LO = length(data\_buffer);

### Description

Move the data value specified to the destination location. The data may be a constant, or any symbol referenced by name or with the length operator. The data value is contained in the instruction word, with 16 bits for data register loads and up to 14 bits for other register loads. The value is always right-justified in the destination location after the load (bit 0 maps to bit 0). When a value of length less than the length of the destination is moved, it is sign-extended to the left to fill the destination width.

Note that whenever MR1 is loaded with data, it is sign-extended into MR2.
For this instruction only, the RX and TX registers may be loaded with a maximum of 14 bits of data (although the registers themselves are 16 bits wide). To load these registers with 16-bit data, use the register-to-register move instruction or the data memory-to-register move instruction with direct addressing.

Status Generated

No status bits affected.

Instruction Format

Load Register Immediate, Instruction Type 6:

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	1	0	0	DA	TA															DF	REG		

DATA contains the immediate value to be loaded into the Data Register destination location. The data is right-justified in the field, so the value loaded into an N-bit destination register is contained in the lower-order N bits of the DATA field.

To choose the data register (DREG), refer to the table "DREG Selection Codes" on page A-12.

Load Non-Data Register Immediate, Instruction Type 7:

23	22	21	20	19 18	17 16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	1	1	RGP	DATA													RF	EG		

DATA contains the immediate value to be loaded into the Non-Data Register destination location. The data is right-justified in the field, so the value loaded into an N-bit destination register is contained in the lower-order N bits of the DATA field.

To choose the source register group (SRC RGP) and the source register (SOURCE REG), refer to the table Table A-51 on page A-17.

# Data Memory Read (Direct Address)

#### Syntax

reg = DM ( <addr> ) ;

#### Permissible registers

AX0	MX0	SI	SB	CNTR
AXI	MXI	SE SD 1	PX	OWRENTR (write only)
AYU AV1	MY0 MV1	SRI	ASTAT MSTAT	RXU RX1
AR	MR2	I0-I7	IMASK	TX0
	MR1	M0-M7	ICNTL	TX1
	MR0	L0-L7		IFC (write only)

#### Example

SI = DM(ad\_port0);

## Description

The Read instruction moves the contents of the data memory location to the destination register. The addressing mode is direct addressing (designated by an immediate address value or by a label). The data memory address is stored directly in the instruction word as a full 14-bit field. The contents of the source are always right-justified in the destination register after the read (bit 0 maps to bit 0).

Note that whenever MR1 is loaded with data, it is sign-extended into MR2.

Status Generated

No status bits affected.

Instruction Format

Data Memory Read (Direct Address), Instruction Type 3:

23	22	21	20	19 18	17 16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	0	0	0	RGP	ADDR													RE	G		

ADDR contains the direct address to the source location in Data Memory.

To choose the source register group (RGP) and the source register (REG), refer to the table Table A-51 on page A-17.

#### **Move Instructions**

## Data Memory Read (Indirect Address)

Syntax

Permissi	ble dregs					
AX0 AX1 AY0 AY1 AR	MX0 MX1 MY0 MY1 MR2 MR1 MR0	SI SE SR1 SR0				
dreg	= DM (		ΙO		MO	);
			Ι1	,	M1	
			Ι2		M2	
			Ι3		М3	
			_	•		
			Ι4		M4	
			Ι5		Μ5	
			Ι6		M6	
			Ι7		Μ7	

#### Example

AYO = DM (I3, M1);

#### Description

The Data Memory Read Indirect instruction moves the contents of the data memory location to the destination register. The addressing mode is register indirect with post-modify. For linear (non-circular) indirect addressing, the  $\bot$  register corresponding to the I register being used must be set to zero. The contents of the source are always right-justified in the destination register after the read (bit 0 maps to bit 0).

Status Generated

No status bits affected.

Instruction Format

ALU/MAC operation with Data Memory Read, Instruction Type 4:

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	1	1	G	0	0	AM	1F				0	0	0	0	0	DI	REG			Ι		М	

AMF specifies the ALU or MAC operation to be performed in parallel with the Data Memory Read. In this case, AMF = 00000, indicating a no-operation for the ALU/MAC function.

To choose a data register, refer to the table "DREG Selection Codes" on page A-12.

G specifies which Data Address Generator the I and M registers are selected from. These registers must be from the same DAG as separated by the gray bar above. I specifies the indirect address pointer (I register). M specifies the modify register (M register).

- "DAG Selection Codes" on page A-15
- "Index Register Selection Codes" on page A-15
- "Modify Register Selection Codes" on page A-16

# Program Memory Read (Indirect Address)

Syntax

Permis	sible dregs					
AX0	MX0	SI				
AX1	MX1	SE				
AY0	MY0	SR	1			
AY1	MY1	SR	0			
AR	MR2					
	MR1					
	MR0					
dreg	= PM (		I4		M4	);
			Ι5	,	Μ5	
			I6		M6	
			Ι7		Μ7	

## Example

MX1 = PM (I6, M5);

## Description

The Program Memory Read Indirect instruction moves the contents of the program memory location to the destination register. The addressing mode is register indirect with post-modify. For linear (for example, non-circular) indirect addressing, the  $\bot$  register corresponding to the I register used must be set to zero. The 16 most significant bits of the Program Memory Data bus (PMD<sub>23-8</sub>) are loaded into the destination register, with bit PMD<sub>8</sub> lining up with bit 0 of the destination register (right-justification). If the destination register is less than 16 bits wide, the most significant bits are dropped. Bits PMD<sub>7-0</sub> are always loaded into the PX register. You may ignore these bits or read them out on a subsequent cycle.

## Status Generated

No status bits affected.

Instruction Format

ALU/MAC operation with Data Memory Read, Instruction Type 4:

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	1	0	1	0	0	AM	1F				0	0	0	0	0	DF	REG			Ι		М	

AMF specifies the ALU or MAC operation to be performed in parallel with the Data Memory Read. In this case, AMF = 00000, indicating a no-operation for the ALU/MAC function.

To choose a data register, refer to the table "DREG Selection Codes" on page A-12.

I specifies the indirect address pointer (I register). M specifies the modify register (M register).

- "Index Register Selection Codes" on page A-15
- "Modify Register Selection Codes" on page A-16

# Data Memory Write (Direct Address)

#### Syntax

DM ( <addr> ) = reg;

#### Permissible registers

AX0	MX0	SI	SB	CNTR
AX1	MX1	SE	PX	RX0
AY0	MY0	SR1	ASTAT	RX1
AY1	MY1	SR0	MSTAT	TX0
AR	MR2	I0-I7	SSTAT (read only)	TX1
	MR1	M0-M7	IMASK	
	MR0	L0-L7	ICNTL	

#### Example

 $DM(cntl_port0) = AR;$ 

#### Description

Moves the contents of the source register to the data memory location specified in the instruction word. The addressing mode is direct addressing (designated by an immediate address value or by a label). The data memory address is stored directly in the instruction word as a full 14-bit field. Whenever a register that is less than 16 bits in length is written to memory, the value written is either sign-extended to the left if the source is a signed value, or zero-filled to the left if the source is an unsigned value. The unsigned registers which are zero-filled to the left are: 10 through 17, L0 through L7, CNTR, PX, ASTAT, MSTAT, SSTAT, IMASK, and ICNTL. All other registers are sign-extended to the left.

The contents of the source are always right-justified in the destination location after the write (bit 0 maps to bit 0).

Note that whenever MR1 is loaded with data, it is sign-extended into MR2.

Status Generated

No status bits affected.

Instruction Format

Data Memory Read (Direct Address), Instruction Type 3:

23	22	21	20	19 18	17 16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	0	0	1	RGP	ADDR													RE	G		

ADDR contains the direct address of the destination location in Data Memory.

To choose the source register group (RGP) and the source register (REG), refer Table A-51 on page A-17.

#### **Move Instructions**

## Data Memory Write (Indirect Address)

Syntax

Perm	issi	ible	dre	gs
	1001		are	ອ

AX0	MX0	SI
AX1	MX1	SE
AY0	MY0	SR1
AY1	MY1	SR0
AR	MR2	
	MR1	
	MR0	

DM (	ΙO		MO	) =	dreg	;
	Ι1	,	M1		<data></data>	
	I 2		M2			
	Ι3		M3			
	I4		M4			
	I4 I5		M4 M5			
	I4 I5 I6		M4 M5 M6			
	I4 I5 I6 I7		M4 M5 M6 M7			

data: <constant>

#### Example

DM (I2, M0)= MR1;

#### Description

The Data Memory Write Indirect instruction moves the contents of the source to the data memory location specified in the instruction word. The immediate data may be a constant.

The addressing mode is register indirect with post-modify. For linear (for example, non-circular) indirect addressing, the L register corresponding to the I register used must be set to zero. When a register of less than 16 bits is written to memory, the value written is sign-extended to form a 16-bit value. The contents of the source are always right-justified in the destination location after the write (bit 0 maps to bit 0).

Status Generated

No status bits affected.

Instruction Format

ALU/MAC operation with Data Memory Write, Instruction Type 4:

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	1	1	G	1	0	AM	F				0	0	0	0	0	D	REC	Ì		Ι		М	

Data Memory Write, Immediate Data, Instruction Type 2:

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	0	1	G	Dat	ta															Ι		М	

AMF specifies the ALU or MAC operation to be performed in parallel with the Data Memory Write. In this case, AMF = 00000, indicating a no-operation for the ALU/MAC function.

Data represents the actual 16-bit value.

To choose a data register (DREG), refer to the table "DREG Selection Codes" on page A-12.

G specifies which Data Address Generator (DAG) the I and M registers are selected from. These registers must be from the same DAG as separated by the gray bar above. I specifies the indirect address pointer (I register). M specifies the modify register (M register).

## **Move Instructions**

- "DAG Selection Codes" on page A-15
- "Index Register Selection Codes" on page A-15
- "Modify Register Selection Codes" on page A-16

# Program Memory Write (Indirect Address)

Syntax

#### Permissible dregs

AX0	MX0	SI
AX1	MX1	SE
AY0	MY0	SR1
AY1	MY1	SR0
AR	MR2	
	MR1	
	MR0	

#### Example

PM (I6, M5) = AR;

## Description

The Program Memory Write Indirect instruction moves the contents of the source to the program memory location specified in the instruction word. The addressing mode is register indirect with post-modify. For linear (non-circular) indirect addressing, the L register corresponding to the I register used must be set to zero. The 16 most significant bits of the Program Memory Data bus ( $PMD_{23-8}$ ) are loaded from the source register, with bit  $PMD_8$  aligned with bit 0 of the source register (right justification). The 8 least significant bits of the Program Memory Data bus ( $PMD_{7-0}$ ) are loaded from the PX register. Whenever a source register of length less than 16 bits is written to memory, the value written is sign-extended to form a 16-bit value.

Status Generated

No status bits affected.

Instruction Format

ALU / MAC Operation with Program Memory Write, Instruction Type 5:

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	1	0	1	1	0	AN	1F				0	0	0	0	0	DF	REG			Ι		М	

AMF specifies the ALU or MAC operation to be performed in parallel with the Program Memory Write. In this case, AMF = 00000, indicating a no-operation for the ALU / MAC function.

To choose a data register (DREG), refer to the table "DREG Selection Codes" on page A-12.

I specifies the indirect address pointer (I register). M specifies the modify register (M register).

- "Index Register Selection Codes" on page A-15
- "Modify Register Selection Codes" on page A-16

## IO Space Read/Write

#### Syntax

IO ( <addr>) = dreg ;</addr>	I/O write
dreg = IO ( <addr>) ;</addr>	I/O read

<addr> is an 11-bit direct address value between 0 and 2047

#### Permissible dregs

AX0	MX0	SI
AX1	MX1	SE
AY0	MY0	SR1
AY1	MY1	SR0
AR	MR2	
	MR1	
	MR0	

#### Example

```
IO(23) = AXO;
MY1 = IO(2047);
```

#### Description

The I/O space read and write instructions are used to access the ADSP-218x's I/O memory space. These instructions move data between the processor data registers and the I/O memory space.

Status Generated

## **Move Instructions**

No status bits affected.

Instruction Format

I/O Memory Space Read/Write, Instruction Type 29:

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	0	0	0	1	D	AD	DR										DF	REG		

ADDR contains the 11-bit direct address of the source or destination location in I/O Memory Space.

To choose a data register (DREG), refer to the table "DREG Selection Codes" on page A-12.

D specifies the direction of the transfer (0=read, 1=write).

The Program Flow instructions are:

- "JUMP" on page 4-134
- "CALL" on page 4-136
- "JUMP or CALL on Flag In Pin" on page 4-138
- "Modify Flag Out Pin" on page 4-140
- "RTS (Return from Subroutine)" on page 4-142
- "RTI (Return from Interrupt)" on page 4-144
- "Do Until" on page 4-146
- "Idle" on page 4-149

## JUMP

Syntax

```
      Syntax

      [IF cond ] JUMP
      (I4) ,

      (I5)

      (I6)

      (I7)

      <addr>
```

Permissible conds

EQ	NE	GT	GE	LT
LE	NEG	POS	AV	NOT AV
AC	NOT AC	MV	NOT MV	NOT CE

#### Example

```
IF NOT CE JUMP top_loop;
```

```
/* CNTR is decremented */
```

## Description

Test the optional condition and, if true, perform the specified jump. If the condition is not true then perform a no-operation. Omitting the condition performs the jump unconditionally. The JUMP instruction causes program execution to continue at the effective address specified by the instruction. The addressing mode may be direct or register indirect.

For direct addressing (using an immediate address value or a label), the program address is stored directly in the instruction word as a full 14-bit field. For register indirect jumps, the selected I register provides the address; it is not post-modified in this case.

If JUMP is the last instruction inside a DO UNTIL loop, you must ensure that the loop stacks are properly handled. If NOT CE is used as the condition, execution of the JUMP instruction decrements the processor's counter (CNTR register).

Status Generated

No status bits affected.

Instruction Format

Conditional JUMP Direct, Instruction Type 10:

23	22	21	20	19	18	17 16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	1	1	0	ADDR													CC	DNI	)	

Conditional JUMP Indirect, Instruction Type 19:

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	1	0	1	1	0	0	0	0	0	0	0	0	Ι		0	0	CC	OND	)	

I specifies the I register (Indirect Address Pointer).

ADDR:	Immediate jump address	COND:	Condition
-------	------------------------	-------	-----------

- IF Condition Codes Table 4-9 on page 4-24
- "Status Condition Codes" on page A-11
- "Index Register Selection Codes" on page A-15

# CALL

Syntax

#### Permissible conds

EQ	NE	GT	GE	LT
LE	NEG	POS	AV	NOT AV
AC	NOT AC	MV	NOT MV	NOT CE

## Example

```
IF AV CALL scale_down;
```

## Description

Test the optional condition and, if true, then perform the specified call. If the condition is not true then perform a no-operation. Omitting the condition performs the call unconditionally. The CALL instruction is intended for calling subroutines. CALL pushes the PC stack with the return address and causes program execution to continue at the effective address specified by the instruction. The addressing modes available for the CALL instruction are direct or register indirect. For direct addressing (using an immediate address value or a label), the program address is stored directly in the instruction word as a full 14-bit field. For register indirect jumps, the selected I register provides the address; it is not post-modified in this case.

If CALL is the last instruction inside a DO UNTIL loop, you must ensure that the loop stacks are properly handled.

Status Generated

No status bits affected.

Instruction Format

Conditional JUMP Direct, Instruction Type 10:

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	1	1	1	AD	DR													CC	ONE	)	

Conditional JUMP Indirect, Instruction Type 19:

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	1	0	1	1	0	0	0	0	0	0	0	0	0	Ι	0	1	CC	)NC	)	

I specifies the I register (Indirect Address Pointer).

ADDR: Immediate jump address COND: Condition

- IF Condition Codes Table 4-9 on page 4-24
- "Status Condition Codes" on page A-11
- "Index Register Selection Codes" on page A-15

## JUMP or CALL on Flag In Pin

Syntax

IF FLAG\_IN JUMP <addr> ; NOT FLAG\_IN CALL

#### Example

IF FLAG\_IN JUMP service\_proc\_three;

#### Description

Test the condition of the FI pin of the processor and, if set to one, perform the specified jump or call. If FI is zero then perform a no-operation. Omitting the flag in condition reduces the instruction to a standard JUMP or CALL.

The JUMP instruction causes program execution to continue at the address specified by the instruction. The addressing mode for the JUMP on FI must be direct.

The CALL instruction is intended for calling subroutines. CALL pushes the PC stack with the return address and causes program execution to continue at the address specified by the instruction. The addressing mode for the CALL on FI must be direct.

If JUMP or CALL is the last instruction inside a DO UNTIL loop, you must ensure that the loop stacks are properly handled.

For direct addressing (using an immediate address value or a label), the program address is stored directly in the instruction word as a full 14-bit field.

Status Generated

No status bits affected.

## Instruction Format

Conditional JUMP or CALL on Flag In Direct Instruction Type 27:

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	0	0	1	1	Ade	dress	5										Ad	dr	FIC	S
								^ 1	2 LS	SBs										۸ <u>2</u>	2 M.	SBs	

S:	Specifies JUMP	(0) or	:CALL (1)	FIC:
----	----------------	--------	-----------	------

Latched state of FI pin

- "Jump and Call Codes" on page A-18
- "FI Condition Codes" on page A-14

## Modify Flag Out Pin

Syntax

[ IF cond ]	SET	FLAG_OUT	[,];
	RESET	FL0	
	TOGGLE	FL1	
		FL2	

#### Example

IF MV SET FLAG\_OUT, RESET FL1;

#### Description

Evaluate the optional condition and if true, set to one, reset to zero, or toggle the state of the specified flag output pin(s). Otherwise perform a no-operation and continue with the next instruction. Omitting the condition performs the operation unconditionally. Multiple flags may be modified by including multiple clauses, separated by commas, in a single instruction. This instruction does not directly alter the flow of your program—it is provided to signal external devices.

Note that the FO pin is specified by FLAG\_OUT in the instruction syntax.

The following flag outputs are present on the ADSP-218x processor: F0, FL0, FL1, FL2

Status Generated

No status bits affected.

Instruction Format

#### Flag Out Mode Control Instruction Type 28:

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	0	0	1	0	0	0	0	0	FO		FO		FO	)	FO	)	CC	DND	)	
												^ FI	L2	^ F	L1	^ F	L0	^ F	LAC	G_O	UT		

FO: Operation to perform on flag output pin COND: Condition code

- IF Condition Codes Table 4-9 on page 4-24
- "Status Condition Codes" on page A-11
- "FO Condition Codes" on page A-14

## RTS (Return from Subroutine)

#### Syntax

[IF cond ] RTS ;

#### Permissible conds

EQ	NE	GT	GE	LT
LE	NEG	POS	AV	NOT AV
AC	NOT AC	MV	NOT MV	NOT CE

## Example

IF LE RTS ;

#### Description

Test the optional condition and, if true, then perform the specified return. If the condition is not true then perform a no-operation. Omitting the condition performs the return unconditionally. RTS executes a program return from a subroutine. The address on top of the PC stack is popped and is used as the return address. The PC stack is the only stack popped.

If RTS is the last instruction inside a DO UNTIL loop, you must ensure that the loop stacks are properly handled.

Status Generated

No status bits affected.

Instruction Format

## Conditional Return, Instruction Type 20:

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	1	0	1	0	0	0	0	0	0	0	0	0	0	0	0	0	CC	ND	)	

COND: Condition

- IF Condition Codes Table 4-9 on page 4-24
- "Status Condition Codes" on page A-11

# RTI (Return from Interrupt)

#### Syntax

[IF cond ] RTI;

#### Permissible conds

EQ	NE	GT	GE	LT
LE	NEG	POS	AV	NOT AV
AC	NOT AC	MV	NOT MV	NOT CE

## Example

IF MV RTI;

## Description

Test the optional condition and, if true, then perform the specified return. If the condition is not true then perform a no-operation. Omitting the condition performs the return unconditionally. RTI executes a program return from an interrupt service routine. The address on top of the PC stack is popped and is used as the return address. The value on top of the status stack is also popped, and is loaded into the arithmetic status (ASTAT), mode status (MSTAT) and the interrupt mask (IMASK) registers.

If RTI is the last instruction inside a DO UNTIL loop, you must ensure that the loop stacks are properly handled.

Status Generated

No status bits affected.

Instruction Format

## **Instruction Set**

#### Conditional Return, Instruction Type 20:

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	1	0	1	0	0	0	0	0	0	0	0	0	0	0	0	1	CC	ND	)	

COND: Condition

- IF Condition Codes Table 4-9 on page 4-24
- "Status Condition Codes" on page A-11

# Do Until

#### Syntax

```
DO <addr> [UNTIL term];
```

#### Permissible terms

EQ	NE	GT	GE	LT	FOREVER
LE	NEG	POS	AV	NOT AV	
AC	NOT AC	MV	NOT MV	CE	

## Example

```
D0 loop_label UNTIL CE;
    /* CNTR is decremented each pass through loop */
```

## Description

DO UNTIL sets up looping circuitry for zero-overhead looping. The program loop begins at the program instruction immediately following the DO instruction, ends at the address designated in the instruction and repeats execution until the specified termination condition is met (if one is specified) or repeats in an infinite loop (if none is specified). The termination condition is tested during execution of the last instruction in the loop, the status having been generated upon completion of the previous instruction. The address (<addr>) of the last instruction in the loop is stored directly in the instruction word.

If CE is used for the termination condition, the processor's counter (CNTR register) is decremented once for each pass through the loop.

When the D0 instruction is executed, the address of the last instruction is pushed onto the loop stack along with the termination condition and the current program counter value plus 1 is pushed onto the PC stack.

Any nesting of D0 loops continues the process of pushing the loop and PC stacks, up to the limit of the loop stack size (4 levels of loop nesting) or of the PC stack size (16 levels for subroutines plus interrupts plus loops). With either or both the loop or PC stacks full, a further attempt to perform the D0 instruction sets the appropriate stack overflow bit and performs a no-operation.

Status Generated

(See Table 4-11 on page 4-30 for register notation)

#### Instruction Format

ASTAT: Not affected.

SSTAT:	7	6	5	4	3	2	1	0
	LSO	LSE	SSO	SSE	CSO	CSE	PSO	PSE
	*	0	_	_	_	_	*	0

LS0 Loop Stack Overflow: set if the loop stack overflows; otherwise not affected.

LSE Loop Stack Empty: always cleared (indicating loop stack not empty).

PS0 PC Stack Overflow: set if the PC stack overflows; otherwise not affected.

PSE PC Stack Empty: always cleared (indicating PC stack not empty).

#### Do Until, Instruction Type 11:

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	1	0	1	Ado	Addr													ΤE	RM		

ADDR specifies the address of the last instruction in the loop. In the Instruction Syntax, this field may be a program label or an immediate address value.

TERM	Syntax	Condition Tested
0000	NE	Not Equal to Zero
0001	EQ	Equal Zero
0010	LE	Less Than or Equal to Zero
0011	GT	Greater Than Zero
0100	GE	Greater Than or Equal to Zero
0101	LT	Less Than Zero
0110	NOT AV	Not ALU Overflow
0111	AV	ALU Overflow
1000	NOT AC	Not ALU Carry
1001	AC	ALU Carry
1010	POS	X Input Sign Positive
1011	NEG	X Input Sign Negative
1 1 0 0	NOT MV	Not MAC Overflow
1 1 0 1	MV	MAC Overflow
1 1 1 0	CE	Counter Expired
1111	FOREVER	Always

TERM specifies the termination condition, as shown below:

## Idle

Syntax

```
IDLE :
IDIF(n):
                /* slow idle * /
```

## Description

IDLE causes the processor to wait indefinitely in a low-power state, waiting for interrupts. When an interrupt occurs it is serviced and execution continues with the instruction following IDLE. Typically this next instruction is a JUMP back to IDLE, implementing a low-power standby loop.



Note the restrictions on JUMP or IDLE as the last instruction in a DO UNTIL loop, detailed in the ADSP-218x DSP Hardware Reference Manual, Chapter 3, "Program Control."

IDLE (n) is a special version of IDLE that slows the processor's internal clock signal to further reduce power consumption. The reduced clock frequency, a programmable fraction of the normal clock rate, is specified by a selectable divisor n given in the instruction: n = 16, 32, 64, or 128. The instruction leaves the processor fully functional, but operating at the slower rate during execution of the IDLE (n) instruction. While it is in this state, the processor's other internal clock signals (such as SCLK, CLK-0UT, and the timer clock) are reduced by the same ratio.

When the IDLE (n) instruction is used, it slows the processor's internal clock and thus its response time to incoming interrupts-the 1-cycle response time of the standard IDLE state is increased by n, the clock divisor. When an enabled interrupt is received, the ADSP-218x remains in the IDLE state for up to a maximum of n CLKIN cycles (where n = 16, 32, 64, or 128) before resuming normal operation.

When the IDLE (n) instruction is used in systems that have an externally generated serial clock, the serial clock rate may be faster than the processor's reduced internal clock rate. Under these conditions, interrupts must

not be generated at a faster rate than can be serviced, due to the additional time the processor takes to come out of the IDLE state (a maximum of n CLKIN cycles).

Serial port autobuffering continues during IDLE without affecting the idle state.

Status Generated

No status bits affected.

Instruction Format

Idle, Instruction Type 31:

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	0	0	1	0	1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Slow Idle, Instruction Type 31:

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	0	0	1	0	1	0	0	0	0	0	0	0	0	0	0	0	D٧	DV		

DV: Clock divisor

See Also

• "Slow Idle Divisor Codes" on page A-14

# **MISC Instructions**

MISC instructions are:

- "Stack Control" on page 4-152
- "Program Memory Overlay Register Update" on page 4-162
- "Data Memory Overlay Register Update" on page 4-165
- "Modify Address Register" on page 4-168
- "No Operation" on page 4-170

# Stack Control

Syntax

```
[ PUSH STS ] [, POP CNTR] [, POP PC] [, POP LOOP];
```

Example

Description

Stack Control pushes or pops the designated stack(s). The entire instruction executes in one cycle regardless of how many stacks are specified.

The PUSH STS (Push Status Stack) instruction increments the status stack pointer by one to point to the next available status stack location; and pushes the arithmetic status (ASTAT), mode status (MSTAT), and interrupt mask register (IMASK) onto the processor's status stack. Note that the PUSH STS operation is executed automatically whenever an interrupt service routine is entered.
Any POP pops the value on the top of the designated stack and decrements the same stack pointer to point to the next lowest location in the stack. POP STS causes the arithmetic status (ASTAT), mode status (MSTAT), and interrupt mask (IMASK) to be popped into these same registers. This also happens automatically whenever a return from interrupt (RTI) is executed.

POP CNTR causes the counter stack to be popped into the down counter. When the loop stack or PC stack is popped (with POP LOOP or POP PC, respectively), the information is lost. Returning from an interrupt (RTI) or subroutine (RTS) also pops the PC stack automatically.

#### Status Generated

(See Table 4-11 on page 4-30 for register notation).

SSTAT	7	6	5	4	3	2	1	0
	LSO	LSE	SSO	SSE	CSO	CSE	PSO	PSE
	_	*	*	*	_	*	_	*
DOF		-						
PSE	PC Stack I otherwise.	Empty: set	: if a pop re	esults in ai	n empty pr	ogram cou	inter stack;	cleared
CSE	Counter St wise.	tack Empty	y: set if a p	op results	in an emp	ty counter	stack; clear	red other-
SSE	Status Stac not empty) cleared oth	k Empty: 1 ). For POP herwise.	for PUSH S STS, SSE i	TS, this bit s set if the	is always o pop result	cleared (ind is in an em	dicating sta pty status	itus stack stack;
SSO	Status Stac affected.	k Overflov	w: for PUSH	∣STS set if	the status	stack overf	flows; othe	rwise not
LSE	Loop Stack	k Empty: s	et if a pop	results in a	an empty l	oop stack;	cleared otl	nerwise.

Note that once any Stack Overflow occurs, the corresponding stack overflow bit is set in SSTAT, and this bit stays set indicating there has been loss of information. Once set, the stack overflow bit can only be cleared by resetting the processor.

Instruction Format

Stack Control, Instruction Type 26:

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	0	1	0	0	0	0	0	0	0	0	0	0	0	Iq		Рр	Lp	Ср	Spp	

Lp:

Loop Stack Control

Cp:	Counter Stack Control	Spp:	Status Stack Control

Iq: 10 = Disable Ints, 11 = Enable Ints

PC Stack Control

#### See Also

Pp:

• "Mode Control Codes" on page A-5

# TOPPCSTACK

A special version of the register-to-register Move instruction, Type 17, is provided for reading and popping or writing and pushing the top value of the PC stack. the normal POP PC instruction does not save the value popped from the stack.

To save this value into a register, use the following special instruction.

```
reg = TOPPCSTACK; /* pop PC stack into reg */
    /* toppcstack may also be lowercase */
```

The PC stack is also popped by this instruction, after a one-cycle delay. An NOP should usually be placed after the special instruction, to allow the pop to occur properly:

There us no standard PUSH PC stack instruction. To push a specific value onto the PC stack, therefore, use the following special instruction.

```
TOPPCSTACK = reg; /*push reg contents onto PC stack */
```

The stack is pushed immediately in the same cycle.



Note that TOPPCSTACK may not be used as a register in any other instruction type.



Because the PC stack width is 14 bits, be sure that registers that are pushed onto the PC stack via the TOPPCSTACK = reg instruction are 14 bits or less to order to avoid loss of data. The 14 MSBs from a 16 bit register are written to the PC stack. The upper 2 bits of the 16 bit value are discarded.

## **MISC Instructions**

## Example

```
AXO = TOPPCSTACK; /* pop PC stack into AXO */
NOP;
TOPPCSTACK = I7; /* push contents of I7 onto PC stack */
```

ALU, M	AC and Sl	nifter Registers	DAG R	egisters				
AX0	MX0	SI	I0	I4	M0	M4	L0	L4
AX1	MX1	SE	I1	I5	M1	M5	L1	L5
AY0	MY0	SR1	I2	I6	M2	M6	L2	L6
AY1	MY1	SR0	I3	I7	M3	M7	L3	L7
AR	MR2							
	MR1							
	MR0							
	MX0							

Use only the following registers in the TOPPCSTACK instruction:

There are several restrictions on the use of the special TOPPCSTACK instructions which are described in the *ADSP-218x DSP Hardware Reference Manual*, Chapter 3, "Program Control."

#### Instruction Format

TOPPCSTACK = reg

Internal Data Move, Instruction Type 17:

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	1	1	0	1	0	0	0	0	1	1	SR RG	C SP	1	1	1	1	SC RE	DUR EG	CE	

To choose the source register group (SRC RGP) and the source register (SOURCE REG), refer to the table "Register Selection Codes" on page A-17.

reg = TOPPCSTACK

Internal Data Move, Instruction Type 17:

23	22	21	20	19	18	17	16	15	14	13	12	11 10	9	8	7 6	5	4	3	2	1	0
0	0	0	0	1	1	0	1	0	0	0	0	DST RGP	1	1	DEST REG	Г		1	1	1	1

To choose the destination register group (DST RGP) and the destination register (DEST REG), refer to the table "Register Selection Codes" on page A-17.

## **MISC Instructions**

# Mode Control

Syntax

## Example

DIS AR\_SAT, ENA M\_MODE;

#### Description

Enables (ENA) or disables (DIS) the designated processor mode. The corresponding mode status bit in the mode status register (MSTAT) is set for ENA mode and cleared for DIS mode. At reset, MSTAT is set to zero, meaning that all modes are disabled. Any number of modes can be changed in one cycle with this instruction. Multiple ENA or DIS clauses must be separated by commas.

MST	AT Bits	Description
0	SEC_REG	Alternate Register Data Bank
1	BIT_REV	Bit-Reverse Mode on Address Generator #1
2	AV_LATCH	ALU Overflow Status Latch Mode
3	AR_SAT	ALU AR Register Saturation Mode
4	M_MODE	MAC Result Placement Mode
5	TIMER	Timer Enable
6	G_MODE	Enables GO Mode

The data register bank select bit (SEC\_REG) determines which set of data registers is currently active (0=primary, 1=secondary).

The bit-reverse mode bit (BIT\_REV), when set to 1, causes addresses generated by Data Address Generator #1 to be output in bit reversed order.

The ALU overflow latch mode bit (AV\_LATCH), when set to 1, causes the AV bit in the arithmetic status register to stay set once an ALU overflow occurs. In this mode, if an ALU overflow occurs, the AV bit is set and remains set even if subsequent ALU operations do not generate overflows. The AV bit can only be cleared by writing a zero into it directly over the DMD bus.

The AR saturation mode bit, (AR\_SAT), when set to 1, causes the AR register to saturate if an ALU operation causes an overflow, as described in the *ADSP-218x DSP Hardware Reference Manual*, Chapter 2, "Computational Units."

The MAC result placement mode ( $M_MODE$ ) determines whether or not the left shift is made between the multiplier product and the MR register.

Setting the Timer Enable bit (TIMER) starts the timer decrementing logic. Clearing this bit halts the timer.

The GO mode (G\_MODE) allows an ADSP-218x DSP to continue executing instructions from internal memory (if possible) during a bus grant. The GO mode allows the processor to run; only if an external memory access is required does the processor halt, waiting for the bus to be released.

Instruction Format

Mode Control, Instruction Type 18:

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	1	1	0	0	ΤI		MM		AS		0	L	BR		SR		GN	Μ	0	0
ΤI	:	Ti	mer	Ena	able					M	۹:	M	ultip	olie	r Pl	acen	nent						
AS	:	Al	R Sa	tura	tion	Mo	de C	Conti	rol	0	L:	AI	LU C	Dve	erflo	w L	atch	Mo	de (	Con	trol		
ΒR	:	Bi	t Re	vers	e M	ode	Con	trol		SI	R:	Se	conc	lar	y Re	egist	er B	ank	Mo	de			
GМ	:	G	O M	lode	:																		

## See Also

- IF Condition Codes Table 4-9 on page 4-24
- "Type 18: Mode Control" on page A-5

# Interrupt Enable and Disable

Syntax

```
ENA INTS ;
DIS INTS ;
```

Description

Interrupts are enabled by default at reset. Executing the DIS INTS instruction causes all interrupts (including the power down interrupt) to be masked, without changing the contents of the IMASK register.

Executing the  $\ensuremath{\mathsf{ENA}}$  INTS instruction allows all unmasked interrupts to be serviced again.



Note that disabling interrupts does not affect serial port autobuffering or ADSP-218x DMA transfers (IDMA or BDMA). These operations continue normally whether or not interrupts are enabled.

Status Generated

No status bits affected.

Instruction Format

DIS INTS, Instruction Type 26:

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	0	1	0	0	0	0	0	0	0	0	0	0	0	1	0	0	0	0	0	0

ENA INTS, Instruction Type 26:

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	0	1	0	0	0	0	0	0	0	0	0	0	0	1	1	0	0	0	0	0

# **MISC Instructions**

# Program Memory Overlay Register Update

#### Syntax

PMOVLAY = <data>;
reg = PMOVLAY;
data:<constant>

Permiss	ible dregs		Permissible re	egs
AX0	MX0	SI	SB	CNTR
AX1	MX1	SE	PX	OWRCNTR (write only)
AY0	MY0	SR1	ASTAT	RX0
AY1	MY1	SR0	MSTAT	RX1
AR	MR2		IMASK	TX0
	MR1		ICNTL	TX1
	MR0		I0-I7	IFC (write only)
			M0-M7	DMOVLAY
			L0-L7	

#### Permissible constants:

1,2	ADSP-2184 and ADSP-2186 processors only
0,1,2	ADSP-2181, ADSP-2183, and ADSP-2185 processors only
0,1,2,4,5	ADSP-2187 and ADSP-2189 processors only
0,1,2,4,5,6,7	ADSP-2188 processor only

## Example

```
PMOVLAY = 5;  /* Write to pmovlay register */
/* Read from pmovlay register into ax0 register */
AX0 = PMOVLAY;
PMOVLAY = DMOVLAY;  /* Write to PMOVLAY from DMOVLAY */
PMOVLAY = DM(0x1234); /* Write to PMOVLAY from data memory */
```

## Description

The PMOVLAY write instruction switches the context of the hardware program memory overlay region to the specific region specified by the permissible data value written to the PMOVLAY register. The PMOVLAY read instruction moves the value from the PMOVLAY register into one of the permissible registers listed above.

Status Generated

No status bits affected.

Instruction Format

Read/Write Data Memory (Immediate Address), Instruction Type 3:

23	22	21	20	19 18	17 16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	0	0	D	RGP	ADDR													RF	ËG		

Load Non-data Register Immediate, Instruction Type 7:

23	22	21	20	19 18	17 16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	1	1	RGP	DATA													RE	G		

Load	Non-data	Register	Immediate.	Instruction	Type 17:
LUau	ron-uata	Register	miniculate,	mstruction	Type 17.

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	1	1	0	1	0	0	0	0	DS' RG	T P	SR RG	C GP	DF RE	EST EG			SC RE	UR G	CE	

To choose the source register group (SRC RGP) and the source register (SOURCE REG), refer to the table "Register Selection Codes" on page A-17.

To choose the destination register group (DST RGP) and the destination register (DEST REG), refer to the table "Register Selection Codes" on page A-17.

# Data Memory Overlay Register Update

### Syntax

DMOVLAY = <data>; reg = DMOVLAY; data:<constant>

Permiss	ible dregs		Permissible re	egs
AX0	MX0	SI	SB	CNTR
AX1	MX1	SE	РХ	OWRCNTR (write only)
AY0	MY0	SR1	ASTAT	RX0
AY1	MY1	SR0	MSTAT	RX1
AR	MR2		IMASK	TX0
	MR1		ICNTL	TX1
	MR0		I0-I7	IFC (write only)
			M0-M7	PMOVLAY
			L0-L7	

#### Permissible constants:

1,2	ADSP-2184 and ADSP-2186 processors only
0,1,2	ADSP-2181, ADSP-2183, and ADSP-2185 processors only
0,1,2,4,5	ADSP-2187 processors only
0,1,2,4,5,6,7	ADSP-2189 processors only
0,1,2,4,5,6,7,8	ADSP-2188 processor only

## **MISC Instructions**

## Example

```
DMOVLAY = 1; /* Write to dmovlay register */
/* Read from dmovlay register into axO register */
AXO = DMOVLAY;
DMOVLAY = PMOVLAY; /* Write to DMOVLAY from PMOVLAY */
DM(0x0000) = DMOVLAY; /* Write DMOVLAY to data memory */
```

## Description

The DMOVLAY write instruction switches the context of the hardware data memory overlay region to the specific region specified by the permissible data value written to the DMOVLAY register. The DMOVLAY read instruction moves the value from the DMOVLAY register into one of the permissible registers listed above.

Status Generated

No status bits affected.

Instruction Format

Read/Write Data Memory (Immediate Address), Instruction Type 3:

23	22	21	20	19 18	17 16 15 14 13 12 11 10 9 8 7 6 5 4	3 2	1	0
1	0	0	D	RGP	ADDR	REG		

Load Non-data Register Immediate, Instruction Type 7:

23	22	21	20	19 18	3	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	1	1	RGP		DA	TA													RE	G		

Load	Non-data	Register	Immediate.	Instruction	Type 1	17:
Loau	1 ton data	register	mineurate,	motruction	Type.	1/•

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	1	1	0	1	0	0	0	0	DS' RG	T P	SR RG	C SP	DE Re	EST G			SC RE	UR G	CE	

To choose the source register group (SRC RGP) and the source register (SOURCE REG), refer to the table "Register Selection Codes" on page A-17.

To choose the destination register group (DST RGP) and the destination register (DEST REG), refer to the table "Register Selection Codes" on page A-17.

## **MISC Instructions**

# **Modify Address Register**

Syntax

MODIFY	(	I 0 I 1 I 2 I 3	,	M0 M1 M2 M3	);
		I4 I5 I6 I7		M4 M5 M6 M7	

Example

MODIFY (I1, M1);

## Description

Add the selected M register (Mn) to the selected I register (Im), then process the modified address through the modulus logic with buffer length as determined by the  $\bot$  register corresponding to the selected I register ( $\bot$ m), and store the resulting address pointer calculation in the selected I register. The I register is modified as if an indexed memory address were taking place, but no actual memory data transfer occurs. For linear (for example, non-circular) indirect addressing, the L register corresponding to the I register used must be set to zero.

The selection of the I and M registers is constrained to registers within the same Data Address Generator: selection of I0-I3 in Data Address Generator #1 constrains selection of the M registers to M0-M3. Similarly, selection of I4-I7 constrains the M registers to M4-M7.

## Status Generated

No status bits affected.

Instruction Format

Modify Address Register, Instruction Type 21:

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	1	0	0	1	0	0	0	0	0	0	0	0	0	0	0	G	Ι		М	

G specifies which Data Address Generator is selected. The I and M registers specified must be from the same DAG, separated by the gray bar above. I specifies the I register (depends on which DAG is selected by the G bit). M specifies the M register (depends on which DAG is selected by the G bit).

See Also

- "DAG Selection Codes" on page A-15
- "Index Register Selection Codes" on page A-15
- "Modify Register Selection Codes" on page A-16

# No Operation

Syntax

NOP;

Description

No operation occurs for one cycle. Execution continues with the instruction following the NOP instruction.

Status Generated

No status bits affected.

Instruction Format

No operation, Instruction Type 30, as shown below:

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Multifunction instructions are:

- "Computation With Memory Read" on page 4-172
- "Computation With Register-to-Register Move" on page 4-178
- "Computation With Memory Write" on page 4-183
- "Data and Program Memory Read" on page 4-188
- "ALU/MAC With Data and Program Memory Read" on page 4-190

## **Computation With Memory Read**

Syntax

<alu> <mac> <shift></shift></mac></alu>	, dreg =	DM (	I 0 I 1 I 2 I 3	,	M0 M1 M2 M3	)	;
			I4 I5 I6 I7	,	M4 M5 M6 M7		
		PM (	I 4 I 5 I 6 I 7	,	M4 M5 M6 M7	)	

Permissible dregs

AX0	MX0	SI
AX1	MX1	SE
AY0	MY0	SR0
AY1	MY1	SR1
AR	MR0	
	MR1	
	MR2	

# Description

Perform the designated arithmetic operation and data transfer. The read operation moves the contents of the source to the destination register. The addressing mode when combining an arithmetic operation with a memory read is register indirect with post-modify. For linear (for example, non-circular) indirect addressing, the L register corresponding to the I register used must be set to zero. The contents of the source are always right-justified in the destination register.

The computation must be unconditional. All ALU, MAC and Shifter operations are permitted except Shift Immediate and ALU DIVS and DIVQ instructions.

The fundamental principle governing multifunction instructions is that registers (and memory) are read at the beginning of the processor cycle and written at the end of the cycle. The normal left-to-right order of clauses (computation first, memory read second) is intended to imply this. In fact, you may code this instruction with the order of clauses reversed. The assembler produces a warning, but the results are identical at the opcode level. If you turn off semantics checking in the assembler (using the -s switch) the warning is not issued.

Because of the read-first, write-second characteristic of the processor, using the same register as source in one clause and a destination in the other is legal. The register supplies the value present at the beginning of the cycle and is written with the new value at the end of the cycle. For example,

(1) AR = AXO + AYO, AXO = DM (IO, MO);

is a legal version of this multifunction instruction and is not flagged by the assembler. Reversing the order of clauses, as in

(2) AXO = DM (IO, MO), AR = AXO + AYO;

results in an assembler warning, but assembles and executes exactly as the first form of the instruction. Note that reading example (2) from left to right may suggest that the data memory value is loaded into AX0 and then used in the computation, all in the same cycle. In fact, this is not possible. The left-to-right logic of example (1) suggests the operation of the instruction more closely. Regardless of the apparent logic of reading the instruction from left to right, the read-first, write-second operation of the processor determines what actually happens.

Using the same register as a destination in both clauses, however, produces an indeterminate result and should not be done. The assembler issues a warning unless semantics checking is turned off. Regardless of whether or not the warning is produced, however, this practice is not supported.

The following, therefore, is illegal and not supported, even though assembler semantics checking produces only a warning:

(3) AR = AXO + AYO, AR = DM (IO, MO); Illegal!

Status Generated

(See Table 4-11 on page 4-30 for register notation)

All status bits are affected in the same way as for the single function versions of the selected arithmetic operation.

#### <ALU> operation

ASTAT:	7	6	5	4	3	2	1	0
	SS	MV	AQ	AS	AC	AV	AN	AZ
	-	-	-	*	*	*	*	*

- AZ Set if result equals zero. Cleared otherwise.
- AN Set if result is negative. Cleared otherwise.
- AV Set if an overflow is generated. Cleared otherwise.
- AC Set if a carry is generated. Cleared otherwise.
- AS Affected only when executing the Absolute Value operation (ABS). Set if the source operand is negative.

#### <MAC> operation

ASTAT	7	6	5	4	3	2	1	0
	SS	MV	AQ	AS	AC	AV	AN	AZ
	-	*	-	-	-	-	-	-

MV Set if the accumulated product overflows the lower-order 32 bits of the MR register. Cleared otherwise.

## <SHIFT> operation

ASTAT	7	6	5	4	3	2	1	0
	SS	MV	AQ	AS	AC	AV	AN	ΑZ
	*	-	-	-	-	-	-	-

SS Affected only when executing the EXP operation; set if the source operand is negative. Cleared if the number is positive.

#### Instruction Format

#### ALU/MAC operation with Data Memory Read, Instruction Type 4:

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	1	1	G	0	Ζ	AN	ſF				Yop	)	Xoj	р		Dr	eg			Ι		М	

#### ALU/MAC operation with Program Memory Read, Instruction Type 5:

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	1	0	1	0	Ζ	AN	1F				Yop	)	Xoj	p		Dr	eg			Ι		М	

#### Shift operation with Data Memory Read, Instruction Type 12:

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	1	0	0	1	G	0	SF				Xoj	р		Dr	eg			Ι		М	

#### Shift operation with Program Memory Read, Instruction Type 13:

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	1	0	0	0	1	0	SF				Xoj	р		Dr	eg			Ι		М	

Ζ:	Result register	Dreg:	Destination register
SF:	Shifter operation	AMF:	ALU/MAC operation
Yop:	Y operand	Xop:	X operand
G:	Data Address Generator	Ι:	Indirect address register
М:	Modify register		

## See Also

- "DREG Selection Codes" on page A-12
- "ALU/MAC Result Register Codes" on page A-22
- "Shifter Function Codes" on page A-18
- "DAG Selection Codes" on page A-15
- "Index Register Selection Codes" on page A-15
- "Modify Register Selection Codes" on page A-16
- "X Operand Codes" on page A-21
- "Y Operand Codes" on page A-21
- "AMF Function Codes" on page A-9

# **Computation With Register-to-Register Move**

#### Syntax

<ALU> ,dreg =dreg; <MAC> <SHIFT>

#### Permissible dregs

AX0	MX0	SI
AX1	MX1	SE
AY0	MY0	SR0
AY1	MY1	SR1
AR	MR0	
	MR1	
	MR2	

#### Description

Perform the designated arithmetic operation and data transfer. The contents of the source are always right-justified in the destination register after the read.

The computation must be unconditional. All ALU, MAC and Shifter operations are permitted except Shift Immediate and ALU DIVS and DIVQ instructions.

The fundamental principle governing multifunction instructions is that registers (and memory) are read at the beginning of the processor cycle and written at the end of the cycle. The normal left-to-right order of clauses (computation first, register transfer second) is intended to imply this. In fact, you may code this instruction with the order of clauses reversed. The assembler produces a warning, but the results are identical at the opcode level. If you turn off semantics checking in the assembler (-s switch) the warning is not issued.

Because of the read-first, write-second characteristic of the processor, using the same register as source in one clause and a destination in the other is legal. The register supplies the value present at the beginning of the cycle and is written with the new value at the end of the cycle.

For example,

(1) AR = AXO + AYO, AXO = MR1;

is a legal version of this multifunction instruction and is not flagged by the assembler. Reversing the order of clauses, as in

(2) AXO = MR1, AR = AXO + AYO;

results in an assembler warning, but assembles and executes exactly as the first form of the instruction. Note that reading example (2) from left to right may suggest that the MR1 register value is loaded into AX0 and then AX0 is used in the computation, all in the same cycle. In fact, this is not-possible. The left-to-right logic of example (1) suggests the operation of the instruction more closely. Regardless of the apparent logic of reading the instruction from left to right, the read-first, write-second operation of the processor determines what actually happens.

Using the same register as a destination in both clauses, however, produces an indeterminate result and should not be done. The assembler issues a warning unless semantics checking is turned off. Regardless of whether or not the warning is produced, however, this practice is not supported. The following, therefore, is illegal and not supported, even though assembler semantics checking produces only a warning:

(3) AR = AXO + AYO, AR = MR1; Illegal!

Status Generated

(See Table 4-11 on page 4-30 for register notation)

All status bits are affected in the same way as for the single function versions of the selected arithmetic operation.

<ALU> operation

ASTAT :	7	6	5	4	3	2	1	0
	SS	MV	AQ	AS	AC	AV	AN	ΑZ
	-	-	-	*	*	*	*	*

AZ	Set if result	equals zero.	Cleared	otherwise.
----	---------------	--------------	---------	------------

- AN Set if result is negative. Cleared otherwise.
- AV Set if an overflow is generated. Cleared otherwise.
- AC Set if a carry is generated. Cleared otherwise.
- AS Affected only when executing the Absolute Value operation (ABS). Set if the source operand is negative.

## <MAC> operation

ASTAT:	7	6	5	4	3	2	1	0
	SS	MV	AQ	AS	AC	AV	AN	ΑZ
	-	*	-	-	-	-	-	-

MV Set if the accumulated product overflows the lower-order 32 bits of the MR register. Cleared otherwise.

#### <SHIFT> operation

ASTAT	7	6	5	4	3	2	1	0
	SS	MV	AQ	AS	AC	AV	AN	AZ
	*	-	-	-	-	-	-	-

Affected only when executing the EXP operation; set if the source operand is negative. Cleared if the number is positive.

ALU/MAC operation with Data Register Move, Instruction Type 8:

23	22	21	20	19	18	17 16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	1	0	1	Ζ	AMF				Yop		Xoj	2		Dr	eg d	est		Dr	eg so	ourc	e

Shift operation	with Data Register N	Move, Instruction Type 14:
-----------------	----------------------	----------------------------

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	1	0	0	0	0	0	SF				Xop	2		Dr	eg d	est		Dr	eg s	ourc	e

Ζ:	Result register	Dreg:	Data register
SF:	Shifter operation	AMF:	ALU/MAC operation
Yop:	Y operand	Xop:	X operand

## See Also

- "DREG Selection Codes" on page A-12
- "ALU/MAC Result Register Codes" on page A-22
- "Shifter Function Codes" on page A-18
- "X Operand Codes" on page A-21
- "Y Operand Codes" on page A-21
- "AMF Function Codes" on page A-9

# **Computation With Memory Write**

## Syntax

DM (	I 0 I 1 I 2 I 3	,	M0 M1 M2 M3		)	= dreg,	<alu> <mac> <shift></shift></mac></alu>	;
	I 4 I 5 I 6 I 7		M4 M5 M6 M7	-				
PM (	I 4 I 5 I 6 I 7	,	M4 M5 M6 M7		)			

#### Permissible dregs

AX0	MX0	SI
AX1	MX1	SE
AY0	MY0	SR0
AY1	MY1	SR1
AR	MR0	
	MR1	
	MR2	

## Description

Perform the designated arithmetic operation and data transfer. The write operation moves the contents of the source to the specified memory location. The addressing mode when combining an arithmetic operation with a memory write is register indirect with post-modify.

For linear (non-circular) indirect addressing, the L register corresponding to the I register used must be set to zero. The contents of the source are always right-justified in the destination register. The computation must be unconditional. All ALU, MAC and Shifter operations are permitted except Shift Immediate and ALU DIVS and DIVQ instructions.

The fundamental principle governing multifunction instructions is that registers (and memory) are read at the beginning of the processor cycle and written at the end of the cycle.

## Status Generated (See Table 4-11 on page 4-30 for register notation)

All status bits are affected in the same way as for the single function versions of the selected arithmetic operation.

## <ALU> operation

ASTAT	7	6	5	4	3	2	1	0
	SS	MV	AQ	AS	AC	AV	AN	ΑZ
	-	-	-	*	*	*	*	*

AZ Set if result equals zero. Cleared otherwise.

AN Set if result is negative. Cleared otherwise.

AV Set if an overflow is generated. Cleared otherwise.

## Instruction Set

- AC Set if a carry is generated. Cleared otherwise.
- AS Affected only when executing the Absolute Value operation (ABS). Set if the source operand is negative.

#### <MAC> operation

ASTAT	7	6	5	4	3	2	1	0
	SS	MV	AQ	AS	AC	AV	AN	ΑZ
	-	*	-	-	-	-	-	-

MV Set if the accumulated product overflows the lower-order 32 bits of the MR register. Cleared otherwise.

#### <SHIFT> operation

ASTAT	7	6	5	4	3	2	1	0
	SS	MV	AQ	AS	AC	AV	AN	AZ
	*	-	-	-	-	-	-	-

SS Affected only when executing the EXP operation; set if the source operand is negative. Cleared if the number is positive.

#### Instruction Format

#### ALU/MAC operation with Data Memory Write, Instruction Type 4:

23	22	21	20	19	18	17 16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	1	1	G	1	Ζ	AMF				Yop		Xoj	p		Dr	eg			Ι		М	

#### ALU/MAC operation with Program Memory Write, Instruction Type 5:

23	22	21	20	19	18	17 16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	1	0	1	1	Ζ	AMF				Yop	)	Xop	)		Dr	eg			Ι		М	

Shift operation with Data Memory Write, Instruction Type 12:

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	1	0	0	1	G	1	SF				Xoj	р		Dr	eg			Ι		М	

#### Shift operation with Program Memory Write, Instruction Type 13:

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	1	0	0	0	1	1	SF				Xoj	р		Dr	eg			Ι		М	

Ζ:	Result register	Dreg:	Destination register
SF:	Shifter operation	AMF:	ALU/MAC operation
Yop:	Y operand	Хор:	X operand
Ι:	Indirect address register	М	Modify register

G: Data Address Generator; I and M registers must be from the same DAG, as separated by the gray bar in the Syntax description.

#### See Also

- "DREG Selection Codes" on page A-12
- "ALU/MAC Result Register Codes" on page A-22
- "Shifter Function Codes" on page A-18
- "DAG Selection Codes" on page A-15

- "Index Register Selection Codes" on page A-15
- "Modify Register Selection Codes" on page A-16
- "X Operand Codes" on page A-21
- "Y Operand Codes" on page A-21
- "AMF Function Codes" on page A-9

## Data and Program Memory Read

Syntax

AX0	= DM(	10	,	M0	)	AY0	= PM(	I4	,	M4	);
AX1		Ι1		M1		AY1		15		M5	
MX0		12		M2		MY0		16		M6	
MX1		I3		M3		MY1		I7		M7	

## Description

Perform the designated memory reads, one from data memory and one from program memory. Each read operation moves the contents of the memory location to the destination register. For this double data fetch, the destinations for data memory reads are the X registers in the ALU and the MAC, and the destinations for program memory reads are the Y registers. The addressing mode for this memory read is register indirect with post-modify. For linear (non-circular) indirect addressing, the L register corresponding to the I register used must be set to zero. The contents of the source are always right-justified in the destination register.

A multifunction instruction requires three items to be fetched from memory: the instruction itself and two data words. No extra cycle is needed to execute the instruction as long as only one of the fetches is from external memory.

If two off-chip accesses are required, however—the instruction fetch and one data fetch, for example, or data fetches from both program and data memory—then one overhead cycle occurs. In this case the program memory access occurs first, then the data memory access. If three off-chip accesses are required—the instruction fetch as well as data fetches from both program and data memory—then two overhead cycles occur.

Status Generated
No status bits affected.

Instruction Format

ALU/MAC with Data and Program Memory Read, Instruction Type 1:

1 1 PD DD AMF 0 0 0 0 0 PM DM DM DM	23	22	21 20	19 18	17 16 15	14 13	12	11	10	9	8	7	6	5	4	3	2	1	0
	1	1	PD	DD	AMF		0	0	0	0	0	PM I		DN M	М	DN I	Л	DN M	Λ

AMF specifies the ALU or MAC function. In this case, AMF = 00000, designating a no-operation for the ALU or MAC function.

PD:	Program Destination register	DD:	Data Destination register
AMF:	ALU/MAC operation	Ι:	Indirect address register
М:	Modify register		

## See Also

- "Program Memory Destination Codes" on page A-16
- "Data Memory Destination Codes" on page A-12
- "Index Register Selection Codes" on page A-15
- "Modify Register Selection Codes" on page A-16

## ALU/MAC With Data and Program Memory Read

Syntax

<alu></alu>	,	AX0	= DM(	10	,	M0	),	AY0	=PM(	I4	,	M4	);
<mac></mac>		AX1		I1		M1		AY1		15		M5	
		MX0		I2		M2		MY0		16		M6	
		MX1		13		M3		MY1		I7		M7	

## Description

This instruction combines an ALU or a MAC operation with a data memory read and a program memory read. The read operations move the contents of the memory location to the destination register. For this double data fetch, the destinations for data memory reads are the X registers in the ALU and the MAC, and the destinations for program memory reads are the Y registers. The addressing mode is register indirect with post-modify. For linear (non-circular) indirect addressing, the L register corresponding to the I register used must be set to zero. The contents of the source are always right-justified in the destination register after the read.

A multifunction instruction requires three items to be fetched from memory: the instruction itself and two data words. No extra cycle is needed to execute the instruction as long as only one of the fetches is from external memory.

If two off-chip accesses are required such as the instruction fetch and one data fetch or data fetches from both program and data memory, then one overhead cycle occurs. In this case, the program memory access occurs first, followed by the data memory access. If three off-chip accesses are required such as the instruction fetch and data fetches from both program and data memory, then two overhead cycles occur. The computation must be unconditional. All ALU and MAC operations are permitted except the DIVS and DIVQ instructions. The results of the computation must be written into the R register of the computational unit: ALU results to AR, MAC results to MR.

The fundamental principle governing multifunction instructions is that registers (and memory) are read at the beginning of the processor cycle and written at the end of the cycle. The normal left-to-right order of clauses (computation first, memory reads second) is intended to imply this. In fact, you may code this instruction with the order of clauses altered. The assembler produces a warning, but the results are identical at the opcode level. If you turn off semantics checking in the assembler (-s switch), the warning is not issued.

The same data register may be used as a source for the arithmetic operation and as a destination for the memory read. The register supplies the value present at the beginning of the cycle and is written with the value from memory at the end of the cycle.

For example,

```
(1) MR=MR+MX0*MY0(UU), MX0=DM(I0, M0), MY0=PM(I4,M4);
```

is a legal version of this multifunction instruction and is not flagged by the assembler. Changing the order of clauses, as in

```
(2) MXO=DM(IO, MO), MYO=PM(I4,M4), MR=MR+MXO*MYO(UU);
```

results in an assembler warning, but assembles and executes exactly as the first form of the instruction. Note that reading example (2) from left to right may suggest that the data memory value is loaded into MX0 and MY0 and subsequently used in the computation, all in the same cycle. In fact, this is not possible. The left-to-right logic of example (1) suggests the operation of the instruction more closely. Regardless of the apparent logic of reading the instruction from left to right, the read-first, write-second operation of the processor determines what actually happens.

## **Multifunction Instructions**

#### Status Generated

#### (See Table 4-11 on page 4-30 for register notation)

All status bits are affected in the same way as for the single operation version of the selected arithmetic operation.

#### <ALU> operation

ASTAT	7	6	5	4	3	2	1	0							
	SS	MV	AQ	AS	AC	AV	AN	AZ							
	-	-	-	*	*	*	*	*							
AZ	Set if result equals zero. Cleared otherwise.														
AN	Set if	result is neg	gative. Clea	ared othe	rwise.										
AV	Set if a	an overflow	is generat	ed. Clear	ed otherw	ise.									
AC	Set if a	a carry is ge	enerated. C	Cleared ot	herwise.										
AS	Affecte source	d only whe operand is	n executin negative.	g the Abs	olute Valu	ie operatio	on (ABS). S	et if the							

#### <MAC> operation

ASTAT	7	6	5	4	3	2	1	0
	SS	MV	AQ	AS	AC	AV	AN	AZ
	-	*	-	-	-	-	-	-

MV Set if the accumulated product overflows the lower-order 32 bits of the MR register. Cleared otherwise.

#### Instruction Format

## ALU/MAC with Data and Program Memory Read, Instruction Type 1:

23	22	21 20	19 18	17 16 15 14 13	12 11	10 9 8	7 6	5 4	3 2	1 0
1	1	PD	DD	AMF	Yop	Хор	РМ	PM	DM	DM
							Ι	М	Ι	М

PD:	Program Destination register	DD:	Data Destination register
AMF:	ALU/MAC operation	Μ:	Modify register
Yop:	Y operand	Xop:	X operand
I:	Indirect address register		

#### See Also

- "Program Memory Destination Codes" on page A-16
- "Data Memory Destination Codes" on page A-12
- "Index Register Selection Codes" on page A-15
- "Modify Register Selection Codes" on page A-16
- "X Operand Codes" on page A-21
- "Y Operand Codes" on page A-21
- "AMF Function Codes" on page A-9

## **Multifunction Instructions**

# **A INSTRUCTION CODING**

This appendix gives a summary of the complete instruction set of the ADSP-218x processors. This section is divided into two sections:

- "Opcode Definitions" on page A-2 This section provides the opcode bits listed by type number. Any instruction codes not shown are reserved for future use.
- "Opcode Mnemonics" on page A-9 This section is an alphabetic listing that describes the values for each opcode mnemonic.

## **Opcode Definitions**

This section provides the definitions of opcode bits listed by type number.

Table A-1. Type 1: ALU / MAC With Data and Program Memory Read

				<u> </u>												0						
23	22	21 2	20	19	18	17	16	15	14	13	12	11	10 9	8	7	6	5	4	3	2	1	0
1	1	PD		DD		AM	F				Yop	)	Хор		PN I	Л	DI M	M	DI I	M	DI M	М

#### Table A-2. Type 2: Data Memory Write (Immediate Data)

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	0	1	G	Data	ı															Ι		М	

#### Table A-3. Type 3: Read / Write Data Memory (Immediate Address)

				1											· ·							<i>.</i>	
23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	0	0	D	RG	Р	AD	DR													RF	G		

## Table A-4. Type 4: ALU / MAC With Data Memory Read / Write

23	22	21	20	19	18	17 16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	1	1	G	D	Ζ	AMF				Yop		Xoj	р		Dr	eg			Ι		М	

## Table A-5. Type 5: ALU / MAC With Program Memory Read / Write

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	1	0	1	D	Ζ	AMI	F				Yop	)	Xoj	þ		Dr	eg			Ι		М	

#### Table A-6. Type 6: Load Data Register Immediate

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	1	0	0	DA	TA															DF	REG		

Table A-7. Type 7: Load Non-Data Register Immediate

23	22	21	20	19 18	17 16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	1	1	RGP	DATA													RF	ËG		

Table A-8. Type 8: ALU / MAC With Internal Data Register Move

23	22	21	20	19	18	17 16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	1	0	1	Ζ	AMF				Yop	)	Xoj	р		Dr	eg d	est		Dr	eg so	ourc	e

## Table A-9. Generate ALU Status (NONE = <ALU>)

23	22	21	20	19	18	17 16 15	14 13	12 11	10 9	8	7	6	5	4	3	2	1	0
0	0	1	0	1	0	AMF*		Yop	Хор		1	0	1	0	1	0	1	0

\* ALU codes only.

xop	• * y	op																				
23	22	21	20	19	18	17	16	15	14	13	12	11	10 9	8	7	6	5	4	3	2	1	0
0	0 1 0 0 Z AMF Yop Xop 0 </td																					
xop	p * xop 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0   0 1 0 0 Xop 0 0 1 COND																					
23	22	21	20	19	18	17	16	15	14	13	12	11	10 9	8	7	6	5	4	3	2	1	0
0	op * xop   :3 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0   :0 0 1 0 0 Z AMF   0 0 Xop   0 0 Xop   0 0 Xop																					
xop	AN	ID/	OR/	XOI	R co	nsta	nt															
ВO	, СС	, an	dΥ	' spe	cify	the	cons	stant	acc	ordi	ng tł	ne ta	able sho	wn a	t th	e en	d of	this	app	endi	ix.	
23	22	21	20	19	18	17	16	15	14	13	12	11	10 9	8	7	6	5	4	3	2	1	0
0	0	1	0	0	Ζ	AM	IF				YY		Хор		CC	,	BC	)	CC	DNE	)	
PA	SS c	onst	ant (	(con	stan	t ≠ 0	),1, -	-1)														
23	22	21	20	19	18	17	16	15	14	13	12	11	10 9	8	7	6	5	4	3	2	1	0
0	0	1	0	0	Ζ	AM	IF				YY		Хор		CC	2	BC	)	CC	ONE	)	

Table A-11. Type 10: Conditional Jump (Immediate Address)

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	1	1	S	AD	DR													CC	DNE	)	

Table A-12. Type 11: Do Until

23	22	21	20	19	18	17 10	5 15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	1	0	1	Addr													TF	ERM		

#### Table A-13. Type 12: Shift With Data Memory Read / Write

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	1	0	0	1	G	D	SF				Xoj	р		Dr	eg			Ι		М	

#### Table A-14. Type 13: Shift With Program Memory Read / Write

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	1	0	0	0	1	D	SF				Xoj	р		Dr	eg			Ι		М	

#### Table A-15. Type 14: Shift With Internal Data Register Move

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	1	0	0	0	0	0	SF				Xoj	р		Dr	eg d	est		Dr	eg s	ourc	e

#### Table A-16. Type 15: Shift Immediate

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	1	1	1	1	0	SF				Xoj	р		<ex< td=""><td>xp&gt;</td><td></td><td></td><td></td><td></td><td></td><td></td></ex<>	xp>						

Table A-17. Type 16: Conditional Shift

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	1	1	1	0	0	SF				Xoj	р		0	0	0	0	CC	ONE	)	

Table A-18. Type 17: Internal Data Move

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	1	1	0	1	0	0	0	0	DS' RG	T P	SR RG	C SP	DF RE	EST G			SC RE	UR G	CE	

Table A-19. Type 18: Mode Control

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	1	1	0	0	ΤI		ММ		AS		0	L	BR	L	SR		GN	M	0	0

Table A-20. Mode Control Codes

Mode	Meaning
SR	Secondary register bank
BR	Bit-reverse mode
OL	ALU overflow latch mode
AS	AR register saturate mode
ММ	Alternate multiplier placement mode
GM	GO mode; enable means execute internal code, if possible.
TI	Timer enable

Code	Meaning
11	Enable mode
10	Disable mode
01	No change
0 0	No change

Table A-21. Type 19: Conditional Jump (Indirect Address)

22	22	21	20	10	10	17	17	15	1 /	12	10	11	10	0	0	7	(	5	6	2	2	1	0
23	22	21	20	19	10	1/	10	1)	14	13	12	11	10	9	ð	/	6	)	4	3	Z	1	0
0	0	0	0	1	0	1	1	0	0	0	0	0	0	0	0	Ι		0	S	CC	DND		

Table A-22. Type 20: Conditional Return

_					1																		
23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	1	0	1	0	0	0	0	0	0	0	0	0	0	0	0	Т	CC	ONE	)	

Table A-23. Type 21: Modify Address Register

												-											
23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	1	0	0	1	0	0	0	0	0	0	0	0	0	0	0	G	Ι		М	

Table A-24. Type 22: Reserved

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	CC	DNE	)	

Table A-25. Type 23: DIVQ

23	22	21	20	19	18	17	16	15	14	13	12	11	10 9	8	7	6	5	4	3	2	1	0
0	0	0	0	0	1	1	1	0	0	0	1	0	Хор		0	0	0	0	0	0	0	0

Table A-26. Type 24: DIVS

23	22	21	20	19	18	17	16	15	14	13	12 11	10 9	8	7	6	5	4	3	2	1	0
0	0	0	0	0	1	1	0	0	0	0	Yop	Хор		0	0	0	0	0	0	0	0

Table A-27. Type 25: Saturate MR

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	0	1	0	1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

#### Table A-28. Type 26: Stack Control

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6 5	5 4	4	3	2	1	0
0	0	0	0	0	1	0	0	0	0	0	0	0	0	0	0	0	Iq	]	Рр	Lp	Ср	Spp	

#### Table A-29. Type 27: Call or Jump on Flag In

					1									<u> </u>									
23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	0	0	1	1	Ado	lress	6										Ad	dr	FIC	S
								^ 1	2 LS	SBs										^ 2	MS	SBs	

Table A-30. Type 28: Modify Flag Out

-																							
23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	0	0	1	0	0	0	0	0	FO		FO	)	FO	)	FC	)	CC	ONE	)	
												^ F	L2	^ F	L1	^ F	L0	^ I	FLAC	G_C	UT		

#### Table A-31. Type 29: I/O Memory Space Read/Write

23	22	21	20	19	18	17	16	15	14 13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	0	0	0	1	D	ADDR										DF	REG		

Table A-32. Type 30: No Operation (NOP)

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Table A-33. Type 31: Idle

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	0	0	1	0	1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Table A-34. Type 31: Idle (n) (Slow Idle)

23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	0	0	1	0	1	0	0	0	0	0	0	0	0	0	0	0	D٧	7		

## **Opcode Mnemonics**

This section is an alphabetic listing that describes the values for each opcode mnemonic.

## AMF ALU / MAC Function Codes

0 0 0 0 0 0 No Operation

Coc	le				Function	Mnemonic
0	0	0	0	1	X * Y	(RND)
0	0	0	1	0	MR + X * Y	(RND)
0	0	0	1	1	MR – X * Y	(RND)
0	0	1	0	0	X * Y	(SS) Clear when y = 0
0	0	1	0	1	X * Y	(SU)
0	0	1	1	0	X * Y	(US)
0	0	1	1	1	X * Y	(UU)
0	1	0	0	0	MR + X * Y	(SS)
0	1	0	0	1	MR + X * Y	(SU)
0	1	0	1	0	MR + X * Y	(US)
0	1	0	1	1	MR + X * Y	(UU)
0	1	1	0	0	MR – X * Y	(SS)
0	1	1	0	1	MR – X * Y	(SU)
0	1	1	1	0	MR – X * Y	(US)
0	1	1	1	1	MR – X * Y	(UU)

#### Table A-35. AMF Function Codes

Co	de				Function	
1	0	0	0	0	Y	Clear when y = 0
1	0	0	0	1	Y + 1	PASS 1 when $y = 0$
1	0	0	1	0	X + Y + C	
1	0	0	1	1	X + Y	X when y = 0
1	0	1	0	0	NOT Y	
1	0	1	0	1	– Y	
1	0	1	1	0	X – Y + C	-1 X + C $-1$ when y = 0
1	0	1	1	1	X – Y	
1	1	0	0	0	Y – 1	PASS $-1$ when $y = 0$
1	1	0	0	1	Y – X	-X when $y = 0$
1	1	0	1	0	Y – X + C	-1 $-X + C - 1$ when y = 0
1	1	0	1	1	NOT X	
1	1	1	0	0	X AND Y	
1	1	1	0	1	X OR Y	
1	1	1	1	0	X XOR Y	
1	1	1	1	1	ABS X	

Table A-36. ALU Function Codes

## BO

See "ALU/MAC Constant Codes" on page A-22.

## CC

See "ALU/MAC Constant Codes" on page A-22.

## **COND Status Condition Codes**

Code	Description	Condition
0 0 0 0	Equal	EQ
0 0 0 1	Not equal	NE
0 0 1 0	Greater than	GT
0 0 1 1	Less than or equal	LE
0 1 0 0	Less than	LT
0 1 0 1	Greater than or equal	GE
0 1 1 0	ALU Overflow	AV
0 1 1 1	NOT ALU Overflow	NOT AV
1 0 0 0	ALU Carry	AC
1 0 0 1	Not ALU Carry	NOT AC
1 0 1 0	X input sign negative	NEG
1 0 1 1	X input sign positive	POS
1 1 0 0	MAC Overflow	MV
1 1 0 1	Not MAC Overflow	NOT MV
1 1 1 0	Not counter expired	NOT CE
1 1 1 1	Always true	

Table A-37. Status Condition Codes

## **CP** Counter Stack Pop Codes

Table A-38. Counter Stack Pop Codes

Code	Description
0	No change
1	Рор

## **D** Direction Codes

Table A-39. Memory Access Direction Codes

Code	Description
0	Read
1	Write

## DD Double Data Fetch Data Memory Destination Codes

Table A-40. Data Memory Destination Codes

Code	Register
0 0	AX0
0 1	AX1
1 0	MX0
11	MX1

## **DREG Data Register Codes**

Table A-41. DREG Selection Codes

Code	Register
0 0 0 0	AX0
0 0 0 1	AX1
0 0 1 0	MX0
0 0 1 1	MX1
0 1 0 0	AY0
0 1 0 1	AY1

Code	Register
0 1 1 0	MY0
0 1 1 1	MY1
1 0 0 0	SI
1 0 0 1	SE
1 0 1 0	AR
1 0 1 1	MR0
1 1 0 0	MR1
1 1 0 1	MR2
1 1 1 0	SR0
1 1 1 1	SR1

Table A-41. DREG Selection Codes (Cont'd)

## DV Divisor Codes for Slow Idle Instruction (IDLE (n))

Code	Divisor
0 0 0 0	Normal Idle instruction (Divisor=0)
0 0 0 1	Divisor=16
0 0 1 0	Divisor=32
0 1 0 0	Divisor=64
1 0 0 0	Divisor=128

Table A-42. Slow Idle Divisor Codes

## **FIC FI Condition Codes**

Table A-43. FI Condition Codes

Code	Description	Condition
1	latched FI is 1	FLAG_IN
0	latched FI is 0	NOT FLAG_IN

## FO Control Codes for Flag Output Pins (FO, FL0, FL1, FL2)

Table A-44. FO Condition Codes

Code	Description
0 0	No change
0 1	Toggle
1 0	Reset
1 1	Set

## **G** Data Address Generator Codes

Table A-45. DAG Selection Codes

Code	Address Generator
0	DAG1
1	DAG2

## I Index Register Codes

Table A-46. Index Register Selection Codes

Code	G = 0	G = 1
0 0	IO	I4
0 1	I1	15
1 0	I2	I6
1 1	I3	I7

## LP Loop Stack Pop Codes

Table A-47. Loop Stack Pop Codes

Code	Description
0	No change
1	Рор

## **Opcode Mnemonics**

## **M Modify Register Codes**

Table A-48. Modify Register Selection Codes

Code	G = 0	G = 1
0 0	M0	M4
0 1	M1	M5
1 0	M2	M6
1 1	M3	M7

## PD Dual Data Fetch Program Memory Destination Codes

Table A-49. Program Memory Destination Codes

Code	Register
0 0	AY0
0 1	AY1
1 0	MY0
1 1	MY1

## **PP PC Stack Pop Codes**

Table A-50. PC Stack Pop Codes

Code	Description
0	No change
1	Рор

## **REG Register Codes**

The following table gives the register codes for register groups (RGP) 0, 1, 2 and 3. Codes that are not assigned (-) are reserved.

Code	RGP = 00 (REG0)	RGP = 01 (REG1)	RGP = 10 (REG2)	RGP = 11 (REG3)	
0 0 0 0	AX0	I0	I4	ASTAT	
0 0 0 1	AX1	I1	15	MSTAT	
0 0 1 0	MX0	I2	I6	SSTAT (read only)	
0 0 1 1	MX1	I3	I7	IMASK	
0 1 0 0	AY0	M0	M4	ICNTL	
0 1 0 1	AY1	M1	M5	CNTR	
0 1 1 0	MY0	M2	M6	SB	
0 1 1 1	MY1	M3	M7	РХ	
1 0 0 0	SI	LO	L4	RX0	
1 0 0 1	SE	L1	L5	TX0	
1 0 1 0	AR	L2	L6	RX1	
1 0 1 1	MR0	L3	L7	TX1	
1 1 0 0	MR1	_	-	IFC (write only)	
1 1 0 1	MR2	-	-	OWRCNTR (write only)	
1 1 1 0	SR0	PMOVLAY	_	-	
1 1 1 1	SR1	DMOVLAY	_	-	

Table A-51. Register Selection Codes

## S Jump/Call Codes

Table A-52. Jump and Call Codes

Code	Function
0	Jump
1	Call

## **SF Shifter Function Codes**

Table A-53. Shifter Function Codes

Code	Function	
0 0 0 0	LSHIFT	(HI)
0 0 0 1	LSHIFT	(HI, OR)
0 0 1 0	LSHIFT	(LO)
0 0 1 1	LSHIFT	(LO, OR)
0 1 0 0	ASHIFT	(HI)
0 1 0 1	ASHIFT	(HI, OR)
0 1 1 0	ASHIFT	(LO)
0 1 1 1	ASHIFT	(LO, OR)
1 0 0 0	NORM	(HI)
1 0 0 1	NORM	(HI, OR)
1 0 1 0	NORM	(LO)
1 0 1 1	NORM	(LO, OR)
1 1 0 0	EXP	(HI)
1 1 0 1	EXP	(HIX)
1 1 1 0	EXP	(LO)
1111	Derive Block Exponent	

## SPP Status Stack Push/Pop Codes

Table A-54. Status Stack Push and Pop Codes

Code	Description
0 0	No change
0 1	No change
1 0	Push
1 1	Рор

## T Return Type Codes

Table A-55. Return Type Codes

Code	Return Type
0	Return from subroutine
1	Return from interrupt

## **TERM Termination Codes for DO UNTIL**

Code	Description	Condition
0 0 0 0	Not Equal	NE
0 0 0 1	Equal	EQ
0 0 1 0	Less than or equal	LE
0 0 1 1	Greater than	GT
0 1 0 0	Greater than or equal	GE
0 1 0 1	Less than	LT
0 1 1 0	NOT ALU Overflow	NOT AV
0 1 1 1	ALU Overflow	AV
1 0 0 0	Not ALU Carry	NOT AC
1 0 0 1	ALU Carry	AC
1 0 1 0	X input sign positive	POS
1 0 1 1	X input sign negative	NEG
1 1 0 0	Not MAC Overflow	NOT MV
1 1 0 1	MAC Overflow	MV
1 1 1 0	Counter expired	CE
1 1 1 1	Always	FOREVER

Table A-56. DO UNTIL Termination Codes

## X X Operand Codes

Code	Register	
0 0 0	X0	SI for shifter
0 0 1	X1	invalid for shifter
0 1 0	AR	
0 1 1	MR0	
1 0 0	MR1	
1 0 1	MR2	
1 1 0	SR0	
1 1 1	SR1	

## Y Y Operand Codes

Table A-58.	Y	Operand	Codes
-------------	---	---------	-------

Code	Register
0 0	Y0
0 1	Y1
1 0	F feedback register
1 1	zero

## ΥY

See "ALU/MAC Constant Codes" on page A-22.

## **Opcode Mnemonics**

## Z ALU/MAC Result Register Codes

Table A-59. ALU/MAC Result Register Codes

Code	Return Type	
0	Result register	
1	Feedback register	

## YY, CC, BO ALU / MAC Constant Codes (Type 9)

Constant (hex)	YY	CC	BO	Bit #
0001	00	00	01	bit 0
0002	00	01	01	bit 1
0004	00	10	01	bit 2
0008	00	11	01	bit 3
0010	01	00	01	bit 4
0020	01	01	01	bit 5
0040	01	10	01	bit 6
0080	01	11	01	bit 7
0100	10	00	01	bit 8
0200	10	01	01	bit 9
0400	10	10	01	bit 10
0800	10	11	01	bit 11
1000	11	00	01	bit 12
2000	11	01	01	bit 13
4000	11	10	01	bit 14
8000	11	11	01	bit 15

Table A-60. ALU/MAC Constant Codes

Constant (hex)	YY	CC	BO	Bit #
FFFE	00	00	11	! bit 0
FFFD	00	01	11	! bit 1
FFFB	00	10	11	! bit 2
FFF7	00	11	11	! bit 3
FFEF	01	00	11	! bit 4
FFDF	01	01	11	! bit 5
FFBF	01	10	11	! bit 6
FF7F	01	11	11	! bit 7
FEFF	10	00	11	! bit 8
FDFF	10	01	11	! bit 9
FBFF	10	10	11	! bit 10
F7FF	10	11	11	! bit 11
EFFF	11	00	11	! bit 12
DFFF	11	01	11	! bit 13
BFFF	11	10	11	! bit 14
7 F F F	11	11	11!	! bit 15

Table A-60. ALU/MAC Constant Codes (Cont'd)

## **Opcode Mnemonics**

# I INDEX

## A

absolute value (ABS) 4-15, 4-56, 4-179, 4-184, 4-189, 4-196 Add/Add with carry 4-32 ALU feedback (AF) register 2-7, 4-15, 4-20, 4-45-4-71 ALU input (AX and AY) registers 1-9, 2-1, 2-7, 4-9-4-14, 4-71, 4-117-4-135, 4-160-4-194 ALU instructions 4-31 instruction syntax table 4-14 overview 4-14 summary 4-2, 4-31 ALU result (AR) register 2-7, 4-8, 4-9, 4-10, 4-14-4-66, 4-71-4-78, 4-82, 4-97, 4-117-4-163, 4-178, 4-183 ALU/MAC with data and program memory read 4-194 arithmetic shift 4-97 arithmetic shift immediate 4-112 Arithmetic status (ASTAT) register 2-1, 2-6, 2-17, 4-46, 4-49, 4-64, 4-66, 4-71, 4-94, 4-104, 4-117, 4-128, 4-148, 4-156 arithmetic status (ASTAT) register 2-6

## B

bit manipulation TSTBIT, SETBIT, CLRBIT, TGLBIT 4-45 bit-reverse subroutine 3-21 bitwise logic AND, OR, XOR 4-42 block exponent adjust 4-110

## С

CALL instruction 2-16, 4-6, 4-22, 4-140, 4-142 cascaded biquad IIR filter example 3-7 clear 4-90 CLKOUT 2-8, 4-153 computation units 2-7 with data register move 4-10 with memory read 4-9, 4-176 with memory write 4-10, 4-187 with register to register move 4-182 conditional instructions 1-3 MR saturation 4-94 conventions 1-8 Counter (CNTR) register 2-5, 2-7, 2-15, 4-22, 4-117, 4-128, 4-138, 4-150 customer support 1-7 cycle conditions 4-27

## D

DAG register DAG1 2-2, 4-11, 4-25 DAG2 2-2, 4-11, 4-22 using with Toppstack instruction 4-160 data address generator 4-125, 4-131, 4-173 data address generators 2-2 data and program memory read 4-9, 4-192 data buffer inplaceimag 3-14 inputimag 3-14 twid\_imag 3-14 twid\_real 3-14

data memory DMOVLAY register restoration example 2 - 18Overlay (DMOVLAY) register 2-18 read (direct address) 4-122 read (indirect address) 4-124 write (direct address) 4-128 write (indirect address) 4-130 decrement 4-61 derive exponent 4-106 development process 3-3 tools 1-4 disable (DIS) instruction 2-5, 2-6, 4-25, 4-26, 4-162 interrupt disable 4-165 divide algorithm non-restoring 4-65 divide primitives 4-68 division applications 4-69 divide primitives DIVS and DIVQ 4-63 exceptions 4-68 integer 4-67 negative divisor error 4-68 output formats 4-66 routine using DIVS & DIVQ 4-69 signed 4-66 theory of 4-65 unsigned 4-66 unsigned division error 4-69 DMOVLAY register update instruction 4-169 DO UNTIL instruction 2-5, 4-6, 4-150 DO UNTIL termination codes A-20

## E

enable (ENA) instruction 2-5, 2-6, 4-25, 4-26, 4-162, 4-165 interrupt enable 4-165 examples bit-reverse subroutine 3-21 DMOVLAY register restoration 2-18 IIR filter 3-7 examples (continued) PMOVLAY register restoration 2-18 Radix-2 decimation-in-time FFT 3-13 sine approximation 3-9 single-precision FIR transversal filter 3-5 single-precision matrix multiply 3-11

## F

FFT 3-2 FI pin 4-22, 4-24, 4-142 FIR filter 3-1 transversal filter example 3-5 FO pin 4-25, 4-144

## G

generate ALU status 4-71

#### Η

hardware overlays 2-16

## I

IDLE instruction 2-13, 2-14, 4-6, 4-23, 4-153 IF condition codes table 4-23 IIR filter 3-7 increment 4-59 Index (I) register 2-1, 2-2, 2-4, 2-13, 4-6, 4-8, 4-25, 4-124-4-128, 4-131, 4-172, 4-177, 4-188, 4-192 indirect addressing 2-4 Indirect jumps 2-2 inplaceimag data buffer 3-14 inplacereal data buffer 3-14 inputimag data buffer 3-14 inputreal data buffer 3-14 instruction set list of instructions 4-2 notation table 1-8 overview 4-5 syntax 4-28

integer division 4-67 Interrupt control (ICNTL) register 2-5, 4-117, 4-128 interrupt enable and disable 4-165 Interrupt mask (IMASK) register 2-2, 2-5, 2-6, 2-17, 4-117, 4-128, 4-148, 4-156, 4-165 interrupts 2-5, 2-17 IO space read/write 4-135

## J

JUMP instruction 2-16, 4-138, 4-153 JUMP or CALL on flag in pin 4-142

#### L

Length (L) register 2-2, 2-13, 2-17, 4-124, 4-126, 4-131, 4-134, 4-172, 4-177, 4-188, 4-192, 4-194 Load register immediate 4-119 logical shift 4-100 shift immediate 4-114 loop counts 2-5 loop hardware 2-19

#### Μ

MAC clear 4-90 MAC instructions 4-73 conditions table 4-17 overview 4-16 summary 4-2, 4-73 MAC transfer MR 4-92 memory access (off-chip) 4-27 memory interface 2-9 memory-mapped registers 2-2 MISC instructions 4-155 miscellaneous instructions instructions table 4-25 overview 4-25 miscellaneous instructions (continued) summary 4-4, 4-155 mode control 4-162 mode bits 2-6 Mode status (MSTAT) register 2-6, 2-7, 2-17, 4-117, 4-128, 4-148, 4-156, 4-162 bit table 4-162 Modify (M) register 2-2, 2-4, 2-13, 4-8, 4-25, 4-125, 4-127, 4-131, 4-172, 4-190 Modify address register 4-172 Modify flag out pin 4-144 Move instructions 4-116 overview 4-20 summary 4-3 syntax table 4-20 multifunction instructions overview 4-7 summary 4-4, 4-175 valid combinations table 4-12 Multiplier feedback (MF) register 2-7, 4-90 Multiplier input (MX and MY) registers 2-2, 2-7, 4-7-4-22, 4-74-4-82, 4-117-4-135, 4-160, 4-176-4-195 Multiplier result (MR) register 2-7, 2-15, 4-106, 4-118, 4-119, 4-128, 4-130, 4-160, 4-163, 4-179, 4-183, 4-185, 4-189, 4-195, 4-196 multiply 4-74 with cumulative add 4-78 with cumulative subtract 4-82

#### N

negate 4-52 no operation 4-174 NONE 4-71, A-3 NOP 4-174 normalize 4-103 NOT 4-54 Notation 1-8

#### 0

opcode definitions A-8 mnemonics A-9 opcode bits Generate ALU status A-3 listed by type number A-2 Type 1 ALU / MAC with Data and Program Memory Read A-2 Type 10 Conditional Jump (Immediate Address) A-3 Type 11 Do Until A-4 Type 12 Shift with Data Memory Read / Write A-4 Type 13 Shift with Program Memory Read / Write A-4 Type 14 Shift with Internal Data Register Move A-4 Type 15 Shift Immediate A-4 Type 16 Conditional Shift A-4 Type 17 Internal Data Move A-5 Type 18 Mode Control A-5 Type 19 Conditional Jump (Indirect Address) A-6 Type 2 Data Memory Write (Immediate Data) A-2 Type 20 Conditional Return A-6 Type 21 Modify Address Register A-6 Type 22 Reserved A-6 Type 23 DIVQ A-6

opcode bits (continued) Type 24 DIVS A-6 Type 25 Saturate MR A-7 Type 26 Stack Control A-7 Type 27 Call or Jump on Flag In A-7 Type 28 Modify Flag Out A-7 Type 29 I/O Memory Space Read/Write A-7 Type 3 Read /Write Data Memory (Immediate Address) A-2 Type 30 No Operation (NOP) A-8 Type 31 Idle A-8 Idle (n) (Slow Idle) A-8 Type 4 ALU / MAC with Data Memory Read / Write A-2 Type 5 ALU / MAC with Program Memory Read / Write A-2 Type 6 Load Data Register Immediate A-2 Type 7 Load Non-Data Register Immediate A-2 Type 8 ALU / MAC with Internal Data Register Move A-3 Type 9 Conditional ALU / MAC A-3 opcode values A-9 AMF ALU /MAC function codes A-9 condition codes A-11 counter stack pop codes A-11 DAG register codes A-15 data memory destination codes A-12 data register codes A-12 direction codes A-12

(continued) opcode values divisor codes for slow idle instruction A-14 FI condition codes A-14 FO control codes for flag output pins A-14 index register codes A-15 Jump/Call codes A-18 loop stack pop codes A-15 modify register codes A-16 program memory destination codes A-16 Push/Pop codes A-19 REG register codes A-17 return type codes A-19 shifter function codes A-18 stack pop codes A-16 termination codes for DO UNTIL A-20 X X operand codes A-21 Y Y operand codes A-21 YY, CC, BO ALU / MAC constant codes A-22 Z ALU/MAC result register codes A-22 overlays 2-16 **OWRCNTR 2-5** 

## Р

PASS 4-16, 4-48, 4-71 PC stack 4-157 PMOVLAY register update instruction 4-166 POP CNTR instruction 2-7, 4-26, 4-156 POP LOOP instruction 2-6, 4-26, 4-156 POP STS instruction 2-7, 4-157 processor registers reg and dreg table 4-21 program example 2-10 interrupt routine discussion 2-15 overview 2-1 setup routine discussion 2-13 program flow instructions 4-137 instructions table 4-23 summary 4-4 program memory bus exchange (PX) register 2-8, 4-117, 4-126, 4-134 Overlay (PMOVLAY) registers 2-17, 2-19

program memory *(continued)* PMOVLAY register restoration example 2-18 read (indirect address) 4-126 write (indirect address) 4-133 program sequencer 2-4 programming model overview 3-1 PROM splitter 3-5 PUSH STS instruction 2-7, 4-156, 4-157

## R

Radix-2 decimation-in-time FFT example 3-13 Receive (RX) register 2-8, 2-15, 4-120 Receive frame (RFSDIV) register 2-8 register move 4-117 registers table of registers 2-2 return from interrupt (RTI) instruction 2-7, 4-6, 4-23, 4-24, 4-148, 4-157 return from subroutine (RTS) instruction 2-16, 4-6, 4-23, 4-146, 4-157

## S

Serial clock (SCLKDIV) register 2-8 serial port (SPORT) 4-28 SPORT autobuffering and DMA 4-28 SPORT enable bits 2-9 serial port (SPORT), SPORT0, SPORT1 2-8 Shifter bit (SB) register 2-7, 4-10, 4-18, 4-19, 4 - 110Shifter exponent (SE) register 2-7, 4-18, 4-97, 4-98, 4-100, 4-160 Shifter input (SB) register 4-100, 4-103, 4-110, 4-122, 4-160 Shifter input (SI) register 2-7, 2-15, 4-18, 4-97 Shifter instructions 4-96 summary 4-3, 4-18 Shifter result (SR) register 2-7, 4-100, 4-103, 4-112, 4-114, 4-160 signed division 4-66 simulator 3-5 sine approximation example 3-9

single-precision matrix multiply 3-11 squaring instruction 4-86 operation 4-87 stack control 4-156 stacks 2-6 status register notation 4-30 status bits 2-6 subroutine modules and comment information table 3-2 subtract X-Y/subtract X-Y with borrow 4-35 subtract Y-X/subtract Y-X with borrow 4-39 System status (SSTAT) register 2-6, 4-117, 4-128, 4-158

## Т

Timer Registers TCOUNT 2-8 TPERIOD 2-8 TSCALE 2-8 tools 1-4 TOPPCSTACK instruction 2-6, 4-157, 4-158 Transmit (TX) register 2-8, 2-15, 4-120 twid\_imag data buffer 3-14 twid\_real data buffer 3-14

## U

unsigned division 4-66

#### W

wait states 4-27